YZW1010

01 Wiring and power

01 Wiring and power 02 PC and management 03 Network and a real request 04 Next task and handover

Item	This model
Platform/cellular	MT7628 / 4G Cat 1 / Cat 4 by order
Power input	9–36 V DC; barrel input
Ethernet	2 × 10/100 RJ45
Serial/I/O	1 × RS232 + 1 × RS485

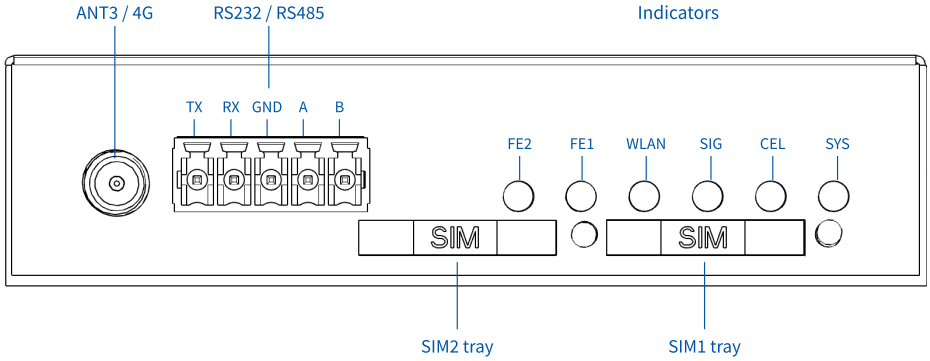


Figure 2-1 Interface panel 1

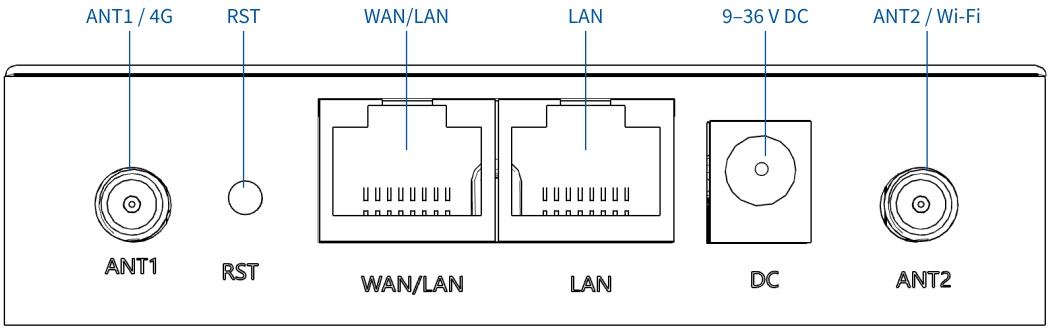


Figure 2-2 Interface panel 2

> RS232 is Serial1; the right A/B RS485 pair is Serial2. Confirm mounting ears against current packing; DIN accessories are not assumed included.

Power off before fitting SIM and matching antennas. Use this model connector/polarity and connect the PC to a confirmed LAN. Obtain the pin map when unclear; do not infer wiring from a similar enclosure.

02 PC and management

Use the site-PC browser, not M2M or the PLC vendor tool. Obtain management URL, scheme/port and credentials from the label, delivery record or administrator. Check records before considering a reset for an unknown address.

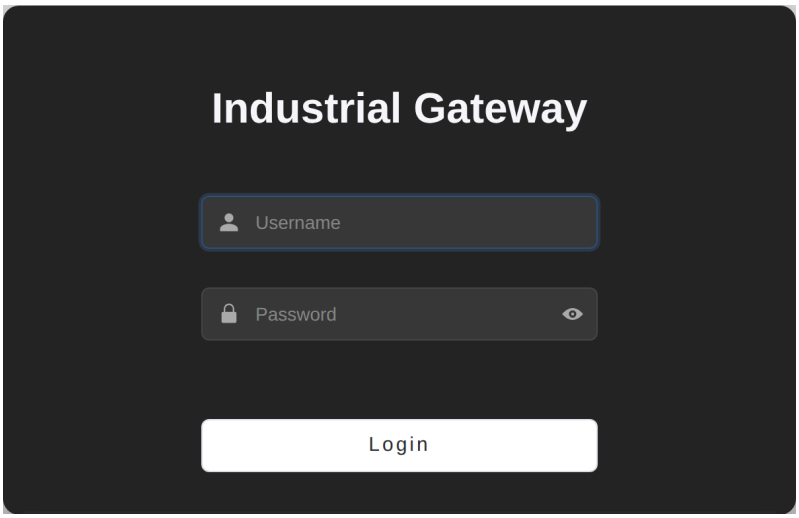


Figure 3-1 Web login

Step	Action, expected result and first checks
1	Use a LAN identified by the label/manual; if roles changed, follow the current configuration.
2	Run ipconfig in Windows PowerShell and check adapter IP/mask. For no DHCP lease inspect cable/LAN first; for static IP exclude conflicts.
3	Enter the complete current URL in the browser address bar, including scheme/port. Expect the gateway login; check subnet, role and scheme/port if absent.
4	Log in with delivered Web credentials and verify Home identity/state. In System Management > User Management change admin password; retain the old session and test a private-window login.

> Record current URL, port role, PC IP and controlled credential location. Login proves management access, not uplink or valid field data.

03 Network and a real request

Entry/task	Action	Pass / first failure checks
Cellular uplink	Gateway Web > Network Settings > Cellular. Configure an actual modem with carrier APN/authentication/PIN and save.	Require SIM recognition, registration, session IP and actual service. Diagnose in that order; signal strength alone is insufficient.
Wired uplink	Gateway Web > Network Settings > WAN. Match upstream DHCP/static/PPPoE, save and reopen to verify the address.	Address/gateway/DNS match upstream and a real target works; do not confuse uplink and management LAN.
Network Tools	Applications > Network Tools: test the real target IP then its hostname. Source IP is the gateway address on that egress; blank uses default routing.	Retain target, source, time and full result. No Ping reply alone does not establish an offline server; check service/logs.
Actual application	Observe a fresh receiver message or read a known point with the authorized vendor tool, after a local site baseline.	Match time, identity/value/unit to the site; online/TCP-connected/saved status alone is insufficient.

Retain this evidence

Save Home/uplink screenshots, full diagnostic output and a fresh raw message or vendor-tool read result. In System Management > Local Log refresh and export the relevant period; retain filename/time zone. Redact passwords and keys before sharing.

04 Next task and handover

Next task	Entry/material
Instrument/Modbus	Applications > Modbus Collect. Save command, device and global settings separately; use Data Acquisition and the platform-specific Modbus/DTU guide.
PLC/remote service	Delivered MT7981 PLC apps use the dedicated Web entry. Remote service uses authorized VPN/M2M plus vendor tools. Other platforms use local Modbus or external drivers.

Back up before maintenance

Export configuration in System Management > Configuration Management. Separately account for used point maps, certificates, Node-RED/LNS and other application data. Use only the approved exact-model/layout image.

> Select Factory reset after upgrade when the new firmware changes the configuration. Leave it unchecked for a program-only update with no configuration changes. A checked box resets settings; it does not retain them. Reconfigure after the reset and separately confirm whether an old backup is compatible.

Handover	Complete on site
Hardware/software	Model/order configuration, actual firmware and app versions: ____
Management/uplink	Current URL, LAN/egress and credential location: ____
Evidence/recovery	Last successful step, logs/backup and local contact: ____

Full model manual: YZW1010_User_Manual_V1.3_EN.pdf in the accompanying specification/manual folder. Use its live contents. This quick start does not replace installation rules, safety requirements or control authorization.