YZW300X

Industrial gateway



USER MANUAL

MT7628AN

128 MB, DDR2

IP30

−30 °C ~ 75 °C

Modbus RTU / TCP

VPN / m2mCloud

MQTT

LoRaWAN

V1.2 • Installation, configuration and maintenance • 2026-11-02

CONTENTS

1. Gateway introduction 5
1.1 Product overview 6
1.2 Variants and options 7
1.3 Remote PLC/HMI maintenance 7
1.4 Modbus acquisition and MQTT reporting 8
1.5 Wired/cellular failover 9
1.6 Camera or terminal backhaul 11
1.7 Prerequisites and capability boundaries 12

2. Interfaces, installation and connections 13
2.1 Interfaces and indicators 14
2.2 Main specifications 17
2.3 Package and antenna connections 18
2.4 Dimensions and mounting position 19
2.5 SIM installation and power connection 20
2.6 Serial wiring and service ownership 20

3. Basic operation and status 22
3.1 PC connection and Web login 23
3.2 Web interface layout 25
3.3 Device, uplink and client status 26

4. Network settings 28
4.1 WAN settings 29
4.2 LAN settings 31
4.3 Wi-Fi settings 33
4.4 Cellular settings 35
4.5 DHCP service 37
4.6 Link Configuration and failover 40
4.7 DDNS 43

5. Applications 46
5.1 Choose acquisition and data processing 47
5.2 ICMP monitoring 47
5.3 Scheduled tasks 49
5.4 Network diagnostics 50
5.5 SMS settings and manual sending 52
5.6 DTU transparent transport 53
5.7 Modbus acquisition and reporting 60
5.8 Modbus device connection 63
5.9 Modbus commands and addressing 66
5.10 Modbus cloud writes over MQTT 69
5.11 SNMP 73
5.12 Local MQTT Broker 74
5.13 Alarm notifications 76
5.14 SMTP mail service 78
5.15 LoRaWAN gateway and region 79
5.16 Independent LoRaNode alongside the gateway 81
5.17 Optional GPS and positioning checks 82
5.18 Digital input/output wiring and checks 83

6. VPN 84
6.1 Choose remote access and tunnels 85
6.2 OpenVPN clients 87
6.3 OpenVPN server 90
6.4 WireGuard 93
6.5 ZeroTier 97
6.6 IPsec 98
6.7 L2TP client 100
6.8 L2TP server 102
6.9 GRE 103
6.10 PPTP client and server 105

7. Forwarding 107
7.1 NAT and port forwarding 108
7.2 Static routes 110
7.3 MASQ masquerading 111
7.4 QoS rate control 112

8. Firewall 115
8.1 Management ports and remote access 116
8.2 SPI filtering 118
8.3 Address filtering 119
8.4 Domain filtering 121

9. System management 123
9.1 Local logs 124
9.2 System time 125
9.3 Admin password management 127
9.4 Configuration backup and restore 128
9.5 Firmware upgrade 130
9.6 Reset button and recovery 131

10. m2mCloud remote management 133
10.1 Client configuration and networking 134
10.2 Remote PLC/HMI program transfer 137
10.3 Remote serial access 138
10.4 Windows client: remote access 139
10.5 Linux client: login and bridge 140

11. Troubleshooting 141
11.1 Locate faults along the service path 142
11.2 Bilingual terms and section mapping 143

YZW300X

Start with your requirements

Choose your problem, enter the table values, save, test and diagnose. M1 uses the supplied 现场测试工具.zip beside this PDF; lab plans differ from factory defaults.

REQUIREMENT	SECTIONS
Cannot open Web / first login	2.1 Interfaces and indicators • 2.5 SIM installation and power connection • 2.6 Serial wiring and service ownership • 3.1 PC connection and Web login • 3.3 Device, uplink and client status
No uplink / recover after failure	4.1 WAN settings • 4.2 LAN settings • 4.4 Cellular settings • 4.3 Wi-Fi settings • 4.6 Link Configuration and failover
Connected but no data / M1 read	5.1 Choose acquisition and data processing • 5.6 DTU transparent transport • 5.7 Modbus acquisition and reporting
LoRaWAN and servers	5.15 LoRaWAN gateway and region • 5.16 Independent LoRaNode alongside the gateway
Remote PLC / prove HTTP first	6.1 Choose remote access and tunnels • 10.1 Client configuration and networking • 10.2 Remote PLC/HMI program transfer • 10.3 Remote serial access
Backup/recovery / first failure	9.1 Local logs • 9.4 Configuration backup and restore • 9.5 Firmware upgrade • 9.6 Reset button and recovery • 11.1 Locate faults along the service path

SCOPE AND UI REFERENCES

Hardware, wiring and order scope follow the current YZW300X datasheet. Software procedures use reviewed MT7628 functions and native OEM interfaces; captions identify reference units.

Example states, addresses, port counts and dialog defaults do not replace this unit’s delivered configuration. Record the actual model, firmware, address and physical interfaces. Use the shared field guidance and verify differences against this model’s instructions and delivered menus.

YZW300X

First use: from wiring to network access

Wire → Sign in → Uplink → Service → Record

1. With power disconnected, fit SIM/antennas/serial wiring and confirm this model’ s power and electrical interfaces.
2. Connect the PC to LAN. Defaults use 192.168.8.1/24; configured equipment uses its administrator-provided current address.
3. Sign in, record model/firmware, change the initial password and verify a fresh login.
4. Establish one WAN or cellular uplink and test gateway, external IP, DNS and a LAN client separately.
5. Add project VPN, acquisition and MQTT services. Read one known point before reporting/processing.
6. Export configuration and record service results, recovery behavior and delivery versions.

Examples are not field control instructions. Unsaved form examples are labeled separately from runtime states. Document production did not change service settings, deploy flows or perform field control.

CHAPTER

01

Introduction

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

1. Gateway introduction

1.1 Product overview

FIELD TASK: HOW TO COMPLETE A FIELD TASK USING THIS MANUAL

Choose one task and follow its entries, save order, test, result, diagnosis and recovery. Reproduce it in an isolated network before replacing site-specific values. Screenshots may be read-only references or unsaved forms; follow the field table and delivered UI.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Factory Access	192.168.8.1/24	Defaults only; start in Login
Lab Gateway / PC	192.168.10.1 / 192.168.10.10	Use after the LAN case; mask/24
PLC / Camera	192.168.10.20 / 192.168.10.30	Site plan, not factory addresses
Upstream / Peer LAN	192.168.20.0/24 / 192.168.30.0/24	Only with actual interfaces/peers required by the case
Test Package	现场测试工具.zip	Supplied beside the manual: Python script, flows and bilingual instructions

SAVE, TEST AND OBSERVE

1. Export current configuration, record management access and check lab/site/remote subnet overlap.
2. Basic order: Login→LAN→one uplink→M1 read-only acquisition. Add failover/remote/processing only as needed. Cases need not run together; M2/P1 writes require separate permission.
3. Record actual settings, command, observation and time for each test; back up after passing. On failure follow the relevant branch without changing everything at once.

PASS CRITERIA AND DIAGNOSIS

Simulator success proves only the tested components, not real PLCs, radio coverage, PoE loading or project acceptance. Repeat relevant tests with the actual equipment.

Finish and restore: Undo temporary settings as specified for each task and complete the site/acceptance records.

YZW300X provides site networking, acquisition and remote maintenance. Verify model-specific power/interfaces, then configure uplinks, acquisition, VPN and application services.

HARDWARE	CONFIGURATION
CPU / RAM	MT7628AN / 128 MB, DDR2
Ethernet	2 × RJ45 ports, 10/100 Mbps, compliance with IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX
Serial	1 × RS485, 1 × DI & 1 × DO (5-pin pluggable terminal, pin order A • B • GND • GPI • GPO)

1.2 Variants and options

ORDER ITEM	SCOPE FOR THIS MODEL
Power and mechanical	2-pin pluggable terminal block, 3.5 mm pitch, 9–36 V DC input (nominal 12 V DC); a dedicated power supply rated for ⩾ 1 A output is recommended
Antennas and radio	SMA connectors for 4G, Wi-Fi, optional GPS and LoRaWAN; antenna configuration depends on the ordered RF modules
Serial and wiring	1 × RS485, 1 × DI & 1 × DO (5-pin pluggable terminal, pin order A • B • GND • GPI • GPO)

1.3 Remote PLC/HMI maintenance

Connect local LAN and uplink, then establish an authorized VPN or m2mCloud tunnel. Test the target IP/port before starting vendor tools; broadcast discovery depends on L2/L3 mode.

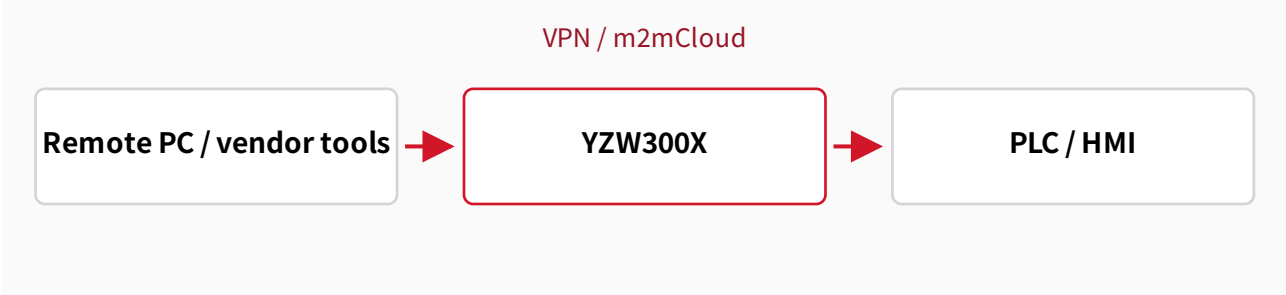


Figure 1-1 Remote PLC/HMI maintenance

FIELD TASK: USE THE REMOTE-ACCESS CASE TO VERIFY EVERY STAGE

Site LAN192.168.10.0/24 must not overlap the remote PC LAN. Obtain server/port, account authorization, network type, tunnel IPs and allowed subnets from the platform administrator. Validate session, virtual network and site service separately.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Client / Server / Port	On / actual platform server / port	Copy the actual platform endpoint
Connection / Tunnel Type	Authorized connection / L3 example	Authorized connection; this L3 case does not imply L2 broadcast

UI FIELD	ENTRY	BASIS
M2M IP	Gateway10.44.0.2; remote PC10.44.0.3	Must actually be assigned/approved by platform
Remote Prefix / Peer M2M IP	remote network plan	Do not route the gateway’ s own LAN as remote; PC route to subnet10 goes via gateway tunnel IP

SAVE, TEST AND OBSERVE

1. Prove server reachability, save endpoint/authorization/network settings and enable. Inspect session/interface address and authorize both gateway and PC on the platform.
2. Join the same authorized network from the remote PC. Ping the actual gateway tunnel IP and inspect route192.168.10.0/24 via that IP. Do not add conflicting routes if platform manages them.
3. Run bench on LAN PC .10.10. From remote open http://192.168.10.10:8080/ before testing the actual PLC/HMI service.

PASS CRITERIA AND DIAGNOSIS

Online but no tunnel-IP access: inspect authorization/type/address. Tunnel works but 192.168.10.10 fails: inspect PC route, LAN client gateway 192.168.10.1, firewall and return path.

Finish and restore: Leave the test network and revoke temporary routes/authorization; retain approved maintenance scope and local recovery.

1.4 Modbus acquisition and MQTT reporting

Start with one instrument and one known read-only point. Verify address, type, scaling and unit before setting publication topics. Compare field, gateway and platform values over repeated samples.



Figure 1-2 Modbus acquisition and MQTT reporting

FIELD TASK: COMPLETE ACQUISITION/REPORTING WITH M1

On an isolated LAN set the gateway to 192.168.10.1/24 and PC to 192.168.10.10/24, gateway .10.1. Get the Field Test Tools package from Product Documents / Shared Resources. Install Python 3.8+, open its extracted folder and run python site_lab.py bench --bind 192.168.10.10. Keep it open. Allow only the lab LAN to TCP1502/1884/5001/8080 and UDP5002 on the PC firewall.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Enable / Report Method	On / MQTT	Enable collection and MQTT reporting
MQTT Server / Port	192.168.10.10 / 1884	PC test broker, separate from the gateway broker
Username / Password	field / DemoOnly2026	Lab credentials for the supplied tool only
CA / TLS	TLS off	Plain transport on isolated LAN only; use platform certificates for production
Response Timeout	1000 ms	Enter 1 if the page uses seconds
Periodic / Report Interval	On / 5 s	Use the periodic-report option exposed on the page

SAVE, TEST AND OBSERVE

1. In a second PC window run python site_lab.py modbus-get --host 192.168.10.10. Expect values [255], proving the mock slave runs.
2. Add a TCP device as in the next section, then the temperature command. Save command, device connection and global settings in order; confirm acquisition is enabled.
3. Run python site_lab.py watch --host 192.168.10.10 --topic plant/site1/plc1/data --seconds 30 --expect temperature=255. The tool prints raw messages and PASS when it observes numeric 255.

PASS CRITERIA AND DIAGNOSIS

Require successful acquisition and an observed temperature=255. MQTT online alone is insufficient. No message: inspect broker/auth/topic then collection logs. Wrong value: inspect FC, start and type.

For a real instrument replace IP/port/unit/register map individually. 255 is a lab raw value; a 0.1 scale gives 25.5. Do not label raw 255 as 255°C.

Finish and restore: Disable the test connection, stop the tool with Ctrl+C and remove temporary firewall rules. Configure production credentials/TLS from the handover sheet.

1.5 Wired/cellular failover

Validate wired and cellular uplinks independently. Select WAN / Mobile in Link Configuration and set probes for every actual interface. Test primary failure/recovery and service reconnection during maintenance.

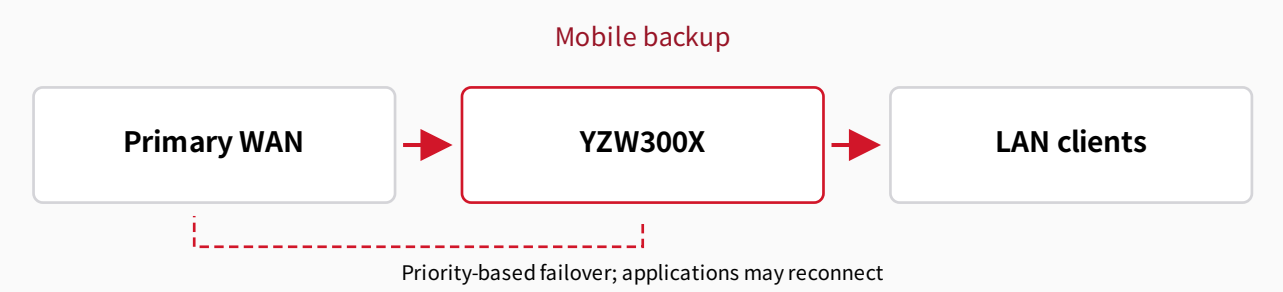


Figure 1-3 Wired/cellular failover

FIELD TASK: DISCONNECT AND RECOVER USING THE FAILOVER CASE

Prove WAN and cellular applications individually before this test. Disable a conflicting load-balancing plan. WAN test gateway is 192.168.20.1; cellular probes need a real carrier-reachable ICMP target, not the WAN private address.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Link Configuration	WAN / Mobile	Use this combination if present; wired first
Keepalive Check	enabled	Configure for multiple actual interfaces as required
WAN IPv4 Check Address	192.168.20.1	Proves reachability only to upstream gateway; use a reachable end-to-end target to detect upstream outages
Cellular IPv4 Check Address	carrier-reachable IP	One literal IPv4 address per interface

SAVE, TEST AND OBSERVE

1. Save and record Current, Status and Reason for IPv4/IPv6 plus the LAN application result. A healthy non-current backup is normally expected.
2. At the unit, disconnect only the WAN uplink cable, retaining LAN management. Record fault time, egress change and application reconnection time. Restore WAN, observe recovery and retest.
3. Also test upstream Internet failure with Ethernet still connected. If 192.168.20.1 still answers, that probe cannot detect the upstream outage; choose an end-to-end reachable target and repeat.

PASS CRITERIA AND DIAGNOSIS

Pass when the application recovers; no fixed switching time is promised. No switch: check backup IP/service. Switched without data: check application reconnect and platform IP allowlists.

Finish and restore: Restore the cable and original priority plan; finish only after checking egress and application. Check modes, probe conditions and switching behavior in this manual Link Configuration section and the delivered UI. Verify each uplink first, then application recovery in a maintenance window.

1.6 Camera or terminal backhaul

This model does not support PoE. Power the camera and gateway separately to their respective ratings and connect the data path through LAN or a switch. Verify camera addressing and stream first, then uplink capacity and platform viewing.

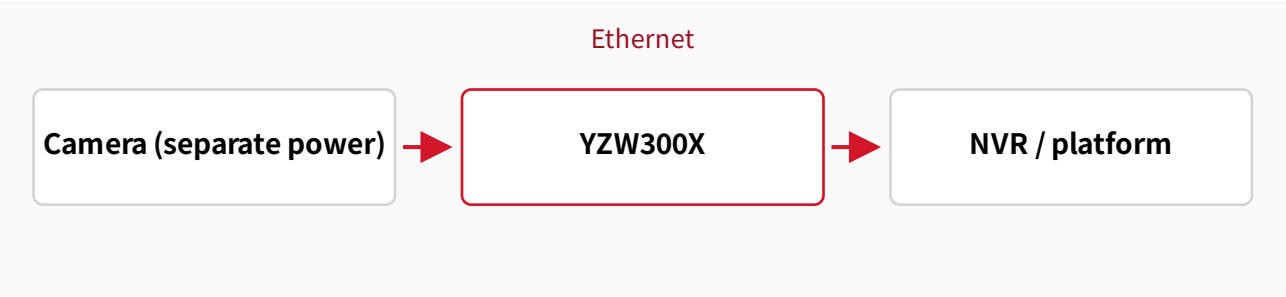


Figure 1-4 Camera or terminal backhaul

FIELD TASK: PROVE THE LOCAL CAMERA STREAM BEFORE REMOTE VIEWING

Check gateway/camera power against this model’ s instructions; use the PoE chapter only for a model with specified PSE. This case covers network/stream fields.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Camera IP / Mask / Gateway	192.168.10.30 / 255.255.255.0 / 192.168.10.1	Set on camera
Stream URL / Account	Actual camera RTSP/vendor URL and authorized account	Obtain actual channel URL/credentials from camera management
Bitrate	Measure for actual resolution/frame rate	Allow for concurrent streams, overhead and uplink variation

SAVE, TEST AND OBSERVE

1. From LAN run ping 192.168.10.30/open its page, then use vendor client or VLC for the actual stream. Observe continuity/bitrate/frame loss.
2. Establish VPN/m2mCloud and routes, then test the same authorized IP stream remotely. Validate cloud device-ID/binding separately.

PASS CRITERIA AND DIAGNOSIS

No local picture: inspect power/IP/credentials/stream. Remote-only stutter: inspect sustained uplink, concurrency and retransmission. Missing cloud device: inspect binding/platform access.

Finish and restore: Close temporary viewers/ports and restore credentials/bitrate/access scope.

1.7 Prerequisites and capability boundaries

ITEM	IMPLEMENTATION REQUIREMENT
Hardware	Use this model’ s specification, terminal drawings and order configuration
UI	Native OEM examples come from same-platform units identified in captions
Serial	Avoid assigning DTU, Modbus, PLC or remote serial to the same physical port
Handover	Record actual firmware, management address, backup and service results

CHAPTER

02

Installation

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

2. Interfaces, installation and connections

2.1 Interfaces and indicators

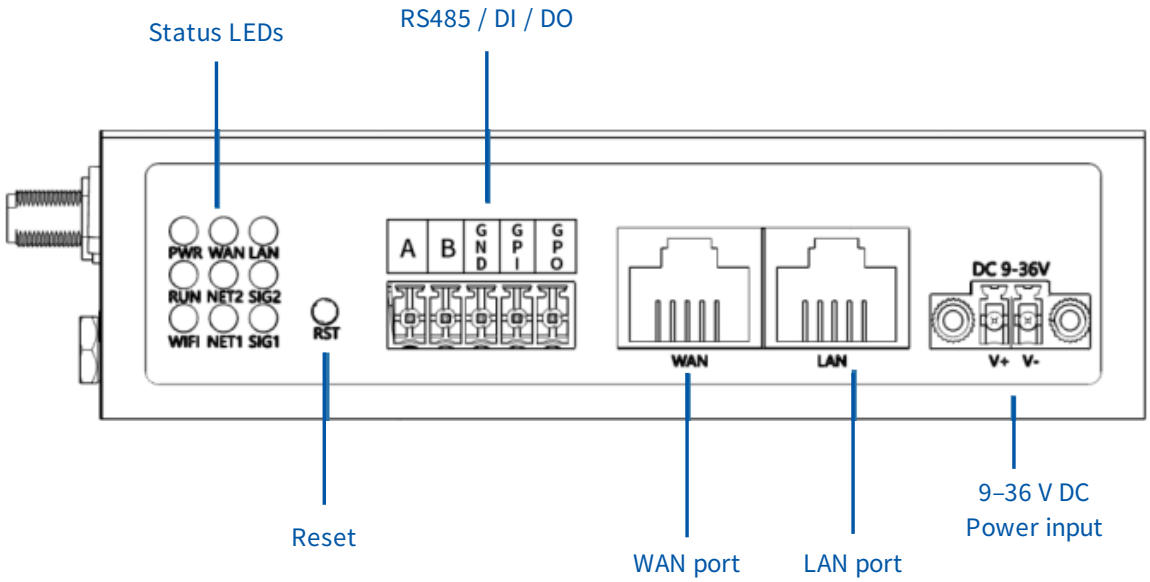


Figure 2-1 Interface panel 1

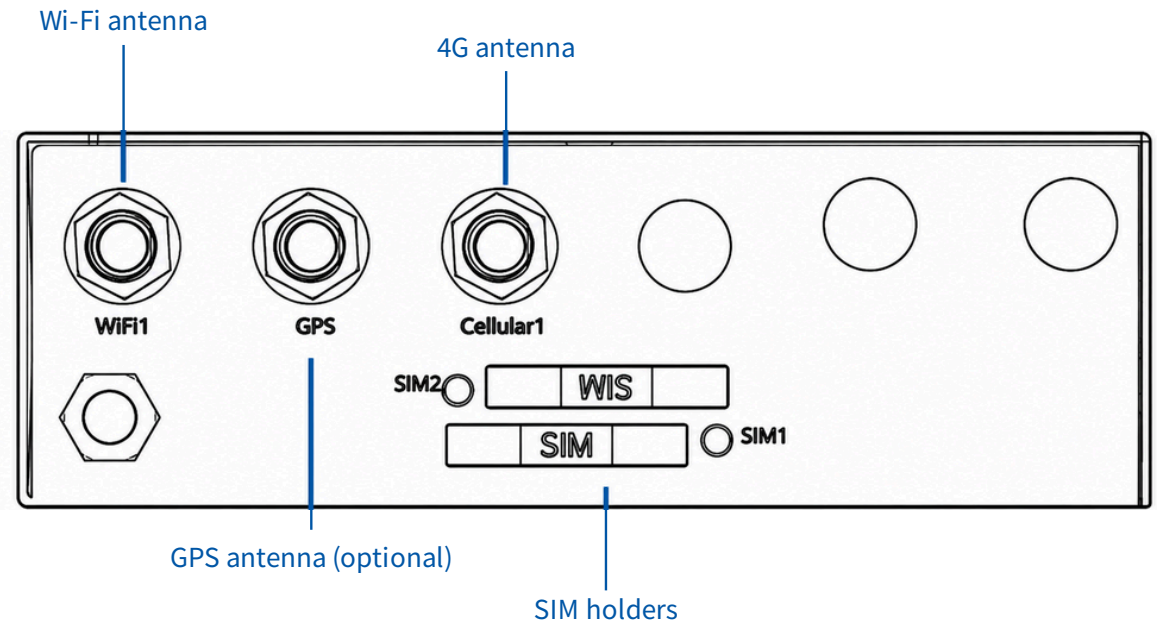


Figure 2-2 Interface panel 2

INTERFACE	**CONNECTION**
Serial	1 × RS485, 1 × DI & 1 × DO (5-pin pluggable terminal, pin order A • B • GND • GPI • GPO)
Power	2-pin pluggable terminal block, 3.5 mm pitch, 9–36 V DC input (nominal 12 V DC); a dedicated power supply rated for ⩾ 1 A output is recommended
Ethernet	2 × RJ45 ports, 10/100 Mbps, compliance with IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX
SIM	2 × SIM slot, external SIM holder
Antennas	SMA connectors for 4G, Wi-Fi, optional GPS and LoRaWAN; antenna configuration depends on the ordered RF modules
Indicators	Power, WAN, LAN, Wi-Fi, SIM1 NET/SIG, SIM2 NET/SIG and one shared LoRa application-running LED

SPECIFICATION ITEM	**SCOPE FOR THIS MODEL**
GPS	Optional; specify when ordering
Status LEDs	Power, WAN, LAN, Wi-Fi, SIM1 NET/SIG, SIM2 NET/SIG and one shared LoRa application-running LED

LED STATES AND FIELD DIAGNOSIS

Identify each indicator by its chassis label. Panel, integrated socket and reserved indicators are distinguished; table groups do not add hardware.

This table uses this model’ s inventory, specifications and platform software, not the300L SIG cadence. Software references are distinct from physical acceptance; unconfirmed colors, exact timing or functions are not inferred.

INDICATOR/GROUP	NORMAL OR REFERENCE STATE	MEANING AND NEXT CHECK
PWR / power	Steady with normal power.	If unlit, check this model’ s input method, voltage and polarity, then startup/Web access before resetting.
NET1 / NET2	Used cellular pair: blinking during dialing, steady when connected. Check the delivery mapping for the other pair.	Two SIMs do not imply two modems. Do not borrow the300L mapping without evidence; compare with the actual SIM/modem state.
SIG1 / SIG2	For the active mapped pair: CSQ1–10 slow,11–20 fast,21–31 steady.	Verify the model’ s pair mapping; an inactive second pair being off is not a signal fault.
WIFI (wireless)	Lights or blinks when the corresponding radio is enabled; a shared LED may encode different band combinations.	Inspect enable, fitted bands, SSID and clients. A lit indicator does not prove a client has an IP or Internet access.
Shared application-running LED	The shared running LED is used for the LoRa application, not separate per-instance indication.	Cadence is not confirmed here; verify runtime, heartbeat and node uplinks in the gateway page.
RJ45 link/activity indicators	On a socket with Link/Act indication: on with link, blinking with traffic; speed indicators follow their hardware marking.	Treat integrated socket LEDs separately from panel indicators; do not add them to the specified panel count.

Configuration scope: SIG signal ranges apply to the single-modem reference software. A delivered dual-modem configuration may reuse this physical indicator for the second link; check its delivery mapping. Two SIMs alone do not prove two modems or two active pairs.

CHECK IN THIS ORDER AFTER POWER-UP

1. Inspect power/system indication first; check input method, rated range and polarity if unlit.
2. Connect the PC to the actual LAN. If link indication exists but Web fails, check PC IP/mask, management URL, HTTP/HTTPS and port.
3. Inspect the active cellular NET/CEL and SIG, then SIM recognition, registration, session IP and selected SIM/modem in Web.
4. After steady NET, test actual server IP, hostname and application; require application success.

DIAGNOSE COMMON COMBINATIONS

OBSERVATION	CHECK IN ORDER
SIG indicates signal; NET/CEL keeps blinking or stays off	Signal is not a session. Inspect SIM/subscription/registration/APN/auth/session IP, then egress.
NET steady, platform or VPN unreachable	Separate session state from selected egress; inspect DNS/routes/service port/auth/application logs.
Ethernet indicates link/activity but PC cannot open Web	Inspect port role, PC subnet/gateway, management protocol/port and proxy before factory reset.

Record: label, observed state, associated SIM/port, Web state and application result. For a discrepancy retain model, photo/short video and status page, then verify hardware and delivery LED definitions.

2.2 Main specifications

ITEM	MODEL SPECIFICATION
CPU / processor	MediaTek MT7628AN
RAM	128 MB, DDR2
Flash	32 MB, SPI NOR Flash
Ethernet	2 × RJ45 ports, 10/100 Mbps, compliance with IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX
Serial	1 × RS485, 1 × DI & 1 × DO (5-pin pluggable terminal, pin order A • B • GND • GPI • GPO)
SIM	2 × SIM slot, external SIM holder
Power input	2-pin pluggable terminal block, 3.5 mm pitch, 9–36 V DC input (nominal 12 V DC); a dedicated power supply rated for ⩾ 1 A output is recommended
Consumption	Base power consumption < 3.5 W; total power consumption depends on the fitted RF modules and operating state
Dimensions	120.00 × 99.00 × 33.00 mm
Weight	350 g
Mounting	Sideways DIN rail mounting slots
Operating temperature	−30 ℃ ~ 75 ℃
Operating humidity	< 95 % non-condensing
Protection	IP30

> This model does not support PoE. Connect power according to the DC rating above.

2.3 Package and antenna connections

Check the actual order packing list for the gateway, power components, antennas, Ethernet cable, terminals and mounting parts. Use optional functions only when hardware and firmware are supplied. Disconnect power and identify connectors and SIM trays from the model-specific figures.

2.4 Dimensions and mounting position

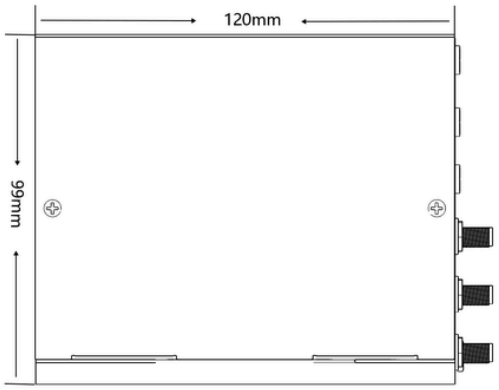


Figure 2-3 Dimension view 1

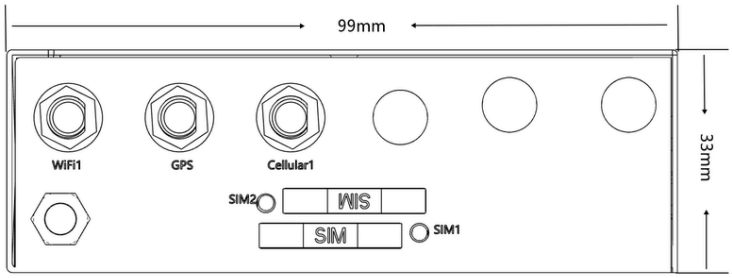


Figure 2-4 Dimension view 2

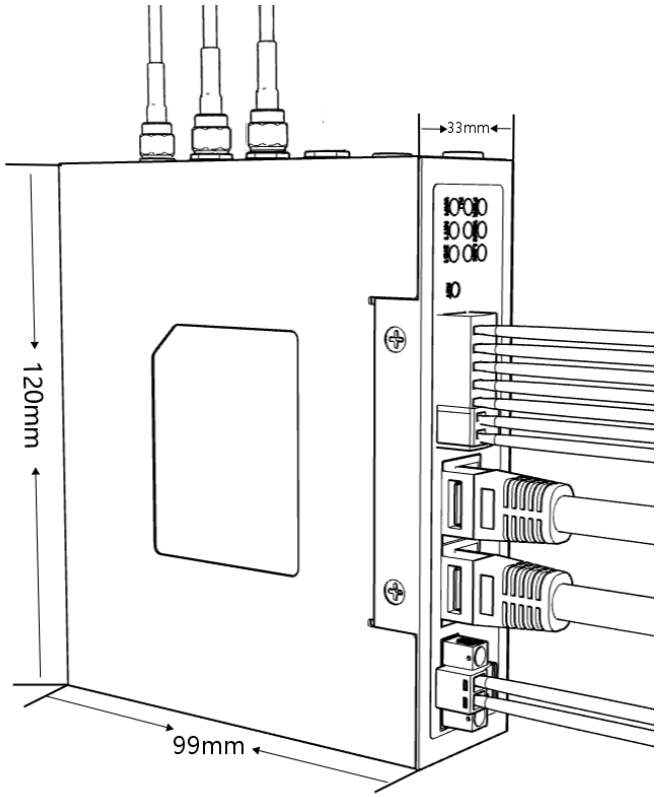


Figure 2-5 Mounting reference

120.00 × 99.00 × 33.00 mm; Sideways DIN rail mounting slots. Allow antenna, cable-bend and service clearances.

2.5 SIM installation and power connection

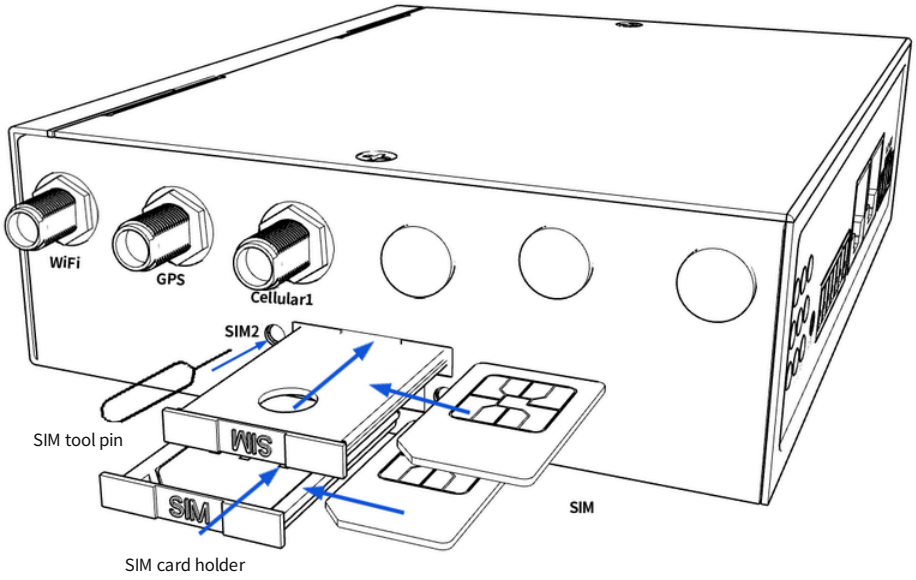


Figure 2-6 SIM installation

2 × SIM slot, external SIM holder.

2-pin pluggable terminal block, 3.5 mm pitch, 9–36 V DC input (nominal 12 V DC); a dedicated power supply rated for ⩾ 1 A output is recommended.

1. With power disconnected, fit the SIM as illustrated and fully seat the tray.
2. Connect antennas matching the ordered radios.
3. Check supply polarity, connector and rating before powering up.
4. Verify power, Ethernet and cellular registration before application configuration.

Check the result Starts on the correct supply/wiring and is reachable over LAN

2.6 Serial wiring and service ownership

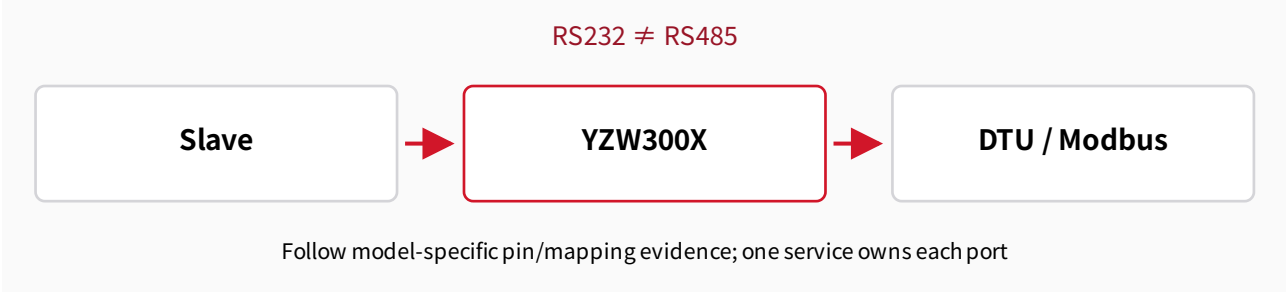


Figure 2-7 Serial wiring and service ownership

1 × RS485, 1 × DI & 1 × DO (5-pin pluggable terminal, pin order A • B • GND • GPI • GPO).

Wire the RS485 slave to A/B using this model’ s native drawing. Check terminal order, reference connection and delivered logical port mapping. Assign one service per port; wire with power off, then validate one known slave/read-only point.

> **Check the result** Physical wiring, logical mapping and electrical type agree; one known point reads repeatedly

CHAPTER

03

Getting started

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

3. Basic operation and status

3.1 PC connection and Web login

Path Web Login

Use a wired LAN connection for initial setup. Configure the PC address before signing in. For a deployed router, use the current management address supplied by its administrator.

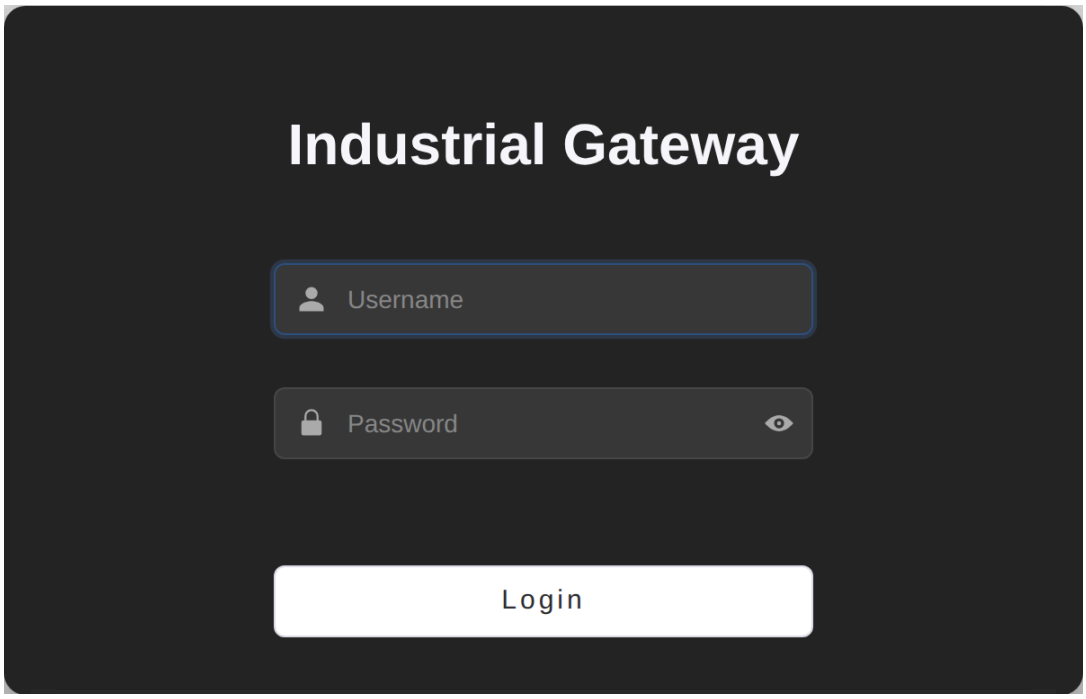


Figure 3-1 Web login

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: FIRST CONNECTION: MATCH THE PC TO THE DEVICE DEFAULT SUBNET

Distinguish defaults from configured units.192.168.8.1 below is for defaults; bench188 addresses are not factory defaults. For configured units use the handover record.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Cable	PC to actual LAN	Temporarily remove conflicting PC adapters/proxies
PC IPv4 / Mask	192.168.8.10 / 255.255.255.0	Static access example; verify unused
URL / Account	http://192.168.8.1/ / admin	Initial password admin only at defaults

SAVE, TEST AND OBSERVE

1. Run ipconfig to verify Ethernet IP, ping192.168.8.1 and enter the full URL in the browser address bar.
2. Change the password and verify a new login. To reproduce the lab, then change LAN to 192.168.10.1/24 using the LAN section.

PASS CRITERIA AND DIAGNOSIS

No link: inspect cable/power/port role. Ping fails: inspect subnet/conflicts. Ping works but Web fails: inspect protocol/port/proxy. Wrong password: check prior changes.

Finish and restore: Restore PC IP/DNS/adapters and securely retain new management settings.

DEFAULT ACCESS SETTINGS

ITEM	DEFAULT
LAN address / mask	192.168.8.1 / 255.255.255.0 (/24)
Address assignment	LAN DHCP is enabled; the PC can obtain its address automatically
Web address	http://192.168.8.1/ (HTTP, port 80)
Username / initial password	admin / admin

Use the delivered access settings if different defaults were specified, or the current settings if the router has already been configured.

METHOD 1: OBTAIN A PC ADDRESS AUTOMATICALLY

1. Connect the PC to an RJ45 port currently assigned to LAN and check the link indicator.
2. Press Win+R, enter `ncpa.cpl` and open Properties for the connected Ethernet adapter.
3. Open Internet Protocol Version 4 (TCP/IPv4) Properties and select automatic IP and DNS assignment.
4. Check that the acquired address is in the router LAN subnet; the default subnet is 192.168.8.x/24.

METHOD 2: ASSIGN A PC ADDRESS MANUALLY

1. In the same IPv4 window, select Use the following IP address.
2. With the default LAN settings, an example PC address is `192.168.8.10`, mask `255.255.255.0`. The address must be free; do not assign the router's `.1` address to the PC.
3. If Windows asks for a prefix length, enter `24`. When Internet access through the router is required, use the site gateway and DNS settings; with the default plan these can be `192.168.8.1`.
4. If the LAN address was changed, use its current subnet rather than copying this example.

OPEN THE BROWSER AND SIGN IN

1. Enter the complete `http://192.168.8.1/` in the address bar, rather than a search box. For a configured router, enter its current address.
2. Enter `admin` in Username and the initial or changed password in Password, then select Login.

3. After Overview opens, check the link and change the admin password under System Management > Account. See “admin password management”.

> Check the result: Overview opens and the PC address matches the LAN subnet. If access fails, check cabling, port role and addressing before checking the management protocol and port.

MANAGEMENT SECURITY AT FIRST DEPLOYMENT

> **Check the result** Overview opens and the new password works after a password change

3.2 Web interface layout

Path Overview

Inspect port state at the top, select a function on the left and configure it on the right. This is the current menu on this model. Configuration submission, runtime state and service validation are separate steps.

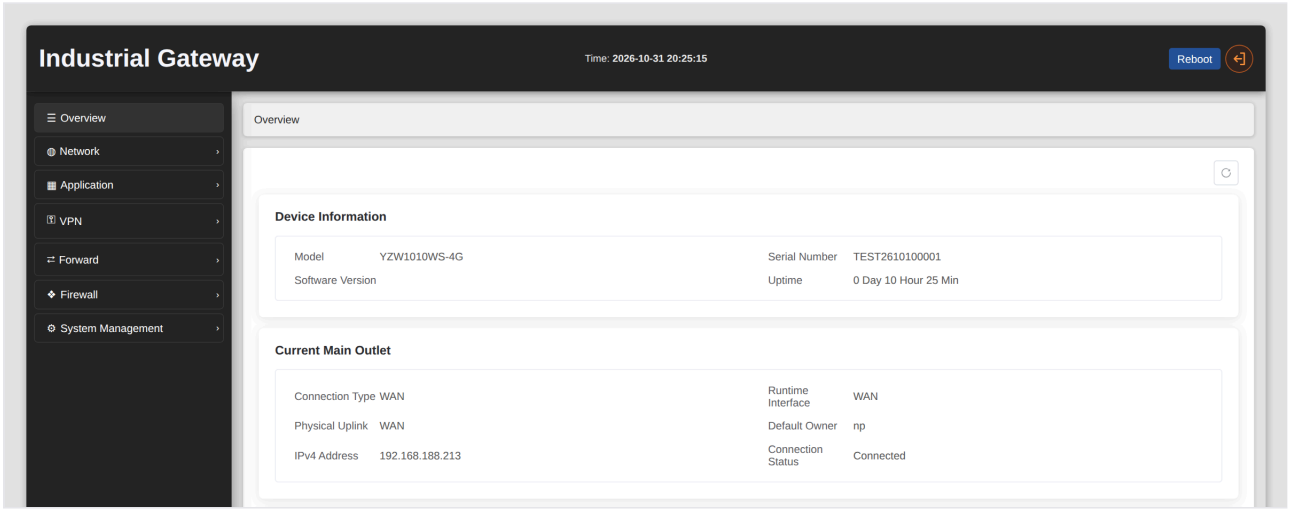


Figure 3-2 Web menu and complete upper overview cards

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

Firmware identifier omitted

> **Check the result** The actual menu and intended configuration object are identified before saving

3.3 Device, uplink and client status

Path Overview

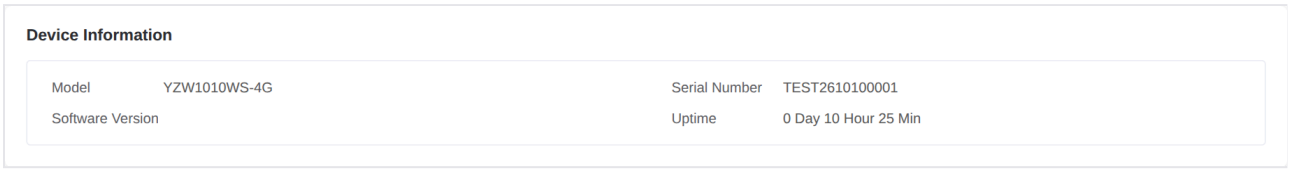


Figure 3-3 Device, uplink and client status

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

Firmware identifier omitted

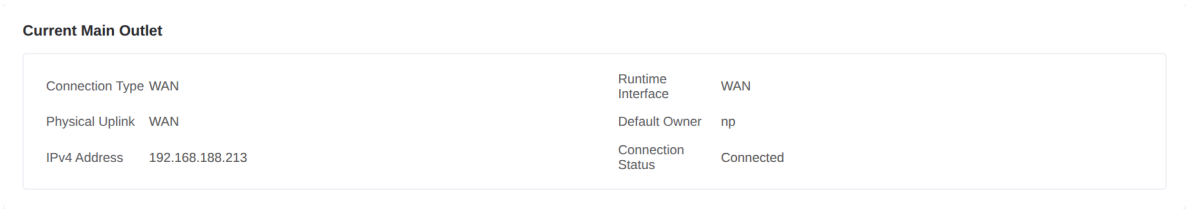


Figure 3-4 Device, uplink and client status

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: SEPARATE LINK, ADDRESS AND APPLICATION STATUS

Configure uplink and prepare an actual platform/site-service test. Reference screenshot values are not factory parameters.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Device / Uptime / Performance	record actual values	Observe CPU/memory over time; unavailable “-” is not zero
Link / Current / Clients	actual IPs, egress and clients	Correlate clients by real MAC/IP

SAVE, TEST AND OBSERVE

1. Record system uptime, WAN/cellular IP, current egress and PC lease; then open the actual application from the PC.
2. Distinguish system/session/virtual-interface uptime where provided and observe refresh changes rather than diagnosing from one screenshot.

PASS CRITERIA AND DIAGNOSIS

IP without application: use Network Tools. High CPU: correlate with points/flows/connections. Missing client: inspect access port and lease.

Finish and restore: Restore temporarily stopped services and record the normal baseline.

AREA	WHAT TO INSPECT
Device information	Model, software version and uptime; firmware must match model/storage
Current uplink	Check IPv4/IPv6 interface, address, gateway and DNS separately; an addressed backup need not be active
Cellular	Check SIM, modem, registration and data state; IMEI/ICCID are outside the illustrated overview cards
Routes and clients	Web access alone does not establish Internet, VPN or MQTT reachability; verify each required service

Check the result Current firmware, addressing and links match the delivery and site plan

CHAPTER

04

Network settings

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

4. Network settings

4.1 WAN settings

Path Network > WAN

2 × RJ45 ports, 10/100 Mbps, compliance with IEEE 802.3, IEEE 802.3u standards, supports auto MDI/MDIX

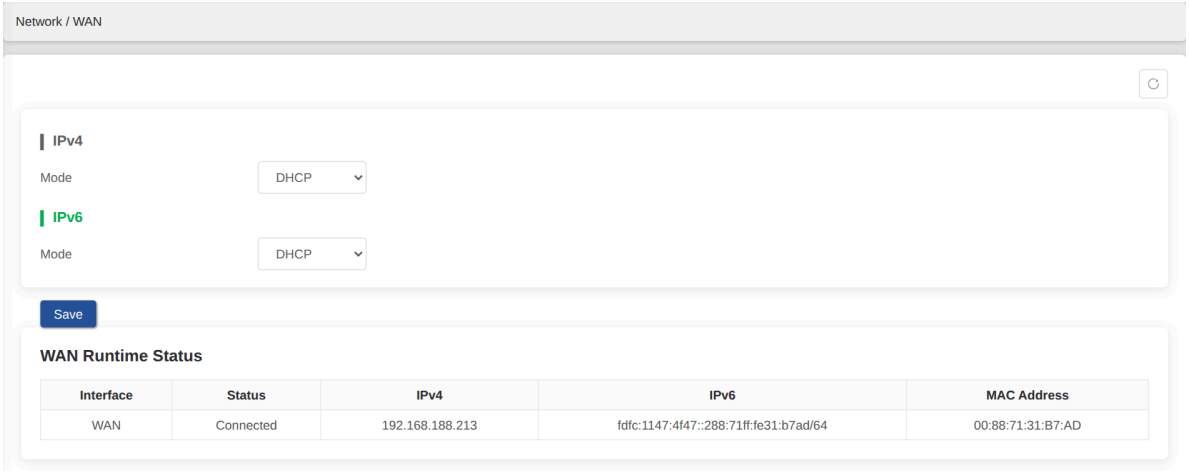


Figure 4-1 WAN settings

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: ESTABLISH A STATIC WIRED UPLINK FIRST

The upstream router is 192.168.20.1/24 with Internet and DNS; gateway LAN is 192.168.10.1/24, WAN connects to upstream LAN. An upstream test PC is 192.168.20.10/24. These are isolated lab values, not ISP-assigned addresses.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Mode	Static	Select the actual WAN
IP Address	192.168.20.2	Check for conflicts
Subnet Mask	255.255.255.0	/24
Gateway / DNS1	192.168.20.1 / 192.168.20.1	Upstream must provide routing and DNS

SAVE, TEST AND OBSERVE

1. Save the table. Inspect WAN address/gateway on Home. In Network Tools ping 192.168.20.1, test the project server IP, then resolve its hostname.

2. If upstream uses DHCP, select DHCP and save; do not retain the table’ s static address. For PPPoE obtain ISP credentials, enter PPPoE Username/Password, keep negotiated options, save and inspect the session IP and duration.

PASS CRITERIA AND DIAGNOSIS

Pass upstream gateway, server IP, hostname and application tests in that order. Link LEDs or an assigned IP alone do not prove Internet access.

Overlapping WAN/LAN subnets: change LAN first. PPPoE auth failure: check ISP credentials and stale sessions; the Web admin password is unrelated.

Finish and restore: Restore the recorded mode/settings. Before assigning the port to LAN, retain local management through another LAN connection.

UPSTREAM	MODE	REQUIRED INFORMATION
Automatic address	DHCP	Upstream allocation
Assigned address	Static	IP / Mask / Gateway / DNS
Broadband account	PPPoE	ISP username / password

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	WAN interface / tab	Select an actual interface tab and match physical wiring; do not infer port count from another model
2	Mode	Select DHCP, Static or PPPoE as exposed; port roles follow this model’ s connectors/current configuration
3	IP Address / Subnet Mask	For Static mode, use the assigned address and mask without conflicting with LAN or other site subnets
4	Gateway	Use the upstream next hop for this WAN, not the router LAN address
5	DNS1 / DNS2	DNS resolvers. Check them when IP access works but names fail
6	PPPoE Username / Password	Use ISP-provided broadband credentials, not the router Web account
7	Authentication / Compression	Match advanced PPP authentication and compression to the provider
8	MTU / MRU / MSS	Control transmit, receive and TCP segment sizes; use provider or network requirements
9	IPv6	Configure addressing, prefix, gateway and DNS separately; the upstream must support the selected IPv6 access
10	Runtime	After saving, check runtime addressing/link state; submission alone does not establish service reachability

Check the result Assigned addressing, gateway, external IP, DNS and a LAN client service are checked separately

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Address acquired but no Internet access	Check the upstream gateway and default route. Test an external IP and then a domain; check DNS if only the domain fails.

4.2 LAN settings

Path Network > LAN

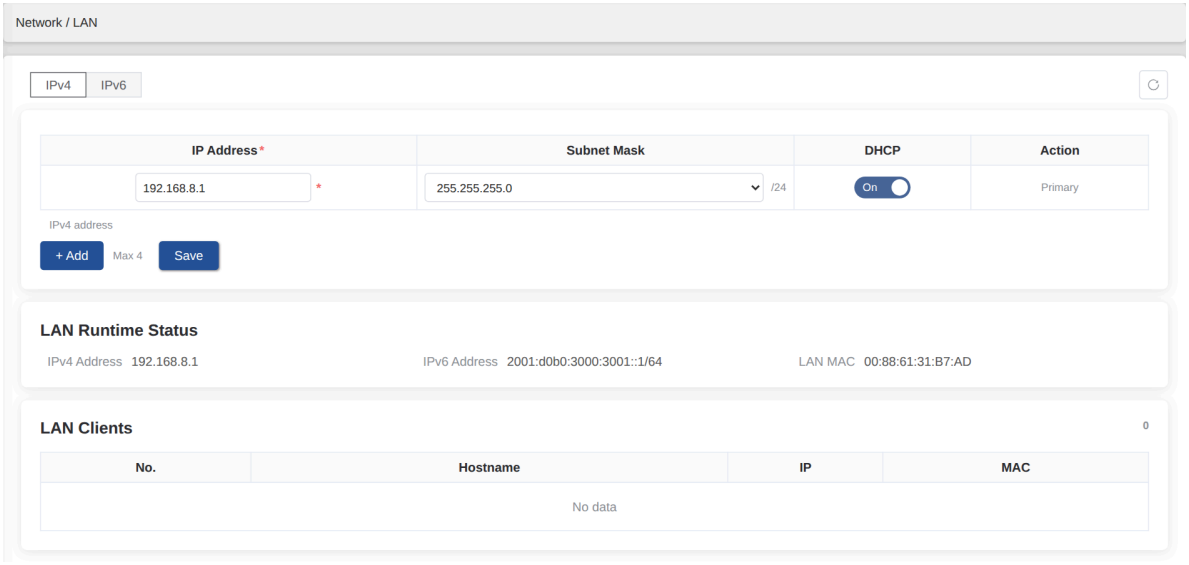


Figure 4-2 LAN settings

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: MOVE THE SITE LAN TO 192.168.10.0/24

Connect a PC directly to LAN and export a configuration backup. The 10 subnet is a lab plan. Check that it differs from the uplink subnet; if already occupied, replace it consistently throughout the cases.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
IP Address	192.168.10.1	Primary LAN IPv4 address
Subnet Mask	255.255.255.0	Prefix 24; this is not the uplink gateway

SAVE, TEST AND OBSERVE

1. Keep the local cable attached. Change the primary LAN address/mask and save. A disconnected browser is expected; do not factory-reset for this reason.

2. Set the PC manually to 192.168.10.10/24, gateway 192.168.10.1. Sign in at http://192.168.10.1/ and configure the dynamic pool in DHCP.
3. Run ipconfig and ping 192.168.10.1 on Windows, then open the new management page. Update static PLC/camera addresses, NAT targets, VPN local subnets and saved management URLs.

PASS CRITERIA AND DIAGNOSIS

Pass only when the page opens and the PC is 192.168.10.10/24. Ping works but Web fails: check HTTP/HTTPS and the management port.

PC remains on the old subnet: use static 192.168.10.10/24 to separate lease issues, then repair DHCP; verify that the cable is in a LAN port.

Finish and restore: To revert, restore the old LAN address/mask through the new page, move the PC back, and restore related rules from the recorded plan.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	IPv4 / IPv6	Maintain LAN addresses for each protocol; do not mix IPv4 masks with IPv6 prefix lengths
2	IP Address	LAN management address. Reconnect at the new address after changing the primary address
3	Subnet Mask	Defines the IPv4 LAN subnet; coordinate it with WAN and other interfaces
4	Primary	Main LAN management address; secondary addresses do not replace its correct planning
5	Add / Delete	Maintain addresses within firmware limits; removal affects clients using that subnet
6	Prefix	Defines the IPv6 subnet; also check prefix requirements for DHCP operation
7	DHCP	Enables assignment for the subnet; maintain pools and related settings on the DHCP page
8	Runtime / Clients	Shows active addresses and clients; the client list is not a permanent equipment inventory

Check the result The PC obtains the intended addressing and can sign in at the new management IP

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Management access lost after saving	Reconnect to the new LAN address, update the PC address or DHCP lease, and check that the port is still assigned to LAN.

4.3 Wi-Fi settings

Path Network > WIFI2.4G

This model provides 2.4 GHz Wi-Fi according to its current datasheet; use the matching antennas and exposed AP/Station modes.

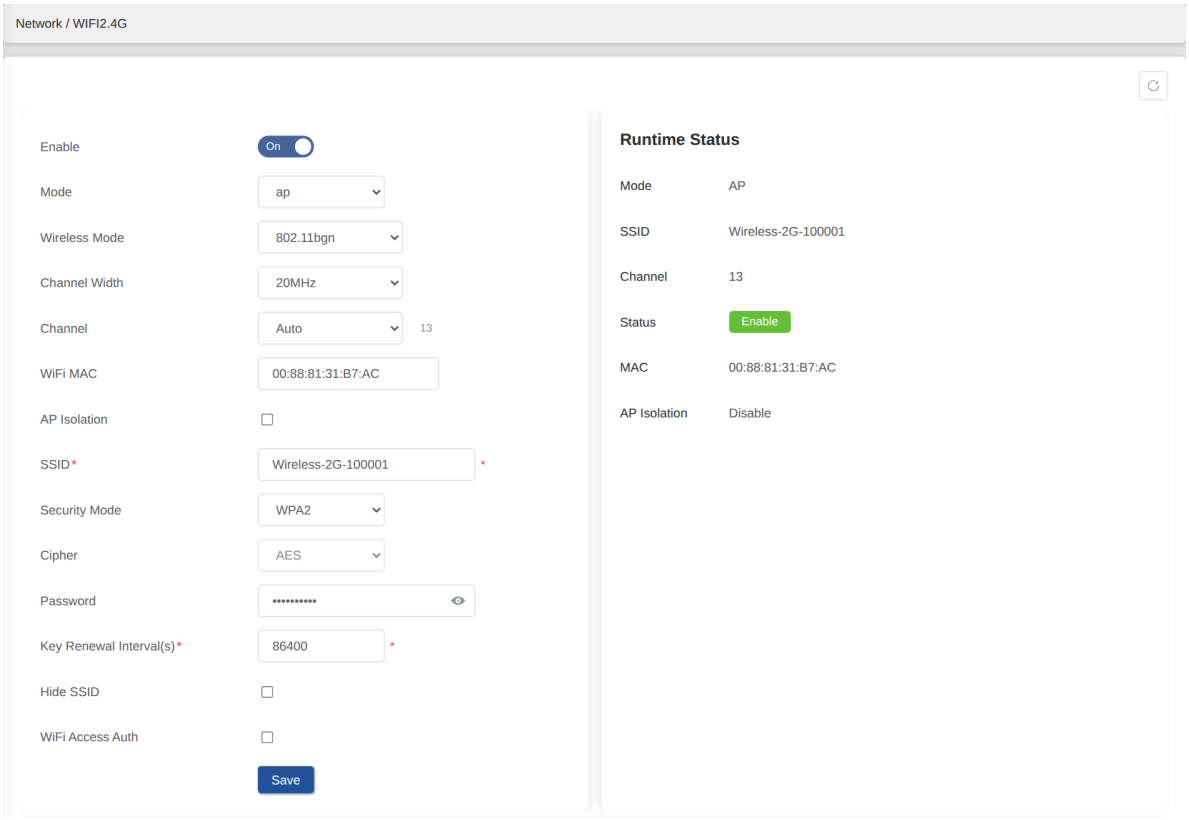


Figure 4-3 Wi-Fi settings (1/2)

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

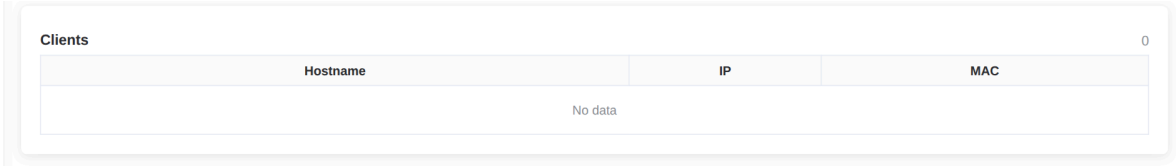


Figure 4-4 Wi-Fi settings (2/2)

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: CONNECT A PHONE TO AP OR USE WI-FI AS AN UPLINK

Test AP and Station as separate uses. Retain wired LAN management. Simultaneous roles depend on the delivered radio and page.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
AP Mode / SSID	AP / FieldLab	Phone joins site LAN
Security / Password	WPA2-PSK / LabWifi2026	Lab-only password; replace on site

UI FIELD	ENTRY	BASIS
Station Mode / SSID	Station / actual upstream SSID	Obtain the exact upstream SSID/password from its administrator
Channel / Bandwidth	Auto / keep current	Avoid locking an unverified channel initially

SAVE, TEST AND OBSERVE

1. AP test: enable the fitted band, set FieldLab/password and save. Disable phone mobile data, join the SSID, verify a 10-subnet IP and open http://192.168.10.1/.
2. Station test: enter the actual upstream SSID, security mode and password, save and inspect association/uplink IP. Select an available wireless combination in Link Configuration and test the service. MT7621 SSIDs are limited to 32 UTF-8 bytes.

PASS CRITERIA AND DIAGNOSIS

SSID absent: inspect band, enable and hidden settings. Joined without IP: inspect DHCP. Station associated without service: inspect uplink IP, priority and subnet overlap.

Finish and restore: Use wired LAN to restore the radio role, SSID and security settings; disconnect test clients and replace the lab password.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Band / Enable	This model provides 2.4 GHz Wi-Fi according to its current datasheet; use the matching antennas and exposed AP/Station modes.
2	Mode	AP serves wireless clients; Station connects upstream. Use modes available on the selected radio
3	SSID	Local network name in AP mode; upstream network name in Station mode
4	Channel / Bandwidth	Coordinate with radio conditions and regional settings; bandwidth selection is not a throughput guarantee
5	Security / Password	Match the authentication settings of clients or the upstream AP
6	AP Isolation / Hide SSID	Control client-to-client access and SSID broadcast; hiding the name does not replace authentication
7	Station List / Scan	When configuring Station access, select the intended upstream network and its credentials

Check the result The client joins the intended SSID, obtains expected addressing and reaches its service

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
SSID connected but no Internet	Check the client address, gateway and LAN before the uplink; changing the Wi-Fi password alone will not resolve an upstream problem.

4.4 Cellular settings

Path Network > Mobile

This section applies to equipped cellular variants. Install SIM and matching antennas before dial configuration. The modem determines available network types/bands; do not borrow options from another model.

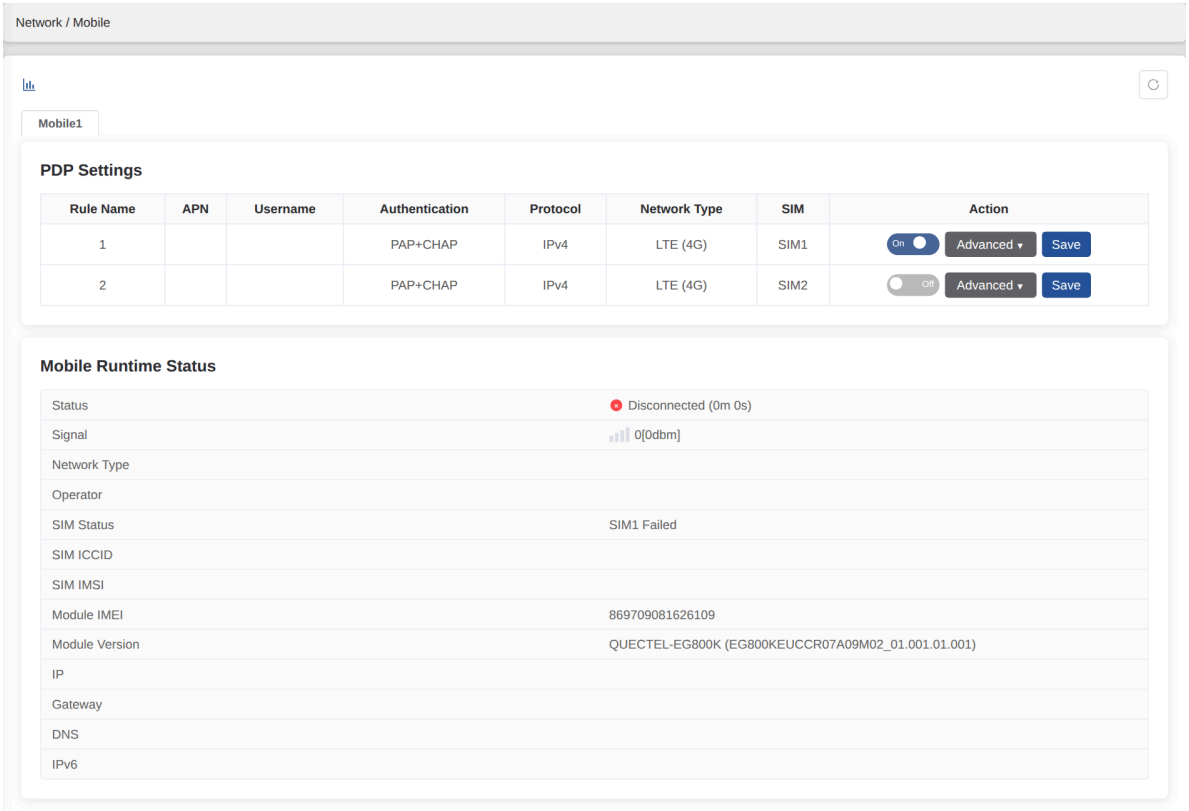


Figure 4-5 Cellular settings

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: RESOLVE A RECOGNIZED SIM THAT CANNOT REACH THE NETWORK

Use an activated data SIM with matching bands and no billing restriction. Install with power disconnected and attach the model’ s cellular antennas. Obtain APN, credentials if any, auth mode, PIN and private-network reachability from the carrier.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Enable	enabled	Use an actually fitted modem
APN	carrier APN	Copy the exact spelling
Username / Password / Authentication	carrier handover	Leave blank only when the carrier specifies no authentication; not Web admin
PIN	follow SIM state	Blank if PIN is disabled; verify before retrying
Protocol / Network Type	per subscription and coverage	Start with automatic network selection; follow carrier IP-family requirements

SAVE, TEST AND OBSERVE

1. Record ICCID/SIM state. If absent, power down, reseat and check SIM format. If recognized, inspect registration, signal and carrier; after registration inspect session IP, DNS and current egress.
2. Save carrier settings and wait for registration/session updates. In Applications > Network Tools, enter the gateway cellular interface current local IP in Source IP; if left blank, test using and verify the default-route egress, test the project server IP and DNS, then open the platform from a LAN client.

PASS CRITERIA AND DIAGNOSIS

Require SIM recognition, registration, a session IP and the actual platform connection; signal strength does not prove a usable data session.

Registered without IP: check APN, billing and private-APN authorization. IP works but names fail: check DNS. Gateway Internet works but clients fail: inspect LAN gateway/routes.

Finish and restore: Restore the APN/network mode and remove experimental band/cell locks. Retain the original configuration and timestamped logs for the carrier.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	APN	Use the public/private APN provided for the SIM, not a universal value copied from another carrier
2	Username / Password / PIN	Fill only as required by the SIM provider; PIN is the SIM lock code, not the Web password
3	Authentication	Match NONE, PAP, CHAP or PAP+CHAP to the APN authentication requirements
4	Protocol	Choose IPv4, IPv6 or IPv4v6 as supported by the modem and carrier

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
5	Network Type	AUTO chooses an available network; fixed types must be supported by the installed modem
6	SIM / Enable	Select the tray for the profile and check SIM availability and profile enable state separately
7	Band / Cell Lock	Use only with a defined radio plan; an incorrect restriction can prevent registration
8	Runtime Status	Inspect registration, signal, SIM, IP, gateway and DNS. SIM detection does not prove a data connection

Check the result Registration and a data connection succeed; an address is assigned and external IP/DNS tests pass

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
SIM detected but connection fails	Check SIM service, APN, authentication and antennas, then inspect connection status and logs.

4.5 DHCP service

Path Network > DHCP

DHCP assigns addresses to wired and wireless clients. Pools must belong to their LAN subnet and coordinate with static assignments; adding a conflicting DHCP server does not solve address planning.

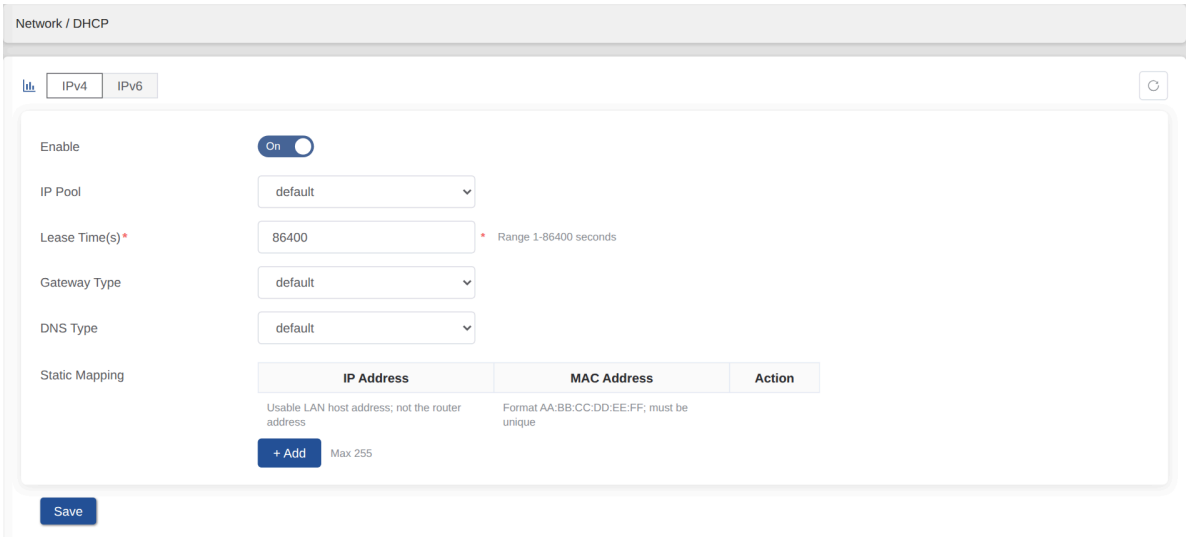


Figure 4-6 DHCP service

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: LEASE ADDRESSES AUTOMATICALLY AND RESERVE A PLC ADDRESS

First set LAN to 192.168.10.1/24. Keep the test PC static at .10 and test leases with another client. Static PLC .20 and camera .30 stay outside the pool.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Pool Start / End	192.168.10.100 / 192.168.10.199	Dynamic pool
Gateway	192.168.10.1	LAN gateway
DNS1	192.168.10.1	Requires working gateway DNS forwarding; repair uplink DNS first
Lease Time	keep current value	Record the displayed unit; do not mix seconds and minutes

SAVE, TEST AND OBSERVE

1. Enable DHCP, enter the table and save. Set the client to automatic IPv4/DNS. On Windows run ipconfig /release, ipconfig /renew and ipconfig /all.
2. For a reservation, copy the actual PLC MAC from Clients, add binding 192.168.10.20, switch the PLC to DHCP and renew. A PLC using a static address does not need a duplicate reservation.

PASS CRITERIA AND DIAGNOSIS

Expect .100–.199/24, gateway .1 and DNS .1; test Web and the actual uplink service. 169.254.x.x indicates no lease.

Unexpected gateway/subnet: inspect a second DHCP server on LAN. Renew after a LAN change; saving alone does not clear old leases.

Finish and restore: Remove the new reservation or restore the pool after checking static-address conflicts.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Pool Start / End	Keep the pool within its LAN subnet and exclude gateway and occupied static addresses
2	Gateway	Default gateway delivered to clients; it need not be the DHCP server address
3	DNS1 / DNS2	DNS resolver addresses sent to clients; check the resulting client configuration
4	Lease Time	Client address lease lifetime in seconds

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
5	Static Binding	Reserve an address by MAC; the client may need to renew or wait for its current lease
6	Clients	Check assigned addresses; a successful lease does not verify upstream reachability

Check the result A new client receives an in-pool address, intended gateway and DNS without an address conflict

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
The PC receives another gateway	Check for another DHCP server, then the LAN/VLAN membership and address pool.

4.6 Link Configuration and failover

Path Network > Link Configuration

This page sets uplink priority and keepalive; it does not replace WAN addressing, cellular APN or wireless association. The reference unit offers the combinations below.

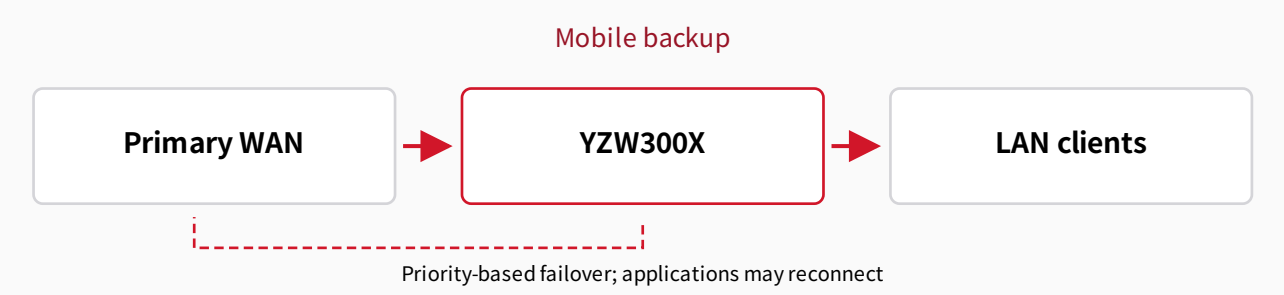


Figure 4-7 Link Configuration and failover

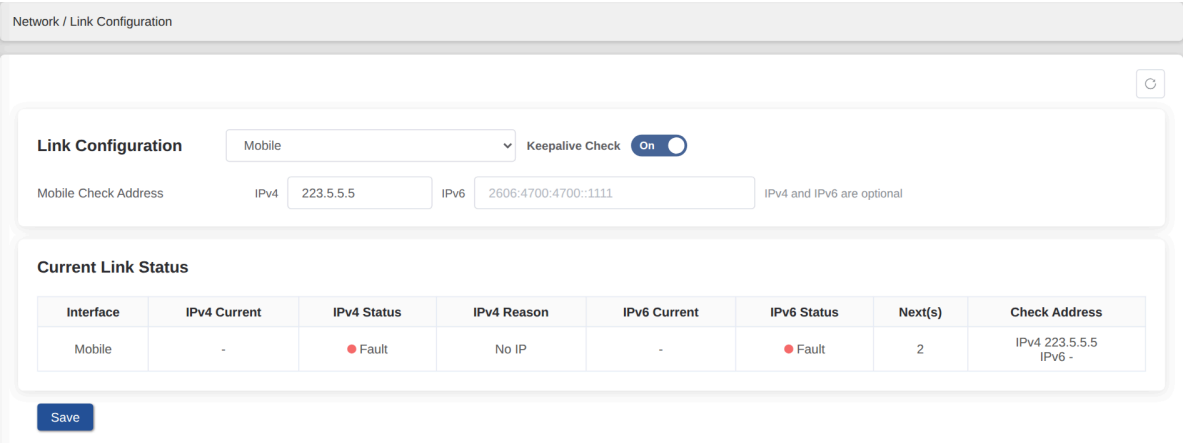


Figure 4-8 Link Configuration and failover

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

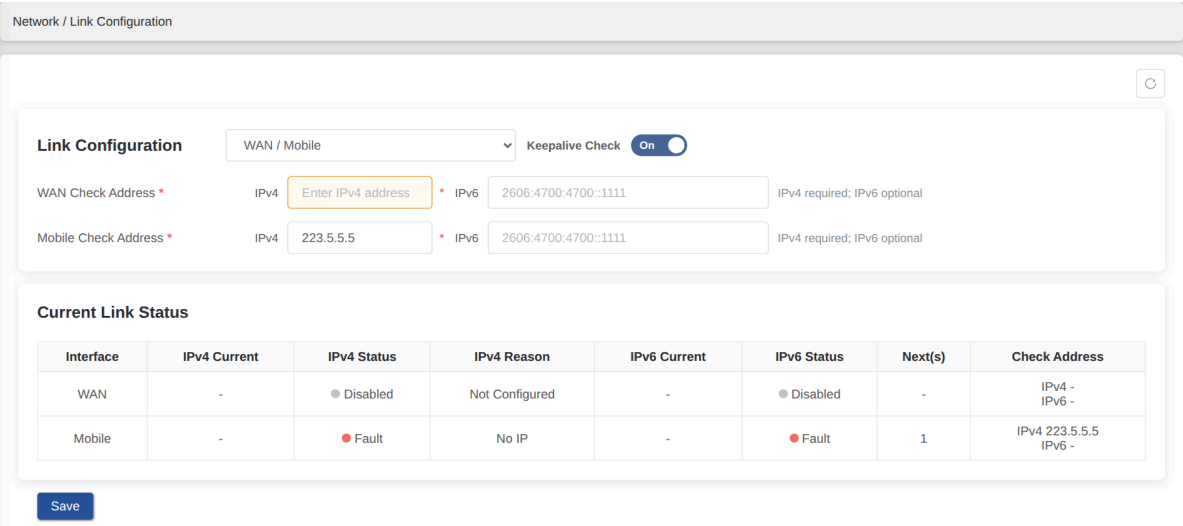


Figure 4-9 Link Configuration and failover

Native unsaved form / browser draft; not applied to device

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: PROVE WIRED PRIORITY, CELLULAR BACKUP AND RECOVERY

Prove WAN and cellular applications individually before this test. Disable a conflicting load-balancing

plan. WAN test gateway is 192.168.20.1; cellular probes need a real carrier-reachable ICMP target, not the WAN private address.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Link Configuration	WAN / Mobile	Use this combination if present; wired first
Keepalive Check	enabled	Configure for multiple actual interfaces as required
WAN IPv4 Check Address	192.168.20.1	Proves reachability only to upstream gateway; use a reachable end-to-end target to detect upstream outages
Cellular IPv4 Check Address	carrier-reachable IP	One literal IPv4 address per interface

SAVE, TEST AND OBSERVE

1. Save and record Current, Status and Reason for IPv4/IPv6 plus the LAN application result. A healthy non-current backup is normally expected.
2. At the unit, disconnect only the WAN uplink cable, retaining LAN management. Record fault time, egress change and application reconnection time. Restore WAN, observe recovery and retest.
3. Also test upstream Internet failure with Ethernet still connected. If 192.168.20.1 still answers, that probe cannot detect the upstream outage; choose an end-to-end reachable target and repeat.

PASS CRITERIA AND DIAGNOSIS

Pass when the application recovers; no fixed switching time is promised. No switch: check backup IP/service. Switched without data: check application reconnect and platform IP allowlists.

Finish and restore: Restore the cable and original priority plan; finish only after checking egress and application. Check modes, probe conditions and switching behavior in this manual Link Configuration section and the delivered UI. Verify each uplink first, then application recovery in a maintenance window.

Link Configuration controls preference and keepalive; it does not replace WAN addressing, cellular APN or Wi-Fi association. Validate each physical link available on this model, then choose an exposed combination. Combinations in screenshots belong to the reference unit.

STRATEGY	IMPLEMENTATION
Wired first	Use healthy wired backhaul, then a verified cellular backup on failure
Cellular first	Select cellular as primary and verify the wired backup
Wireless uplink	Use only with fitted Wi-Fi and a delivered Station mode

ENTER KEEPALIVE ADDRESSES

Configure the actual participating interfaces on this unit. Each target must be reachable and answer ICMP through its assigned exit. For a private network, use a permitted target inside that network rather than copying screenshot addresses.

HOW TO CONFIGURE

1. With one actual participating interface, keepalive can be on or off. Off means this active connectivity check is not performed
2. With two or more participating interfaces, keepalive is mandatory and every interface needs an IPv4 target; configuring only the primary is incomplete
3. Enter a literal dotted-decimal IPv4 address, not a hostname. IPv6 targets are optional; use valid literal IPv6 addresses, separated by commas if several are entered
4. After saving, inspect each address family separately. Cellular keepalive has the special behavior explained below

READ CURRENT LINK STATUS

Healthy means the check or interface usability conditions are met. Current identifies the exit actually selected for that address family. A healthy backup that is not Current is normal in failover operation.

HOW TO CONFIGURE

1. Read IPv4 Current, then the row state and reason. A healthy backup does not mean traffic is being distributed across links
2. Check IPv6 Current and IPv6 Status separately. Working IPv4 does not establish working IPv6, and the two families need not select the same exit
3. Use reasons such as No IP, STA Disconnected, LAN Subnet Conflict, No Target or Probe Failed to correct the corresponding prerequisite first
4. Cellular IPv4 usability follows modem-assigned addressing and readiness. Keepalive packets keep the bearer active; their replies do not drive cellular failover. A private APN is not failed merely because a public probe target is silent
5. After the preferred link meets recovery health conditions, priority-based failback applies. Existing sessions may require application reconnection; failover does not guarantee seamless retention of every session

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Link Configuration	Use the selected mode from left to right; WAN is a wired group ordered by WAN number and may contain several ports
2	Keepalive Check	Optional for one interface; mandatory for several. Cellular probes keep the bearer active rather than determining failure from replies
3	IPv4 / IPv6 Check Address	Each multi-link interface requires a literal IPv4 target. IPv6 is optional; comma-separate several IPv6 targets. Do not enter hostnames

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
4	Current / Status / Reason	Distinguish selected exit, health and reason; inspect IPv4 and IPv6 independently. A backup can be healthy without being selected
5	Next(s)	Probe scheduling information; it does not establish a fixed switchover time for every scenario

Check the result Each uplink works independently before service behaviour is checked through failure, switchover and recovery

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
WAN selected but two probe targets are required	Inspect the table: the WAN group may include WAN and WAN2. Count participating interfaces, not mode labels.
Keepalive cannot be turned off	It is mandatory in multi-interface mode. If one interface is intended, review the actual participating interfaces and site plan.
Settings or Save are unavailable	Check for enabled Load Balance or a read-only legacy configuration. Back up and choose the intended policy before following the page prompt.
Healthy but the service is unavailable	Health is not server availability. Check routes, DNS, policy and the service port; verify the private-side path for a private APN.

4.7 DDNS

Path Network > DDNS

DDNS publishes a changing egress address to a hostname. Successful resolution and inbound service access are separate: check carrier addressing, upstream NAT, forwarding and policies.

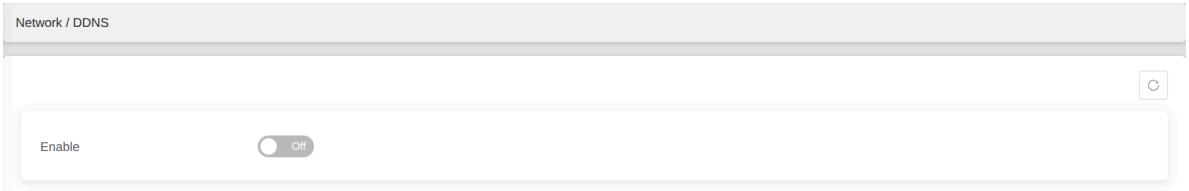


Figure 4-10 DDNS

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: KEEP A HOSTNAME ALIGNED WITH THE REACHABLE PUBLIC ADDRESS

First prove a reachable public address and any upstream mapping. Obtain hostname, account/token and update permission from the selected DDNS provider.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Service / Domain	Registered provider / registered FQDN	Provider and registered FQDN must match
Username / Password / Token	provider credentials	Follow provider requirements; not Web admin
Interface / Address Family	Actual public egress / required IPv4 or IPv6	Specify which egress/family to update

SAVE, TEST AND OBSERVE

1. Save/enable, inspect update status and run nslookup with the registered hostname from an external network; compare with actual public egress.
2. From outside, access an approved real service port; DNS success alone is insufficient.

PASS CRITERIA AND DIAGNOSIS

Update fails: inspect credentials/provider. Old resolution: inspect cache/TTL. Correct address but blocked port: inspect CGNAT, upstream forwarding, firewall and application.

Finish and restore: Disable test updates, restore DNS/egress choices and revoke test tokens.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Service	Select the registered provider; update and authentication requirements are provider-specific
2	Domain	Full hostname authorized for update by the account
3	Username / Password / Token	Use provider credentials or token, not the router Web password
4	Interface / Address	Check the address being published; a successful update does not prove inbound reachability
5	Update Interval	Periodic update interval, using the page units
6	IPv6	Choose IPv6 publication according to the DNS record and provider support
7	Status	Check authentication and update results against the provider response

Check the result DNS resolves to the intended reachable public address and the target service is accessible

TROUBLESHOOTING

SYMPTOM	**WHAT TO CHECK**
The name resolves but remote access fails	Check inbound reachability, port mapping and policy. DDNS does not create a remote tunnel.

CHAPTER

05

Applications

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

5. Applications

5.1 Choose acquisition and data processing

SITE REQUIREMENT	START HERE	CONDITION
Read instrument values to MQTT	M1: Modbus→device→command	Prove mock255, then replace with the real register map
Forward serial bytes to an existing server	DTU: echo FIELD-001 first	Transparent forwarding does not parse registers

METHOD	DATA PATH	USE
DTU	Raw serial frames ↔ TCP/UDP/MQTT	Server already parses the device protocol
Modbus	RTU/TCP → command values → reporting	Instruments with a defined register map

Validate one known read-only point before reporting. Raw DTU frames and acquisition JSON writes use different formats.

5.2 ICMP monitoring

Path Application > ICMP

ICMP rules periodically test a path and execute the selected action after failure conditions are met. Choose targets that distinguish a silent host from an actual link failure.

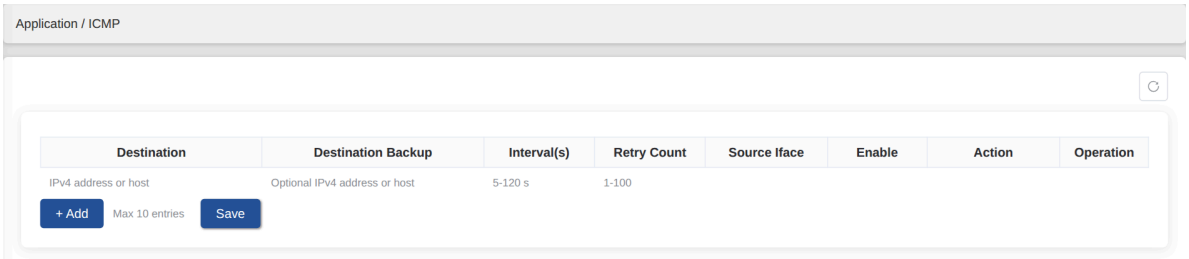


Figure 5-1 ICMP monitoring

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: TEST PROBE ACTIONS WITH A RECOVERABLE FAULT

ICMP actions differ from link-priority probes. Work beside the unit with LAN management. Reboot/modem-reset tests require an agreed maintenance window.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Target	192.168.20.1	Wired lab upstream; production needs an ICMP target reachable through the chosen egress
Source Interface	WAN	Actual egress
Interval / Retry	10 s / 3	Use page units
Action	reboot	Enable beside the unit only in the maintenance window; restore the target path immediately after triggering

SAVE, TEST AND OBSERVE

1. Prove the same-source probe in Network Tools first. If no alarm-only action exists, keep the rule disabled until a reboot maintenance window.
2. During the window interrupt the target path, record failures/action/recovery, restore the target and verify triggers stop and the platform recovers.

PASS CRITERIA AND DIAGNOSIS

Repeated reboots: disable the rule and inspect blocked ICMP, source and timing. A Cellular2 option does not prove a second modem is fitted.

Finish and restore: Disable the test rule, restore original action/timing and verify stability.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Target / Backup Address	Probe the required path; a backup distinguishes a failed target from a failed uplink
2	Source Interface	Choose the egress so a healthy alternate link does not mask a failed target link
3	Interval / Retry	Set probing cadence and failure conditions before triggering an action
4	Action	Choose the exposed recovery action, such as reboot or modem restart; it interrupts the affected service
5	Enable	Enable after validating that the chosen targets are normally reachable

Check the result Probe targets match their uplinks and results reflect actual link health

5.3 Scheduled tasks

Path Application > Timer

Scheduled tasks execute maintenance events in device local time. Verify synchronization and time zone before configuring them.

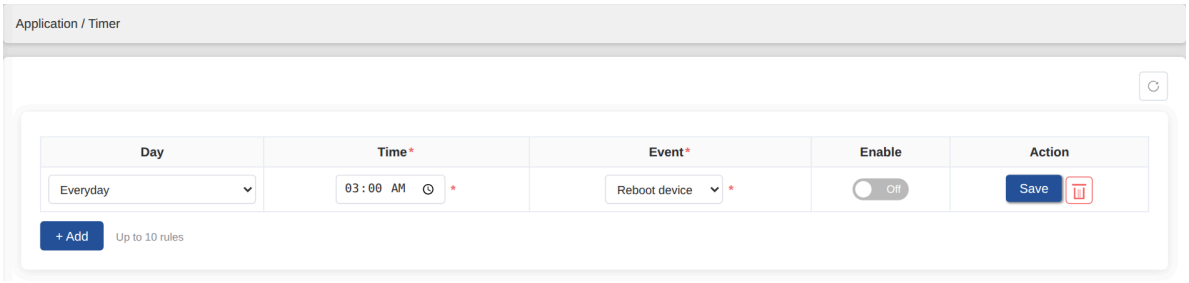


Figure 5-2 Scheduled tasks

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: SCHEDULE A TASK AGAINST VERIFIED SITE TIME

Confirm local timezone, date/time and synchronization first. Identify actually fitted modems and the maintenance window; a scheduled reboot interrupts service.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Day / Time	Test day / 10 minutes after current device time	Use device-local time and record the date
Event	reboot	Device reboot in a maintenance window; interrupts service
Enable	initially off	Enable only after checking the effect

SAVE, TEST AND OBSERVE

1. Save the new task, recheck weekday/time/timezone/event and enable only in the maintenance window. Retain LAN access and record logs plus application recovery.

PASS CRITERIA AND DIAGNOSIS

No trigger: inspect device time, weekday and relevant switches. Service does not recover: inspect uplink, application reconnect and modem state.

Finish and restore: Delete the temporary schedule immediately after testing to prevent recurrence and confirm original schedules remain.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Day	Select a weekday or Everyday, interpreted in the device time zone
2	Time	Use the displayed time format after checking system clock and time zone
3	Event	Choose the maintenance action; saving a schedule does not execute it immediately
4	Enable / Save / Delete	Control rule activation, committing edits and removing rules

Check the result Task time, timezone, target and enabled state match the plan and the resulting service state is correct

5.4 Network diagnostics

Path Application > Diagnostics

Diagnostics test reachability and routes from a chosen source; they do not replace application-protocol testing.

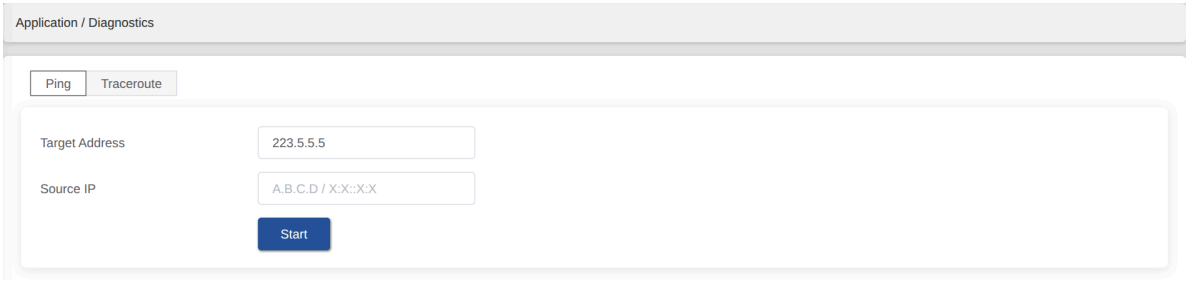


Figure 5-3 Network diagnostics

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: SEPARATE AN INTERNET FAILURE INTO FOUR CHECKS

For the static-WAN case LAN is 192.168.10.1, WAN 192.168.20.2, upstream .20.1. Obtain a real project server IP/hostname from its handover; do not test the Internet using a fictional hostname.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Mode / Destination	Ping / 192.168.20.1	First hop
Source	actual uplink under test	Avoid hiding failure through another working link

UI FIELD	ENTRY	BASIS
Mode / Destination	Ping / actual server IP	Separate routing from DNS
Mode / Destination	DNS / same server hostname	Resolution must match the platform plan

SAVE, TEST AND OBSERVE

1. Check PC IP/gateway, first hop, server IP and DNS, then open the application. Record source interface, destination, time and result for each test.
2. If the target blocks ICMP, use Windows Test-NetConnection with the real IP/port or the application itself.

PASS CRITERIA AND DIAGNOSIS

First hop fails: inspect wiring/IP. First hop works but server fails: inspect upstream routing/carrier. IP works but name fails: inspect DNS. Application alone fails: inspect port/auth/certificate time/platform permission.

Finish and restore: Stop diagnostics, restore temporary source/route choices and retain the results.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Mode	Ping tests reachability; Traceroute inspects the route
2	Destination	Test actual IP and hostname targets separately to distinguish DNS and connectivity problems
3	Source	Specify the source exposed by the interface to test a particular path
4	Start / Result	Inspect loss, delay or route; an intermediate non-response does not necessarily make the destination unreachable

Check the result Local, gateway, external IP and DNS tests identify and record the failing layer

5.5 SMS settings and manual sending

Path Application > SMS

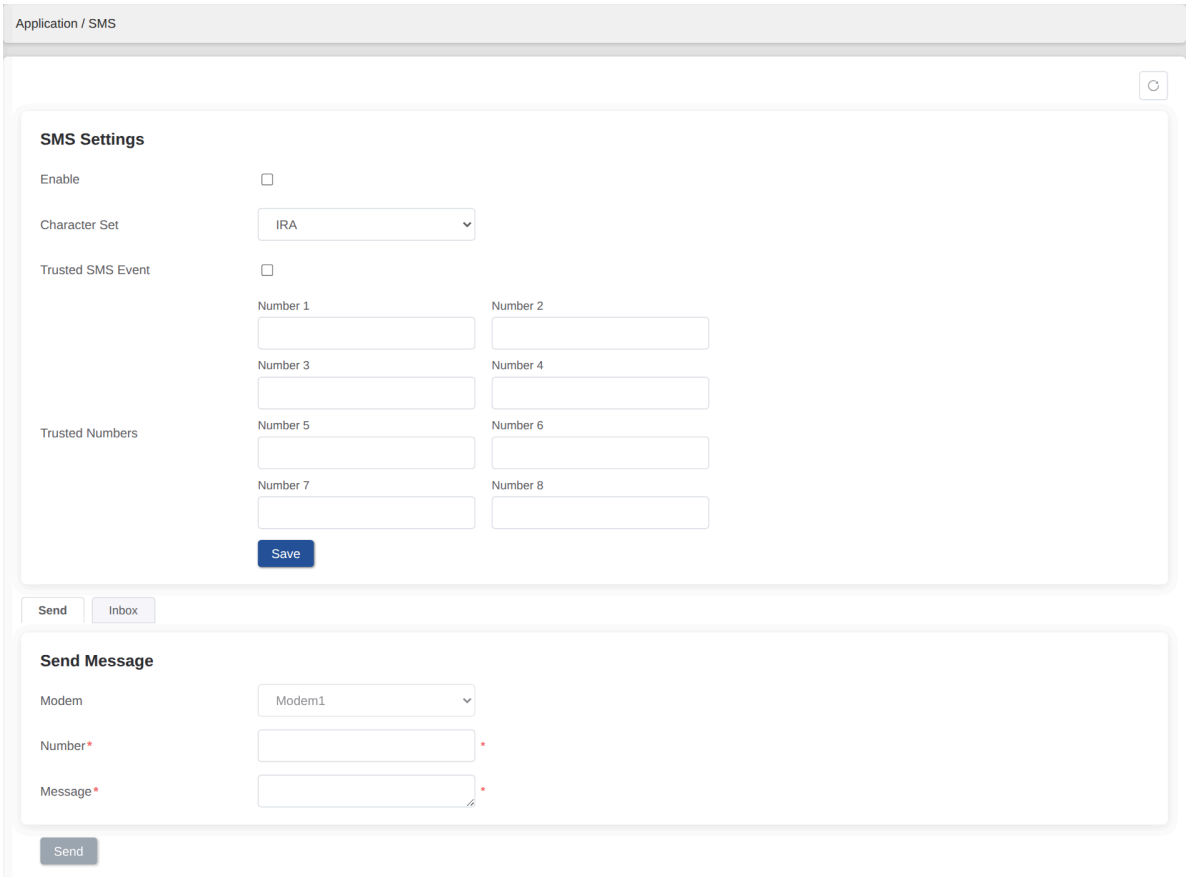


Figure 5-4 SMS settings and manual sending

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: VERIFY MANUAL SMS BEFORE AUTOMATIC NOTIFICATION

The SIM subscription, modem and carrier must support SMS on the current network. Obtain recipient consent and the real number; keep LAN management.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Modem / SIM	fitted registered modem	Not every menu option is fitted hardware
Recipient / Content	Authorized real number / FIELD-001	Start with short ASCII; use carrier number format

SAVE, TEST AND OBSERVE

1. Check SIM/registration, enter the number and FIELD-001 on the manual-send page, send and record result/time; verify actual receipt.
2. Enable automatic notification or authorized SMS control only after manual testing. Verify available source/auth restrictions and avoid production shutdown commands.

PASS CRITERIA AND DIAGNOSIS

Failure: inspect credit, SMS service and network support. Accepted but absent: inspect number, filtering and carrier delay. Data connectivity does not prove SMS capability.

Finish and restore: Remove test numbers/messages/control rules and restore notification settings.

SMS requires modem and SIM service support. Select IRA, GSM or UCS2 to match encoding. The page provides eight trusted-number slots. Trusted events and manual sending are separate operations and do not imply unrestricted remote control.

1. Confirm registration and SMS service.
2. Configure enablement, character set and trusted numbers/events, then save.
3. In Send Message select Modem1 and send one test message to an approved number.
4. Verify page feedback and actual receipt; submission alone is insufficient.

5.6 DTU transparent transport

Path Application > DTU

DTU transports messages between serial and network connections. Match protocol, client/server role and serial settings to the peer; raw transport does not automatically interpret the equipment protocol.

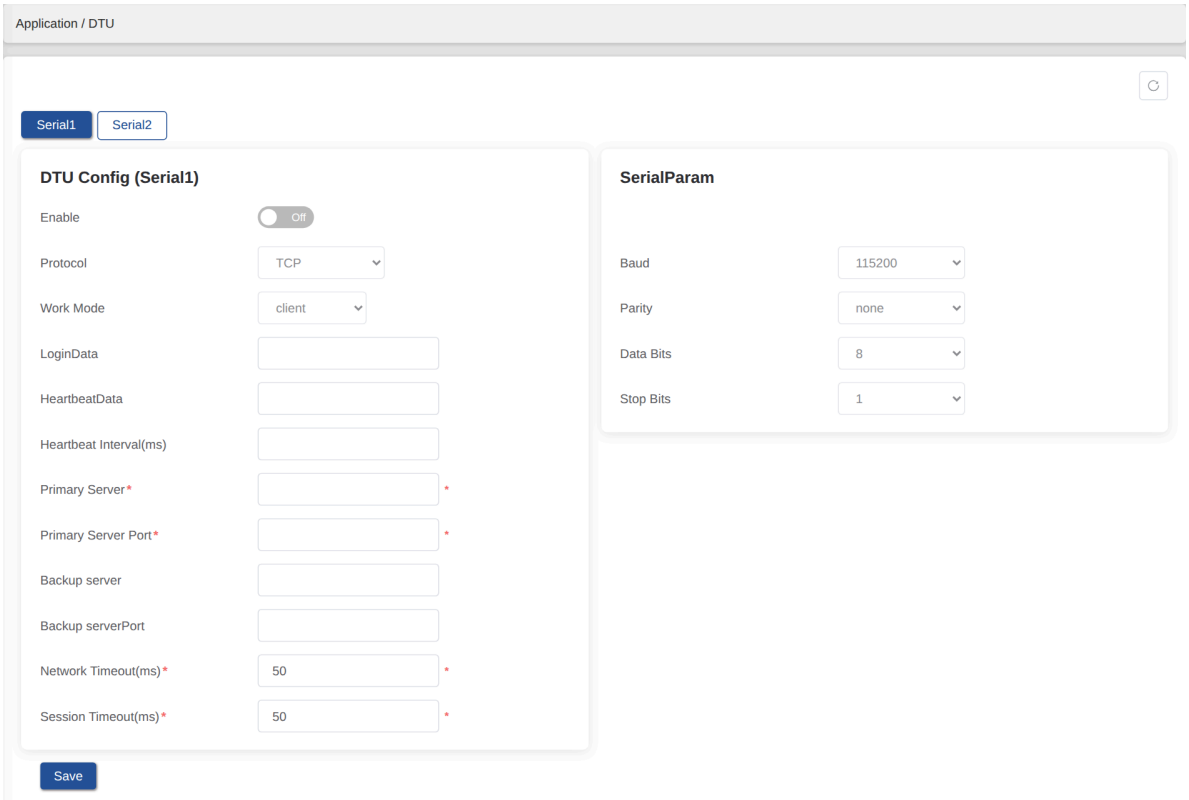


Figure 5-5 DTU transparent transport

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: USE TCP ECHO TO PROVE TRANSPARENT BYTE ROUND TRIPS

Confirm a free port from this model’ s pin table. With power off, connect a matching USB RS232/RS485 adapter; never connect RS232 levels to RS485. PC 192.168.10.10 runs bench. Use a serial terminal that displays TX/RX bytes and can send ASCII.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Serial	verified free port	Use the model mapping below; do not guess Serial1
Baud / Data / Parity / Stop	9600 / 8 / none / 1	Match gateway and terminal
Protocol / Work Mode	TCP / Client	Gateway initiates connection
Primary Server / Port	192.168.10.10 / 5001	PC echo service
Registration / Heartbeat Packet	off or blank	Exclude extra bytes on first test
Network Timeout(ms) / Session Timeout(ms)	50 / 50	TCP/UDP lab values, both milliseconds; these are not uplink selectors
MQTT Client ID	field-dtu-001	MQTT subcase only; unique on this broker
MQTT QoS / Keepalive(s)	0 / 60	MQTT subcase only; keepalive in seconds
MQTT Transport / CA / SN Suffix	plain / none / Off	Isolated MQTT subcase only; disable SN topic suffixes

SAVE, TEST AND OBSERVE

1. Stop other acquisition/DTU/flow use of this port. Save DTU network settings and the Serial tab, then enable the instance.
2. Disable terminal local echo and send FIELD-001. Expect the exact bytes back through gateway→TCP service→gateway, once in TX and once in RX.
3. For UDP, select UDP Client and server port5002. For MQTT use broker 192.168.10.10:1884, field/DemoOnly2026, Publish=plant/site1/dtu/up and Subscribe=plant/site1/dtu/down. Watch upstream, then publish --topic plant/site1/dtu/down --payload FIELD-002 and inspect serial RX.
4. TCP server subcase: select server, Local Port5001 and save. Run python site_lab.py echo --host 192.168.10.1 --port 5001 --seconds 30. The serial terminal should receive FIELD-001; return the exact bytes within30 seconds without CR/LF. Expect PASS echo.

PASS CRITERIA AND DIAGNOSIS

No connection: inspect PC firewall/listener5001. Network connected without bytes: inspect electrical type, pins, settings and ownership. Garbled data: inspect baud/parity. Local echo does not prove a network round trip.

Finish and restore: Disable test DTU, release the port and restore the original service; power down before rewiring.

CHOOSE HOW THE NETWORK APPLICATION CONNECTS

SITE NEED	DTU MODE	CONNECTION DIRECTION
The gateway forwards serial data to a remote server as a client	TCP / UDP Client	The gateway initiates TCP or sends UDP; enter the server address and listening port
A host application initiates access to a field serial device	TCP / UDP Server	YZW300X listens; the host must reach the listener address and port
Exchange serial data over MQTT topics	MQTT	Configure the broker, credentials and publish/subscribe topics; verify both directions

OTHER PROTOCOL MODES ON THIS PAGE

OPTION	CONFIGURATION AND SCOPE
MODBUS	Modes include modbus_rtu_master/slave and modbus_ascii_master/slave. Match serial/network roles, local port, primary/backup destinations and timeouts. This DTU protocol gateway is distinct from the device/command/MQTT point workflow in Modbus Collect.
DNP3	Choose master or outstation to match the peer. Set server/port and network/serial data timeouts in ms. Match none/hardware flow control to real wiring; TX/RX/GND alone does not establish hardware handshake lines.
AT	Select Mobile1 for modem-specific engineering diagnostics. Commands and effects follow modem/service instructions; do not send ordinary application frames as AT commands.

CLIENT: CONNECT SERIAL EQUIPMENT TO A SERVER

Use this mode when the remote server listens and the gateway initiates communication. Start the receiving server before configuring the gateway.

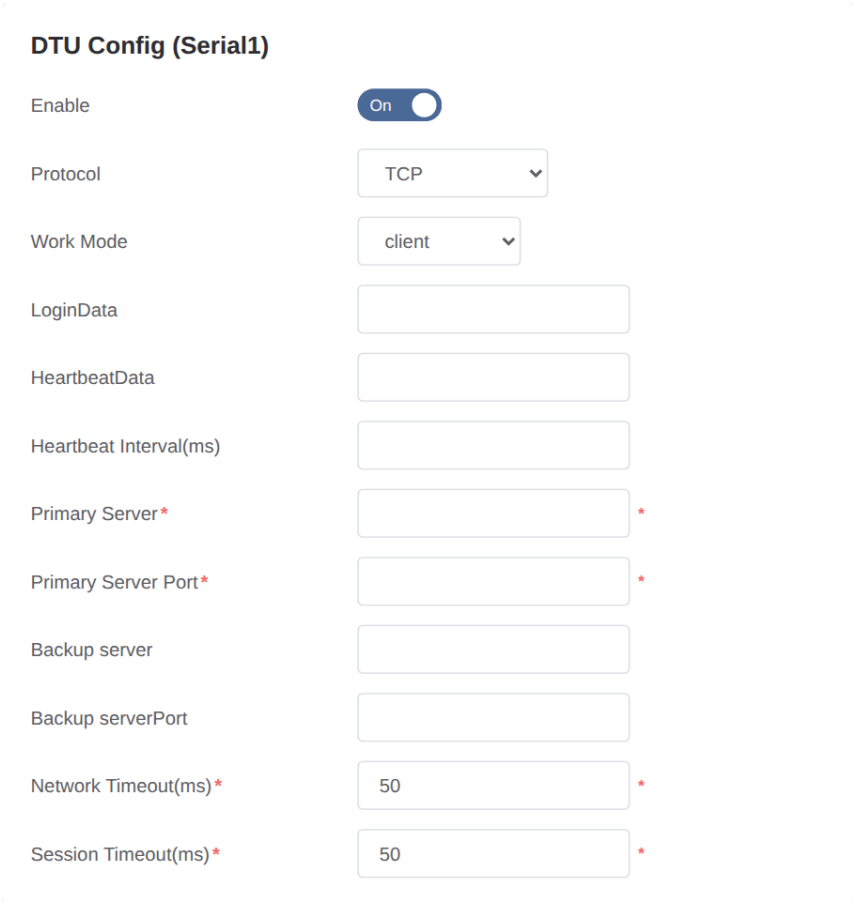


Figure 5-6 Client: connect serial equipment to a server

Native unsaved form / browser draft; not applied to device

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Protocol / Work Mode	Select TCP or UDP and client mode; the gateway initiates the connection or sends to the peer
2	Primary Server / Port	Enter the reachable address and service port of the serial-data receiver, rather than the gateway listener
3	Backup Server / Port	Complete both fields when a backup destination is required; otherwise leave both blank
4	Registration Packet	Identify the connection to the peer; agree the contents with the receiving application. This is not the slave address

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
5	Heartbeat Packet / Interval	Agree the heartbeat content and cadence with the receiver, separately from acquisition and MQTT reporting
6	Network / Session Timeout (ms)	Configure the data-wait parameters in milliseconds, as labelled in the interface, to match the connected application

SERVER: LET A NETWORK APPLICATION REACH SERIAL EQUIPMENT

Use this mode when the application initiates communication with the gateway. Match its destination to the local listener and provide the required routing and access policy.

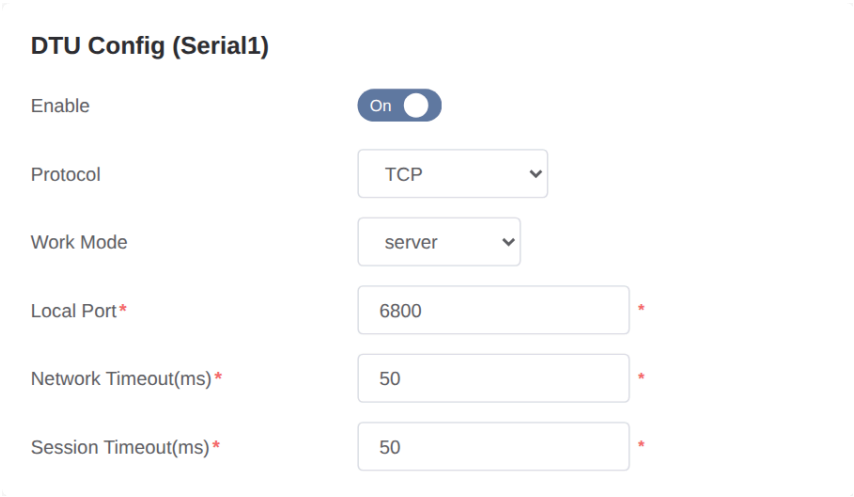


Figure 5-7 Server: let a network application reach serial equipment

Native unsaved form / browser draft; not applied to device

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Protocol / Work Mode	Select TCP or UDP and server mode; the remote application contacts the gateway
2	Local Port	Set the local listener without conflicting with Web, VPN or other services
3	Network / Session Timeout (ms)	Set the data-wait parameters in milliseconds; they are not a periodic acquisition schedule

MQTT: TRANSFER DATA IN BOTH DIRECTIONS USING TOPICS

Distinguish the directions: serial-to-cloud uses the publish topic, and cloud-to-serial uses the subscribe topic. DTU raw messages are distinct from Modbus/PLC point-write JSON.

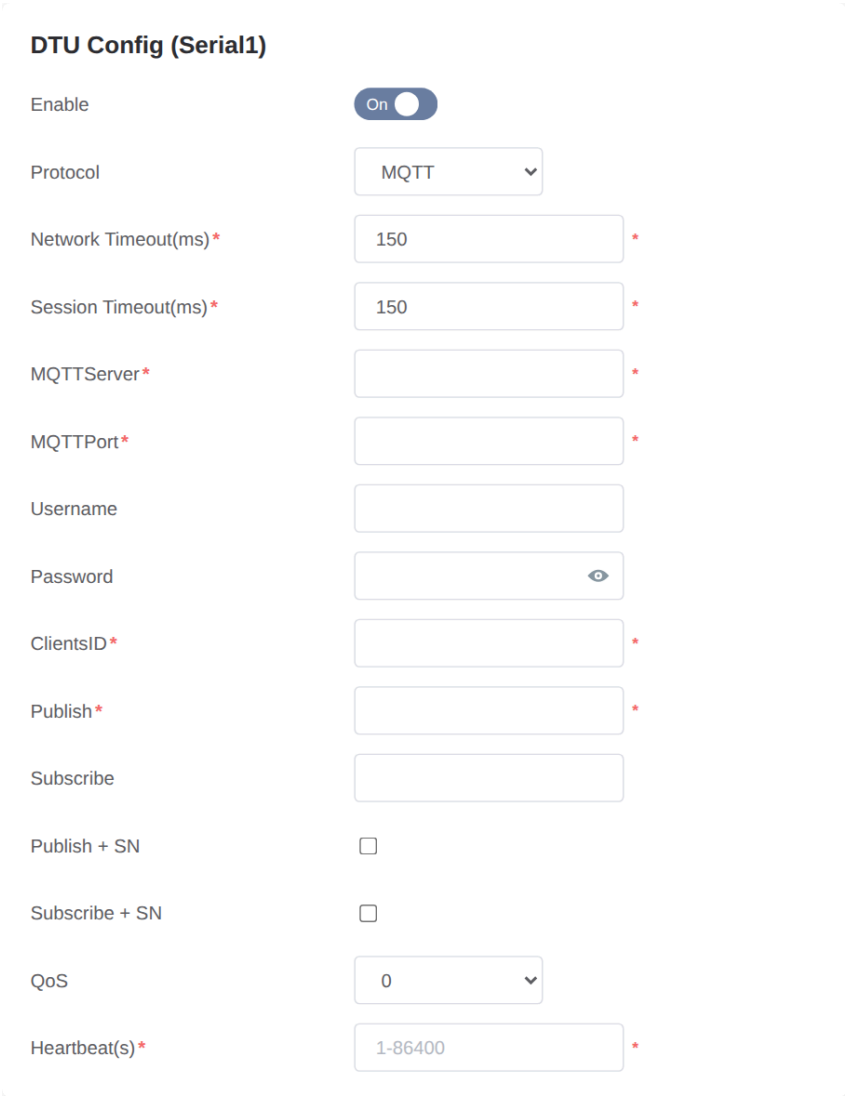


Figure 5-8 MQTT: transfer data in both directions using topics

Native unsaved form / browser draft; not applied to device

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Server / Port	Enter the MQTT broker address and matching listener port
2	Username / Password / Client ID	Use the broker credentials and a client ID distinct from other online clients
3	Publish Topic	Serial-originated data is published here; check the effective topic when the SN suffix is enabled
4	Subscribe Topic	Messages received on this topic are forwarded to serial; keep it distinct from the reporting topic

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
5	Network / Session Timeout (ms)	Set the data-wait parameters in milliseconds, distinct from MQTT keepalive in seconds and business reporting intervals
6	TLS / CA	For TLS, select the matching CA and check device time and certificate validity
7	QoS / Keepalive	Set message quality of service and MQTT keepalive for the receiving service

SERIAL PARAMETERS AND COMMUNICATION CHECKS

After the network settings, check the serial parameters on the same port. Test a known message in one direction and then the reverse, without starting another service on that port.

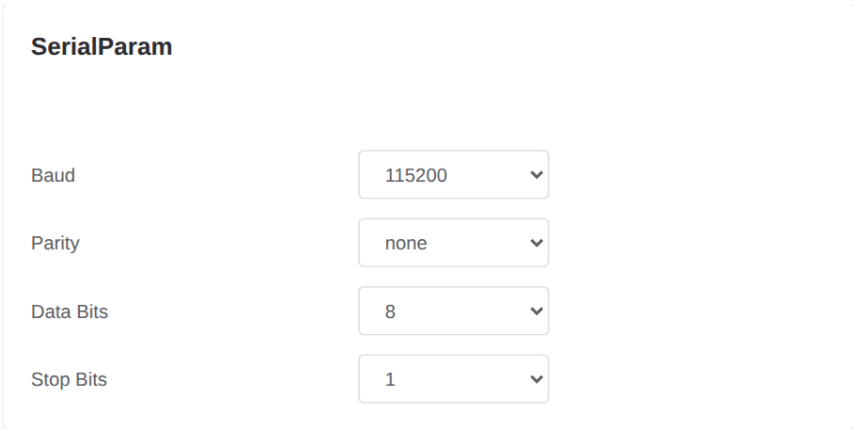


Figure 5-9 Serial parameters and communication checks

Native unsaved form / browser draft; not applied to device

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Serial Tab	Choose the required logical serial tab; use delivered documentation for its physical mapping
2	Baud / Parity	Match the attached equipment, including parity as well as baud rate
3	Data Bits / Stop Bits	Match both values to avoid received data that the peer cannot interpret
4	Port Ownership	Assign each physical serial port to one acquisition, transport or remote service

Check the result Known messages pass in both directions without port conflicts and reconnect behaviour meets the application need

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Network session works but serial data is absent	Check physical port mapping, A/B, baud, parity and ownership, then protocol/mode and the destination port.

5.7 Modbus acquisition and reporting

Path Application > Modbus Collect



Figure 5-10 Modbus acquisition and reporting

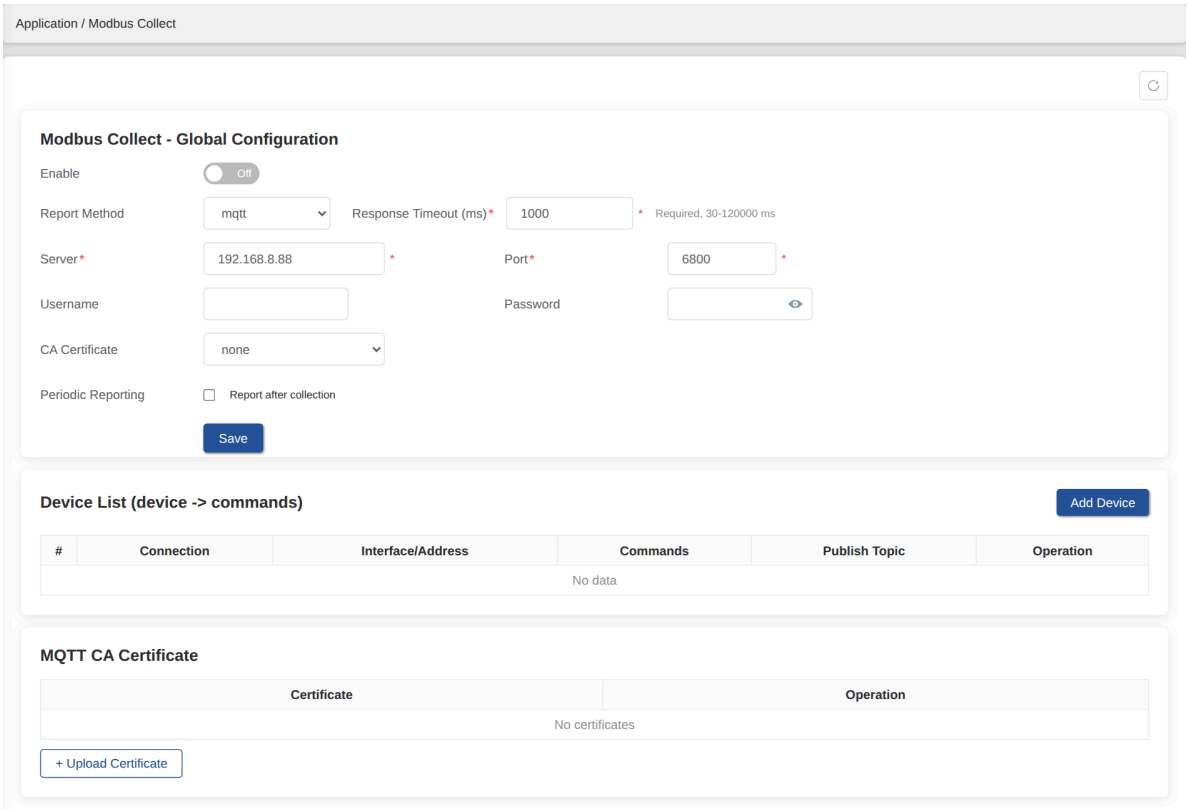


Figure 5-11 Modbus acquisition and reporting

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: M1: READ 255 FROM A SIMULATED INSTRUMENT AND REPORT BY MQTT

On an isolated LAN set the gateway to 192.168.10.1/24 and PC to 192.168.10.10/24, gateway .10.1. Get the Field Test Tools package from Product Documents / Shared Resources. Install Python 3.8+, open its extracted folder and run python site_lab.py bench --bind 192.168.10.10. Keep it open. Allow only the lab LAN to TCP1502/1884/5001/8080 and UDP5002 on the PC firewall.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Enable / Report Method	On / MQTT	Enable collection and MQTT reporting
MQTT Server / Port	192.168.10.10 / 1884	PC test broker, separate from the gateway broker
Username / Password	field / DemoOnly2026	Lab credentials for the supplied tool only
CA / TLS	TLS off	Plain transport on isolated LAN only; use platform certificates for production
Response Timeout	1000 ms	Enter 1 if the page uses seconds
Periodic / Report Interval	On / 5 s	Use the periodic-report option exposed on the page

SAVE, TEST AND OBSERVE

1. In a second PC window run python site_lab.py modbus-get --host 192.168.10.10. Expect values [255], proving the mock slave runs.
2. Add a TCP device as in the next section, then the temperature command. Save command, device connection and global settings in order; confirm acquisition is enabled.
3. Run python site_lab.py watch --host 192.168.10.10 --topic plant/site1/plc1/data --seconds 30 --expect temperature=255. The tool prints raw messages and PASS when it observes numeric 255.

PASS CRITERIA AND DIAGNOSIS

Require successful acquisition and an observed temperature=255. MQTT online alone is insufficient. No message: inspect broker/auth/topic then collection logs. Wrong value: inspect FC, start and type.

For a real instrument replace IP/port/unit/register map individually. 255 is a lab raw value; a 0.1 scale gives 25.5. Do not label raw 255 as 255°C.

Finish and restore: Disable the test connection, stop the tool with Ctrl+C and remove temporary firewall rules. Configure production credentials/TLS from the handover sheet.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Enable / Report Method	Enable acquisition and choose MQTT, TCP, UDP or IEC104, each with its own connection parameters
2	Response Timeout	30–120000 ms, distinct from polling/reporting intervals in seconds
3	Server / Port / CA	Reporting destination and MQTT CA, not the slave connection address

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
4	Immediate / Periodic	Periodic reporting: 1–86400 s. The first sample is immediate, later intervals send fresh values; IEC104 updates immediately
5	Device Connection	Up to 16 device connections and 32 commands per connection; TCP uses slave IP/port, RTU uses the actual serial port
6	Publish / Subscribe	Set separate data publication and cloud-write subscription topics per connection
7	Command	Configure name, slave, function, type, start/count, Writable and polling interval
8	IEC104 Mapping	Common address and IOA belong to IEC104 mapping, not Modbus register addressing

Check the result Correct local readback is established before matching command updates arrive at the cloud

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
MQTT connected but no data	Validate slave reads first, then check the publication topic and report mode. Broker connectivity does not validate acquisition.

5.8 Modbus device connection

Path Application > Modbus Collect > Add Device

The add window is a same-platform example. For RTU select this model’ s actual wired port; for TCP enter slave IP/port. Do not copy a reference window’ s logical port blindly.

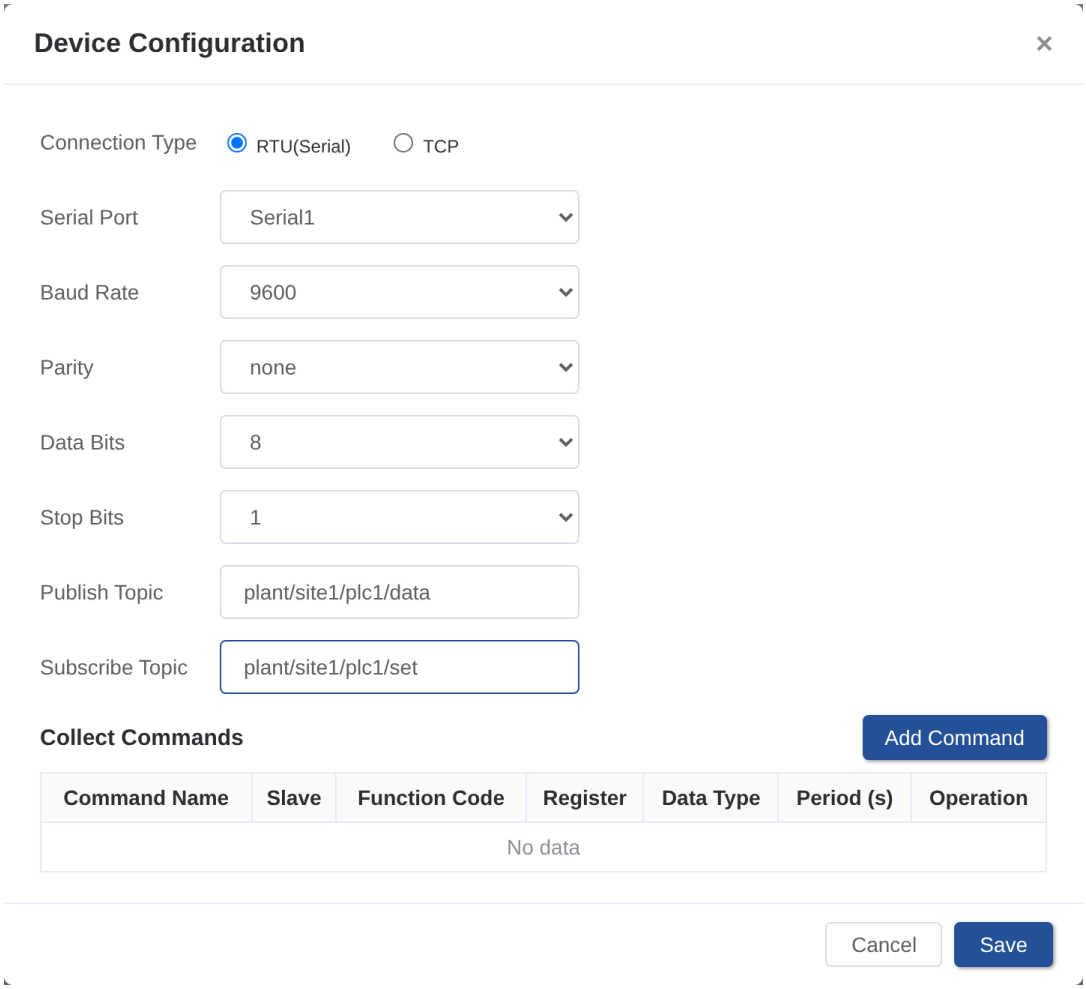


Figure 5-12 Add-device parameter example

Native unsaved form / browser draft; not applied to device

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: M1 DEVICE CONNECTION: TCP SLAVE AND TWO TOPICS

Start the M1 PC tool first. This TCP case consumes no serial port. Keep port 1502; that is where the mock listens.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Connection / TCP IP / Port	TCP / 192.168.10.10 / 1502	TCP slave endpoint
Publish Topic	plant/site1/plc1/data	Gateway publishes readings to broker

UI FIELD	ENTRY	BASIS
Subscribe Topic	plant/site1/plc1/set	Gateway receives write requests
Command List	temperature	Add the read-only command in the next section

SAVE, TEST AND OBSERVE

1. Add a TCP connection, fill the table, create temperature in Command List, then save device and global configuration.
2. From another LAN PC run Test-NetConnection 192.168.10.10 -Port 1502. Expect TcpTestSucceeded=True, then inspect gateway acquisition logs and the M1 subscriber.

PASS CRITERIA AND DIAGNOSIS

TCP open but collection times out: inspect unit address, function code and slave access. Topics are case-sensitive and slash-sensitive.

Finish and restore: Delete/disable and save the lab connection. Replace endpoints using the real instrument documentation.

PROCEDURE

1. Open Modbus Collect and select **Add Device**.
2. For RTU, select the physical serial port and match its settings. For TCP, enter the slave IP and its actual listening port.
3. If using MQTT, configure separate publish and subscribe topics. This example uses `plant/site1/plc1/data` and `plant/site1/plc1/set` respectively.
4. Add acquisition commands, review the parameters, then save the device configuration.

> Verify: the connection appears in the list with the intended interface and topics. The figure shows unsaved example topics, not factory settings.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	RTU / TCP	Choose the master-to-slave transport; the router is not the acquisition slave
2	Serial / Baud / Parity / Data / Stop	For RTU, match the bus; one connection configuration exclusively owns its port
3	TCP IP / Port	Use the slave service address and port, not the MQTT broker
4	Publish Topic	Acquired values are published here; the cloud subscribes for data

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
5	Subscribe Topic	The cloud publishes controls here; do not confuse it with the data topic
6	Command List	Configure slave/register commands within the connection, up to 32 per connection

Check the result The device connection, serial port or TCP endpoint and effective topics match the plan

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
A new device repeatedly times out	This model has one physical serial port. Check its actual mapping, wiring and electrical interface, or the TCP slave IP/port; then verify the slave address and communication settings.

5.9 Modbus commands and addressing

Path Application > Modbus Collect > Add Device > Add Command

32-bit integers and floating-point values occupy two consecutive registers. Match the slave's ABCD / CDAB float byte order. Do not enter display-style register numbers such as 40001 without converting them.

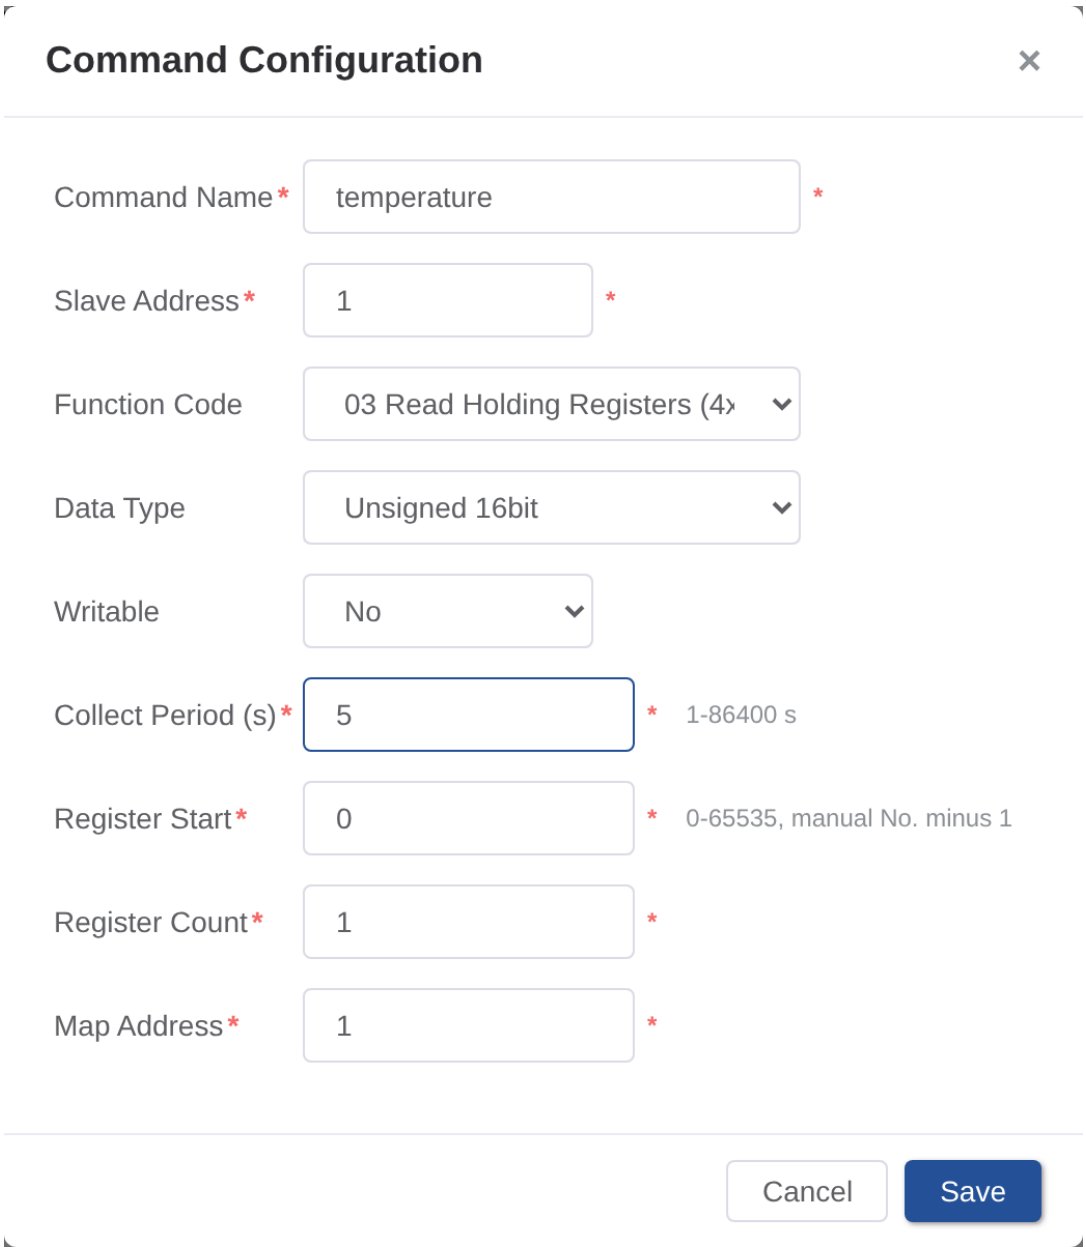


Figure 5-13 Read-only acquisition command example

Native unsaved form / browser draft; not applied to device

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: M1 COMMAND: 40001 CORRESPONDS TO PDU START 0

The tool exposes unit 1 holding register PDU address 0 with value 255. Confirm any traditional 40001 notation in the instrument map; do not enter 40001 as a PDU start.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Command Name	temperature	Unique name and JSON key
Slave Address / Function Code	1 / FC03	Read holding registers
Register Start / Count	0 / 1	Zero-based PDU address, one 16-bit register
Data Type	UInt16	Unsigned 16-bit choice on the page
Collect Period / Writable	5 s / Off	Read-only initially; independent of reporting period
Map Address	0	Enter0 for this case; not40001 or a TCP port

SAVE, TEST AND OBSERVE

1. Save the command, parent device and global configuration. Use the M1 watch command to observe temperature=255.
2. For a real slave confirm unit, FC, start, register count, type, word order and scale point by point. A 32-bit value occupies two 16-bit registers; select ABCD/CDAB from the instrument map, not by hiding byte-order errors with a scale.

PASS CRITERIA AND DIAGNOSIS

Exception 02 often means illegal address; 01 unsupported function. Unstable values: inspect type/order. All points time out: inspect the connection before changing addresses.

Finish and restore: Disable/delete the command and restore the original point list from its export.

Example reference: this section continues M1, the read-only temperature point. The 40001 entry explains address notation, not another acquisition address; use your instrument register map.

RELATE REGISTER NUMBERING TO THE START ADDRESS

This explains input conventions, not a real instrument map. The temperature example uses function 03, start 0, Unsigned 16bit, quantity 1, a 5 s period and Writable No initially.

ADDRESS CONVENTION EXPLICITLY STATED BY THE VENDOR	**WHAT TO ENTER**
PDU address or zero-based offset 0	Start 0; do not subtract 1 again
One-based numbering, with 1 as the first register	The first register has start 0
4xxxx denotes holding registers and 40001 is explicitly the first	Select function 03 and start 0 for that first register; do not enter 40001 unchanged

The function selects the object area, the slave address selects the device on the bus, and the start address selects a position inside it. Do not interchange them. A 32-bit value uses two consecutive registers and requires the correct vendor byte order. Check sign, decimal placement, range and update time after reading.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Command Name	Identifies reporting and MQTT writes; keep command names unambiguous within the connection
2	Slave Address	Slave identifier; devices on one RTU bus need distinct addresses
3	Function Code	01 coils, 02 discrete inputs, 03 holding registers, 04 input registers
4	Data Type	Six current Web types: int16, uint16, int32 ABCD, uint32 ABCD, float ABCD and float CDAB. Other backend byte orders or 64-bit types are not implied UI options
5	Writable	Enable only for intended control commands; areas 02/04 remain non-writable
6	Collect Period	Per-command polling: 1–86400 s, distinct from response timeout and MQTT reporting cadence
7	Register Start / Count	PDU addresses start at 0; 32-bit values occupy at least two consecutive registers
8	Map Address	Used for IEC104 IOA mapping, not MQTT command-name selection

Check the result Readback sign, decimal placement, range and updates match the slave documentation

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Scale, sign or decimal value is wrong	Check address offset, consecutive-register count, data type and byte order against the slave map.
Replies arrive but values are wrong	Identify zero-based, one-based or 4xxxx conventions first, then function, type, byte order and scaling rather than checking only A/B.

5.10 Modbus cloud writes over MQTT

Path Application > Modbus Collect

FIELD TASK: M2: WRITE 300 TO THE MOCK REGISTER AND READ IT BACK

Complete M1 first. This test changes PC memory only and connects no actuator. Real writes require control authorization, valid ranges and agreed safe operating conditions.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Command Name / Slave Address	setpoint / 1	Add a separate command
Function Code / Register Start / Count	FC03 / 1 / 1	Periodic readback after a write
Data Type / Writable / Collect Period	UInt16 / On / 5 s	Only this simulated point is writable
Map Address	1	Separate test mapping; not a replacement for register start
Subscribe / Publish Topic	plant/site1/plc1/set / plant/site1/plc1/data	Same M1 connection, different topics

SAVE, TEST AND OBSERVE

1. Save command, device and global configuration. Start readback first: python site_lab.py watch --topic plant/site1/plc1/data --seconds 60 --expect setpoint=300.
2. In another window run python site_lab.py publish --topic plant/site1/plc1/set --set setpoint=300. It sends a flat numeric JSON object; avoid strings, nested objects and arrays.
3. Then run python site_lab.py modbus-get --start 1 --count 1. Expect values [300] and setpoint=300 in upstream data.

PASS CRITERIA AND DIAGNOSIS

A broker PUBACK only accepts the message; it does not acknowledge a gateway/slave write. There is no independent MQTT write acknowledgement here; inspect readback and logs.

No change: inspect subscription topic, exact command name, Writable and permissions. Out of range: use a valid value; do not enable writes on all points.

Finish and restore: Disable Writable on setpoint and save. Restart bench to reset its simulated value to 100.

Independent example M2 (authorized write): use test slave 1, setpoint, read FC03, PDU start 1, Unsigned 16bit, count 1, no scaling and Writable enabled. A single-register write uses FC06. The expected change is 100 to 300, checked by a later FC03 read. It shares the M1 TCP connection but uses a different register; run and 32-bit entries describe other independent types.

BEFORE WRITING

Enable the collector and MQTT reporting. The target command must exist and be Writable. The cloud client and collector use the same broker; publish to the device's **subscribe topic**.

Example topic: `plant/site1/plc1/set`. Send control messages with `retain=false`.

```
{"setpoint":300}
```

Use a flat JSON object with numeric values, not strings, Boolean values or a nested data envelope. A 32-bit value uses function 16 (0x10) and two consecutive registers. Areas 02 / 04 cannot be written. UTF-8 payload size is 1–511 bytes.

> Verify: this module has no dedicated MQTT write reply. Confirm with subsequent collected readback and device logs. Message delivery or an absent reply cannot replace field readback. Multiple commands execute independently, not atomically.

VERIFY ONE CONTROL COMMAND IN ORDER

1. Confirm normal read acquisition, then permit writing only as allowed by the slave map. JSON keys must match configured command names; setpoint is not a built-in command.
2. Inspect subsequent collected values and logs. Resume normal control after expected readback.
3. If nothing changes, check the topic, command name, Writable flag and numeric type, then the slave response. Do not repeatedly resend because there is no dedicated reply.

ACTIVE MODULE	TARGET LOOKUP	VALUE FORM	CONFIRMATION
Modbus Collect	JSON key matches command name, such as setpoint	JSON number, such as 300	Later collected readback and logs; no dedicated reply

END-TO-END EXAMPLE: WRITE A SETPOINT AND READ IT BACK

Assumptions: an authorized test slave; a working `setpoint` command in holding-register area 03, PDU start 1, quantity 1, UInt16, no scaling. This address/value convention is illustrative, not a real meter/PLC control address.

STEP	ACTION / EXPECTED OBSERVATION
1. Read first	Confirm setpoint=100 locally and at the gateway; record name, address and type
2. Publish	Send `{"setpoint":300}` to the actual device subscription topic `plant/site1/plc1/set`, retain=false
3. Execute	Backend matches the writable command, encodes UInt16 and writes one register with FC06; inspect logs for slave rejection/timeout
4. Read back	In a later report on the device uplink topic, verify setpoint=300; keep other fields as actually reported
5. Confirm locally	Check the field setpoint/state; read before any retry or authorized restoration, then verify again

Client example; supply broker/authentication/TLS settings for the delivery:

```
mosquitto_sub -h broker.example.com -t 'plant/site1/plc1/data' -v
mosquitto_pub -h broker.example.com -t 'plant/site1/plc1/set' -m '{"setpoint":300}'
```

Do not add `-r` or retain control commands. This module has no independent MQTT write acknowledgement. PUBACK, receipt or silence is not field readback. Read before retrying after a timeout. **Status:** source/format-reviewed walkthrough; no field slave was written.

START WITH ONE VERIFIED WRITABLE POINT

setpoint is a command created for this example, not a built-in control. The illustration uses a 16-bit holding register at offset 1. Enable writing on a field point only where its slave documentation permits it.

HOW TO CONFIGURE

1. First confirm normal readback and the slave address, function, offset, type and allowed value range, then enable Writable
2. Use the same broker and publish one {"setpoint":1200} request to the effective device subscribe topic with retain=false. The key must exactly match the command name
3. Check subsequent point readback and device logs. There is no dedicated MQTT write reply; after a timeout, read back before repeating a control

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Subscribe Topic	Publish to the target connection subscribe topic, not its data publication topic
2	Command Name / Numeric Value	Flat JSON keys are configured command names and values must be JSON numbers
3	run	Writable coil command, read function 01; numeric 0/1 is written using function 05
4	setpoint	Writable uint16 holding-register command, read function 03, written using function 06
5	32-bit values	Occupies two consecutive registers and uses function 16 (0x10), with the configured byte order
6	Readback	No dedicated MQTT write reply; check subsequent reads and logs. No reply does not prove no write occurred

Check the result Subsequent readback or field feedback confirms the write; MQTT publish success alone is insufficient

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Publish succeeds but the field value does not change	Check the topic, Writable, command name and JSON numeric type. Confirm subsequent readback; there is no dedicated MQTT write acknowledgement.

5.11 SNMP

Path Application > SNMP

SNMP integrates the device into a management system. Obtain the matching MIB and manager requirements before setting version, credentials, listener and Trap destination.

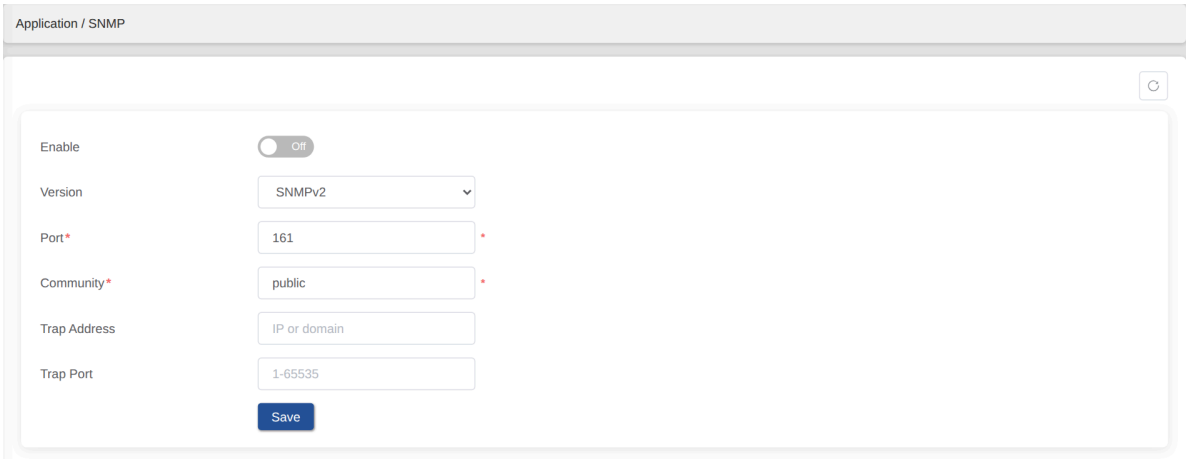


Figure 5-14 SNMP

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: READ ONE READ-ONLY OID FROM LAN

Install a Net-SNMP client on the PC and allow UDP161 only on the isolated LAN. For production v3 obtain user/security level/auth/privacy algorithms from the administrator.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Version / Port	v2c / 161	Isolated read-only test
Read Community	field_ro	Custom lab community
Write Community	disable or unset	No SET in this case

SAVE, TEST AND OBSERVE

1. Save/enable and run snmpget -v2c -c field_ro 192.168.10.1 1.3.6.1.2.1.1.1.0 on the PC; expect a sysDescr string.
2. Obtain the matching MIB and read actual status OIDs. Verify traps in receiver logs; GET success does not prove trap delivery.

PASS CRITERIA AND DIAGNOSIS

Timeout: inspect UDP161, version, community and access scope. No Such Object: inspect MIB/OID and the .0 instance suffix.

Finish and restore: Disable lab v2c or apply production v3; revoke field_ro and temporary UDP access.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Version / Port	The page’ s community-based SNMPv2 is SNMPv2c; SNMPv3 is also available. Match version and port to the manager
2	Read / Write Community	SNMPv2 access identifiers for read and write, not Web accounts
3	Trap Address / Port	Destination for unsolicited notifications; configure its receiver in the management system
4	Mode / Username	SNMPv3 security mode and user must match the manager
5	Authentication / Privacy	Set authentication protocol/password and privacy protocol/key for the selected mode
6	MIB	Available monitoring objects depend on the delivered MIB, not arbitrary third-party OIDs

Check the result The management station reads the required information using the configured version and authentication

5.12 Local MQTT Broker

Path Application > MQTTBroker

The local broker accepts MQTT client publish/subscribe connections and can aggregate site messages. Collectors may use a local or external broker, with connection and topic settings configured separately.

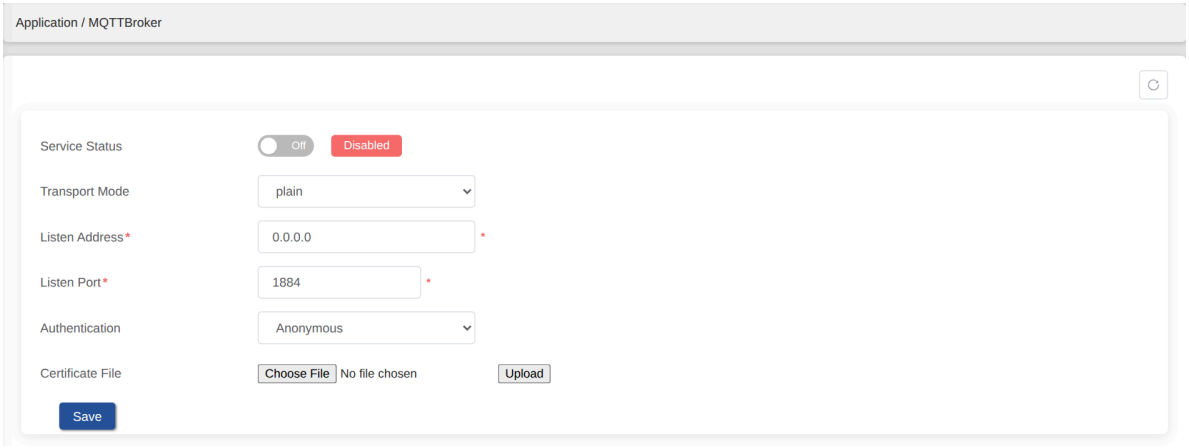


Figure 5-15 Local MQTT Broker

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: PUBLISH AND SUBSCRIBE THROUGH THE GATEWAY BROKER

Complete M1 with the external PC first. This separate case tests the gateway broker. Choose unused port1884; the PC lab broker uses another host, so its port1884 does not conflict.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Service / Transport	On / plain TCP	Isolated LAN test; configure production TLS as required
Listen Address / Port	192.168.10.1 / 1884	If only all-address binding is supported, restrict access sources
Authentication / Username / Password	Enabled / field / DemoOnly2026	Lab-only credentials; save authentication before testing

SAVE, TEST AND OBSERVE

1. Save/enable broker. In one PC window run python site_lab.py watch --host 192.168.10.1 --topic plant/site1/test --seconds 30.
2. In another window run python site_lab.py publish --host 192.168.10.1 --topic plant/site1/test --payload FIELD-001. Expect identical topic/content in the subscriber.

PASS CRITERIA AND DIAGNOSIS

Connection refused: inspect listener/port/service. Auth failure: inspect broker credentials. The tool supports MQTT3.1.1 plain lab transport and fixed lab credentials, not production TLS credentials.

Finish and restore: Stop the test broker or apply production auth/TLS; revoke the lab account and temporary access.

> **Interface example and production security**: the service is off in the illustration. The plain transport, anonymous authentication and `0.0.0.0` values are examples, not recommended production settings. `0.0.0.0` listens on all local IPv4 interfaces; WAN reachability also depends on firewall/access rules. Before enabling, restrict access to the required LAN/VPN or specified sources, configure authentication, and use suitable TLS where supported by the delivered firmware and clients. Do not expose an unauthenticated MQTT service to an untrusted network.

Use an authorized client to publish and subscribe to a test topic and check access restrictions after configuration. The screenshot does not replace site verification.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Service / Transport	Control the local broker and plain/TLS transport
2	Listen Address / Port	Defines where MQTT clients connect; avoid conflicts with other services
3	Authentication	Select anonymous or username/password authentication and match client settings

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
4	Server Certificate / Key	TLS server identity; the certificate name should match the client target
5	Function Boundary	This configures the local message server, not acquisition tasks or an m2mCloud tunnel

Check the result Clients reach the intended listener and another authorized client receives a test-topic publication

5.13 Alarm notifications

Path Application > Alarm Control

Alarms send selected events through configured notification channels. Verify event generation, channel delivery and receipt separately.

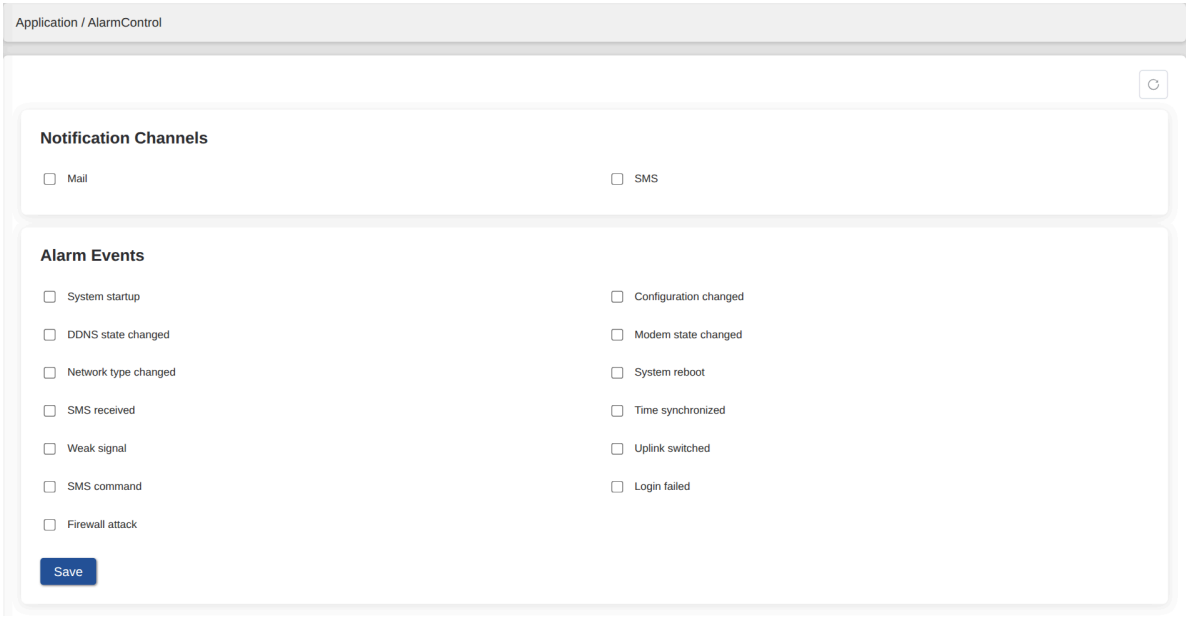


Figure 5-16 Alarm notifications

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: TRACE ONE EVENT FROM LOG TO NOTIFICATION RECIPIENT

Verify each selected channel first: SMTP test receipt, manual SMS receipt or an active platform session. Choose only a supported event safe to trigger on site.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Notification Channels	Email	Complete SMTP test receipt first
Alarm Events	Login failed	Retain a valid session and try one wrong password in another window

SAVE, TEST AND OBSERVE

1. Save Email and Login failed. Keep the valid session; in a private window submit one wrong admin password and stop. Compare timestamped login-failure log, alarm send result and received mail.
2. Confirm a new login with the correct password, then select production events; add/test further channels individually.

PASS CRITERIA AND DIAGNOSIS

Event without send: inspect event/channel selection. Send failure: diagnose that channel. Wrong received content: inspect event type/recipient account.

Finish and restore: Restore conditions/configuration, remove test recipients and retain a real notification sample.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Notification Channels	Select Mail or available SMS channels and configure the channel service itself
2	Alarm Events	Select exposed events such as startup, configuration change, uplink change or failed login
3	Dependencies	Mail depends on SMTP; SMS depends on an SMS-capable cellular configuration
4	Verification	Validate the channel, then check event notifications during controlled maintenance

> **Check the result** The test condition matches its destination and trigger/recovery information follows the configured rule

5.14 SMTP mail service

Path Application > SMTPService

SMTP provides the mail-alarm transport. Credentials and security mode follow the mail service, not the router Web account.

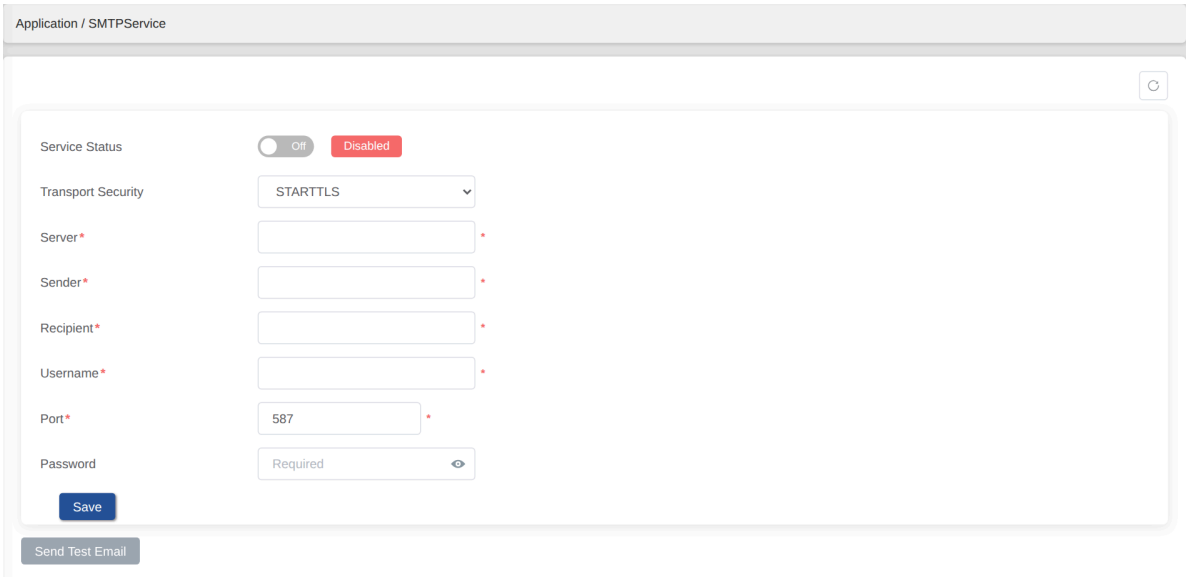


Figure 5-17 SMTP mail service

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: SEND A TEST EMAIL BEFORE ENABLING EMAIL ALARMS

Obtain SMTP host, submission port, NONE/STARTTLS/TLS mode, account, app password, allowed sender and recipient from the mail administrator. Verify device time and DNS first.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Server / Port	Administrator SMTP host / matching submission port	Use the matching port/security pair, not an assumed465
Transport Security	Administrator-specified NONE/STARTTLS/TLS	Match server; do not bypass certificate errors by disabling TLS
Sender / Recipient	Authorized sender / test recipient	Full addresses
Username / Password	Sender account / SMTP app password	Follow provider; may differ from the mailbox login password

SAVE, TEST AND OBSERVE

1. Save fields, then click Send Test Email. Record device result/time and have the recipient inspect inbox and spam.
2. Only after receipt, enable email in Alarm, select a safely testable event and compare event/email timestamps.

PASS CRITERIA AND DIAGNOSIS

Timeout: inspect DNS/port. Auth fails: inspect app password/sender permission. TLS fails: inspect time/certificates/mode. Accepted but missing mail: inspect bounces, spam and recipient.

Finish and restore: Remove test recipients/alarms while retaining production settings; deliver app passwords securely.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Server / Port	SMTP server and its submission port
2	Transport Security	Match NONE, STARTTLS or TLS to the mail provider
3	Sender / Recipient	Use complete mail addresses; sender must satisfy the server policy
4	Username / Password	Use the mail account credential or app password, not the router Web password
5	Send Test Email	Verify receipt after configuring the service, before relying on mail alarms

Check the result The destination mailbox receives the test or actual notification with the intended time and recipient

5.15 LoRaWAN gateway and region

FIELD TASK: VERIFY REGION BEFORE GATEWAY HEARTBEAT AND NODE JOINS

For this model’ s fitted gateway concentrator. Obtain region/sub-band, gateway EUI, server and UDP ports from node/LNS administrators. A screenshot showing EU868 does not define the ordered radio region.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Gateway EUI	actual gateway EUI	Must exactly match LNS registration
Region / Plan	ordered region and node sub-band	Match gateway, LNS and node
Server / Upstream / Downstream Port	LNS handover	Use the matching Semtech UDP endpoint values

SAVE, TEST AND OBSERVE

1. Register EUI/region in LNS, save forwarding server/region and enable. Inspect heartbeat/last-seen/up/down counters first.

2. Use the sensor case to join one real OTAA node; inspect JoinRequest, JoinAccept, uplink and application data.

PASS CRITERIA AND DIAGNOSIS

No heartbeat: inspect EUI/server/UDP/uplink. Heartbeat without node: inspect region/sub-band/antenna. JoinRequest without success: inspect OTAA keys/downlink.

Finish and restore: Restore production LNS/region, remove test registration and retain regional planning.

This model provides one eight-channel gateway instance, standard LoRa/FSK channels and Semtech UDP forwarding to an external LNS. The physical concentrator part is not confirmed; a software compatibility label is not chip evidence. Current scope is EU868.

1. Register the real gateway EUI on the external LNS and enter UDP server/ports.
2. Apply the regional center-frequency, IF and antenna-gain plan.
3. Verify heartbeat, node join and real uplinks; LEDs/process state are not RF acceptance.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Server / UDP ports	Use the external LNS Semtech UDP address/uplink/downlink ports, separate from MQTT
2	Gateway EUI	Register the real gateway identity, separately from the independent node DevEUI
3	Region / mode	Current scope EU868; use a matching Auto plan or a complete Manual channel plan
4	Radio chains / IF	Center frequency plus IF defines each channel; match RF hardware and regional planning
5	Multi-SF / LoRa / FSK	Configure eight multi-SF channels plus separate standard LoRa/FSK settings
6	TX enable / antenna gain	Enter real installed gain; module/regional constraints govern TX power, not a compatibility label

5.16 Independent LoRaNode alongside the gateway

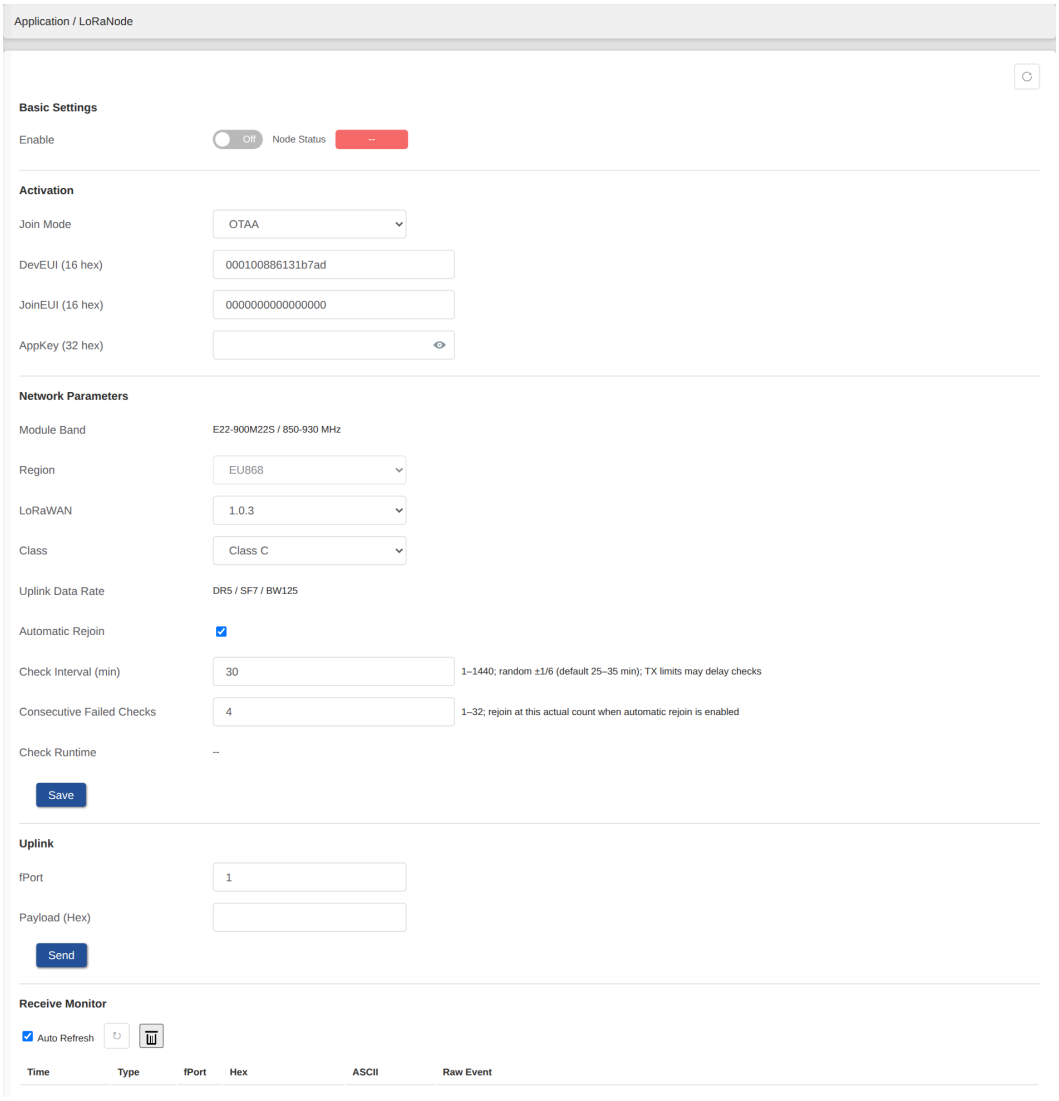


Figure 5-18 Independent LoRaNode alongside the gateway

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: SEPARATE THE STANDALONE NODE FROM GATEWAY/LNS ROLES

Use only for a delivered standalone node module. Concentrator gateway EUI and node DevEUI differ; confirm roles/ports from this model’ s hardware section.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Region / Mode	Ordered node region / OTAA or delivered mode	Match target network
DevEUI / JoinEUI / AppKey	Actual keys and identifiers for this node	Register as a device in LNS, not as gateway EUI

SAVE, TEST AND OBSERVE

1. Register this node in target LNS, verify region/keys, save node settings and trigger join. Inspect gateway and standalone-node states separately.
2. Send one controlled payload and inspect DevEUI/counter/content in the target application; local LNS running does not prove this node joined.

PASS CRITERIA AND DIAGNOSIS

Failure: inspect role/region/keys/gateway coverage. Concentrator eight-channel capability does not imply eight simultaneous standalone-node services.

Finish and restore: Restore node settings/registration and remove test payload mapping.

LoRaNode is an independent end-device function and may run alongside the gateway. Match EU868, OTAA/ABP, Class A/C and keys to the target LNS; gateway EUI is not the node identity.

1. Create the node on the LNS and match DevEUI, JoinEUI/AppEUI, AppKey or ABP address/session keys.
2. Save the actual region/join mode and inspect the result.
3. Enter application fPort and hexadecimal payload; compare received bytes and decoded values.
4. For downlinks check Class A receive windows or Class C runtime.
5. Automatic rejoin applies only to OTAA; ABP does not start OTAA or thereby reset frame counters. Configure link-check interval/failure threshold on the delivered page.

The shared LoRa LED indicates gateway or node application runtime, not join/RF/application success.

5.17 Optional GPS and positioning checks

FIELD TASK: CONFIRM FITTED POSITIONING HARDWARE BEFORE TESTING OUTDOORS

GPS is an ordered option. Check order, antenna and interface. Test with suitable outdoor protection and clear sky; a menu alone does not prove fitted hardware.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Work Mode / Protocol	delivered mode	Verify local fix before network forwarding
Destination / Port	project receiver	Only for required forwarding

SAVE, TEST AND OBSERVE

1. Attach the specified antenna, enable and inspect Fix/Satellites/position/time. Allow initial acquisition; indoor no-fix does not prove failed hardware.
2. After a valid fix configure forwarding and compare the receiver’ s timestamp/position in NMEA or the delivered protocol.

PASS CRITERIA AND DIAGNOSIS

No satellites: inspect antenna/sky/fitted option. Fix without reports: inspect receiver listener/port/network separately.

Finish and restore: Restore positioning/forwarding settings and close the test receiver.

Connect the optional GPS antenna to this model’s labeled connector. Confirm hardware/antenna provision and suitable sky visibility. Use the delivered page/interface to check a valid fix, time and coordinates; a connector or field does not prove a fix. Verify coordinate system, time zone and application use; no unconfirmed accuracy/startup metric is implied.

5.18 Digital input/output wiring and checks

FIELD TASK: TEST ONE DI/DO CHANNEL AGAINST THIS MODEL’S ELECTRICAL RATINGS

First verify the pin/electrical reference below: DI voltage/active state, DO type and load limit. Do not guess unspecified ratings; use no production actuator as a test load.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
DI / DO Terminal	model markings below	Check power/ground/signal separately
Load / Meter	rated test load and meter	Obtain supplier wiring confirmation for any unspecified rating

SAVE, TEST AND OBSERVE

1. Wire/check polarity with power off. Power up, change DI once within its rated input conditions and inspect monitored state/event.
2. Operate DO only through an actual authorized control entry on this unit and verify with a meter/test load; do not assume a Web switch exists.

PASS CRITERIA AND DIAGNOSIS

Status changes but load does not: inspect DO type, external supply/circuit and wiring. Open-drain/dry contact is not an active power supply.

Finish and restore: Restore states, power down, remove the test load and verify restored wiring.

1 × RS485, 1 × DI & 1 × DO (5-pin pluggable terminal, pin order A • B • GND • GPI • GPO).

Identify DI input, DO output and common terminals from this model’s drawing; direction is fixed. Confirm the sensor signal type and external power. Do not borrow another model’s undocumented contact rating. Read a known DI state first. Validate DO only with project authorization, isolated loads and confirmed wiring/ratings, recording the physical signal and application feedback.

CHAPTER

06

VPN

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

6. VPN

6.1 Choose remote access and tunnels

SITE REQUIREMENT	START HERE	CONDITION
No site public IP; remote maintenance	m2mCloud or ZeroTier	Authorization→tunnel IP→site service
Existing corporate VPN server	OpenVPN or IPsec	Obtain complete endpoint, certificates/PSK and routes
Controlled peers; encrypted site access	WireGuard	Start split routes before changing default egress
Specific GRE/VXLAN/DMVPN deployment	Corresponding tunnel case	Physical peer→tunnel IP→LAN/return routes

CHOOSE BY YOUR PROBLEM

PROBLEM	SELECTION PATH	PREREQUISITES
4G only, no public IP, remote PLC work	Use matching authorized m2mCloud, or a suitable client to an existing reachable enterprise VPN	Platform/client, outbound path, vendor tool and PLC return route; DDNS alone is insufficient
Existing OpenVPN / IPsec / WireGuard	Reuse a supported reachable peer with its actual keys/certificates and networks	Matching peer settings, authorization, Allowed IP/policies and return path
Vendor tool needs broadcast discovery	Verify available L2 bridging and bind the virtual NIC	Unique addresses and actual broadcast tests; L3 connectivity is not discovery
Different site subnets, explicit IP access	Plan L3 routed access	Non-overlapping sites, forward/return routes and access controls
Office and site use the same subnet	Prefer renumbering; otherwise test the client's explicit overlap policy	No unplanned bridging; record local reachability and rollback
Multiple devices/sites	Define site IDs, subnets, authorization and access scope before VPN/platform setup	Online devices do not establish LAN-to-LAN reachability; test each site and cross-site service

Confirm each server/platform address, authorization and maintenance owner; for formal handover, record them in Service acceptance and handover. VPN support does not replace connectivity, peer, identity and engineering-tool compatibility checks.

THEN CHECK PROTOCOL AND PEER REQUIREMENTS

Start with your server, platform and protocol, then distinguish explicit-IP access from LAN broadcast discovery. No public IP does not make a local server externally reachable.

EXISTING PEER OR NEED	ENTRY	NETWORK PREREQUISITE	ACCESS AND SECURITY BOUNDARY
Matching maintenance platform	m2mCloud	Matching PC client, device authorization and Internet access	Platform provisions L2/L3; confirm P2P/relay and security with the delivered service
Service and certificates supplied	OpenVPN client	Reachable server and transport port	Match certificates/keys; still configure site routes
Key-based tunnel at both ends	WireGuard	A genuinely reachable peer/mapped path	Encrypted L3; plan allowed IPs, return paths and full-tunnel exits separately
Enterprise firewall peer	IPsec	Matching policies, authentication and negotiation reachability	Protects agreed IP traffic; does not resolve address overlap or broadcast discovery
Existing ZeroTier network	ZeroTier	Controller approval and suitable network paths	Joining the virtual network does not configure all LAN routes and permissions
Existing L2TP/PPTP installation	Matching client/server	Compatible peer and reachability	L2TP itself does not encrypt data; PPTP is not recommended for new security-sensitive projects
Existing encapsulation requirement	GRE	Reachable outer addresses and encapsulation traffic	GRE do not provide encryption by themselves

TWO COMMON DECISIONS

- PLC broadcast discovery requires an applicable L2 service at the platform/peer. An online L3 tunnel does not forward LAN broadcasts automatically.
- A server on this gateway needs an actual path to its listening address and port. Enabling a server, DDNS or cellular access alone does not create inbound reachability.

For new projects, use an encrypted tunnel or authorized platform supported by the delivery and suitable for your security policy. Configure identity, access rules and vendor-tool permissions separately.

Configuration entries: 6.2 OpenVPN clients • 6.4 WireGuard • 6.6 IPsec • 10.1 Client configuration and networking

6.2 OpenVPN clients

Path VPN > OpenVPN Client

Two OpenVPN clients and a server can operate independently. Each instance has separate connection/authentication settings and needs appropriate business routes.

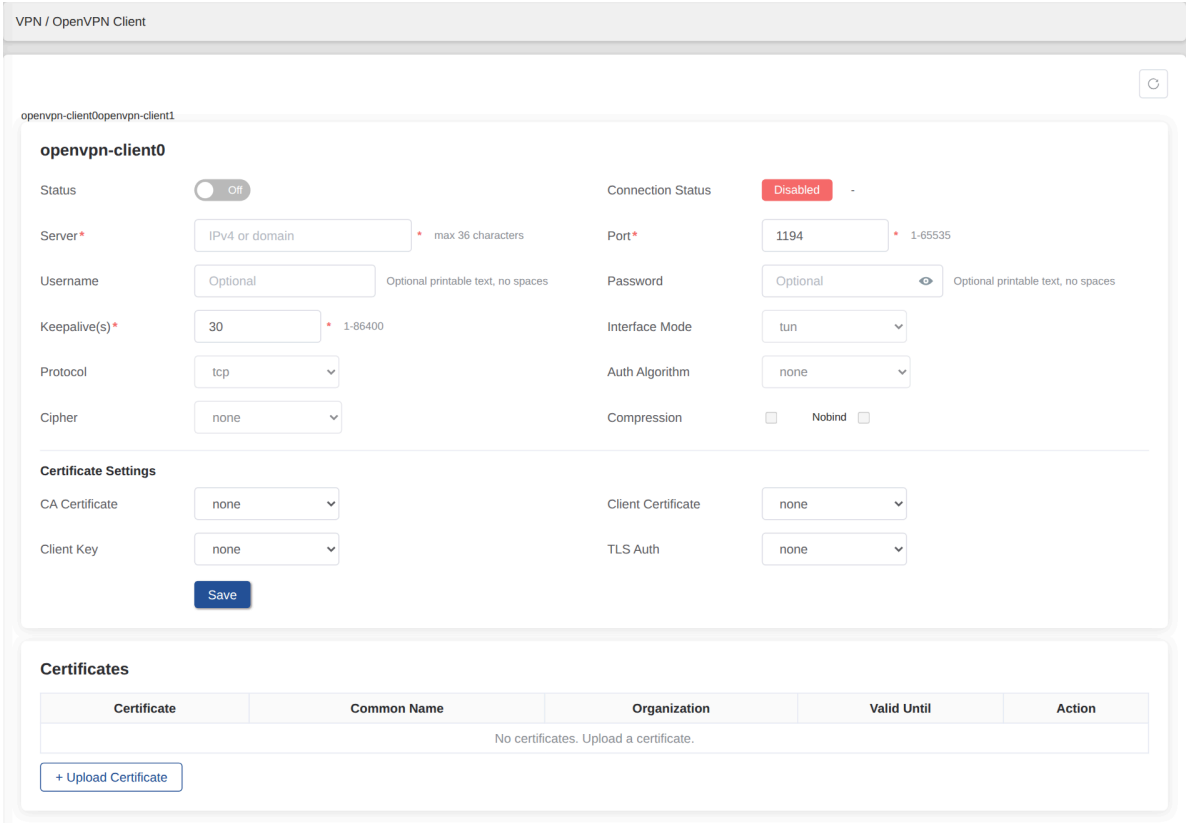


Figure 6-1 OpenVPN clients

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: IMPORT A COMPLETE OPENVPN CLIENT HANDOVER

Build the server case first or obtain the complete client bundle and allowed LAN routes from the VPN administrator. Do not mix CA/key files from different projects.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Server / Port / Protocol	192.168.20.3 / 1194 / UDP	Lab server; production follows remote/proto in the profile
Interface Mode	TUN	Match server

UI FIELD	ENTRY	BASIS
CA / Certificate / Private Key	bundle files	Upload separately; protect private key
Username / Password	only if required	Not Web admin credentials

SAVE, TEST AND OBSERVE

1. Select the client instance, copy algorithms/certificates/optional TLS auth from the bundle, upload each file, save and enable. Record Connected, virtual IP and routes.
2. Test server virtual IP, then an authorized remote service from a LAN PC; confirm the original uplink still behaves as planned.

PASS CRITERIA AND DIAGNOSIS

TLS failure: inspect CA/time/transport. AUTH_FAILED: inspect VPN account. Connected without service: inspect pushed routes, target firewall and return path.

Finish and restore: Disable the instance and restore routes; do not bypass all certificate checks to resolve a mismatch.

Use the remote-access decision section to confirm the peer, certificates and reachability, then follow the client settings below. Both clients and the server use separate configurations; verify service routes after connection.

CHOOSE A CLIENT INSTANCE AND CONFIGURE THE CONNECTION

openvpn-client0 and openvpn-client1 maintain their own servers, authentication and routes. Configure one or both as required; the server is configured separately.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Client Instance	Configure openvpn-client0 and openvpn-client1 separately; two clients and a server operate independently
2	Server / Port / Protocol	Match the server address, port and TCP/UDP transport
3	Interface Mode	tun is routed Layer 3 and tap is Layer 2; match the intended design at both ends
4	Username / Password	Use when account authentication is required; it does not replace required certificates
5	Auth Algorithm / Cipher	Match peer settings and use values compatible with the selected certificates and authentication
6	Keepalive / Compression / Nobind	Configure for server and NAT conditions, keeping peer parameters consistent

UPLOAD AND SELECT CERTIFICATES, THEN CHECK THE CONNECTION

Obtain the CA, client certificate and matching private key from the server administrator. Upload the required files with Upload Certificate, then select them in the client. Check identities and validity; use TLS Auth and other options as required by the server.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	CA	Validates the peer certificate trust chain; commonly ca.crt, provided by the VPN administrator
2	Certificate	Identifies this client and must match its private key; assign identities according to server policy
3	Private Key	Select the matching client key; do not distribute a server private key to clients
4	TLS Auth	Use when the server requires the corresponding control-channel authentication; match its file and direction requirements
5	Upload Certificate	Upload the required files, select them in connection settings, then save the connection; uploading does not establish a tunnel
6	Connected / Virtual IP	After connection, inspect state and the tunnel address, then check remote-subnet routes and service access

Check the result The intended client connects and the remote target IP and service are reachable

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Connected but remote equipment is unreachable	Check service subnets, routes/pushed routes, return routing and firewall rules on both sides. Test the target IP before its service port.

6.3 OpenVPN server

Path VPN > OpenVPN Server

As a server, the router accepts client connections. Reachability, certificate identity, tunnel pools and routes must be configured together.

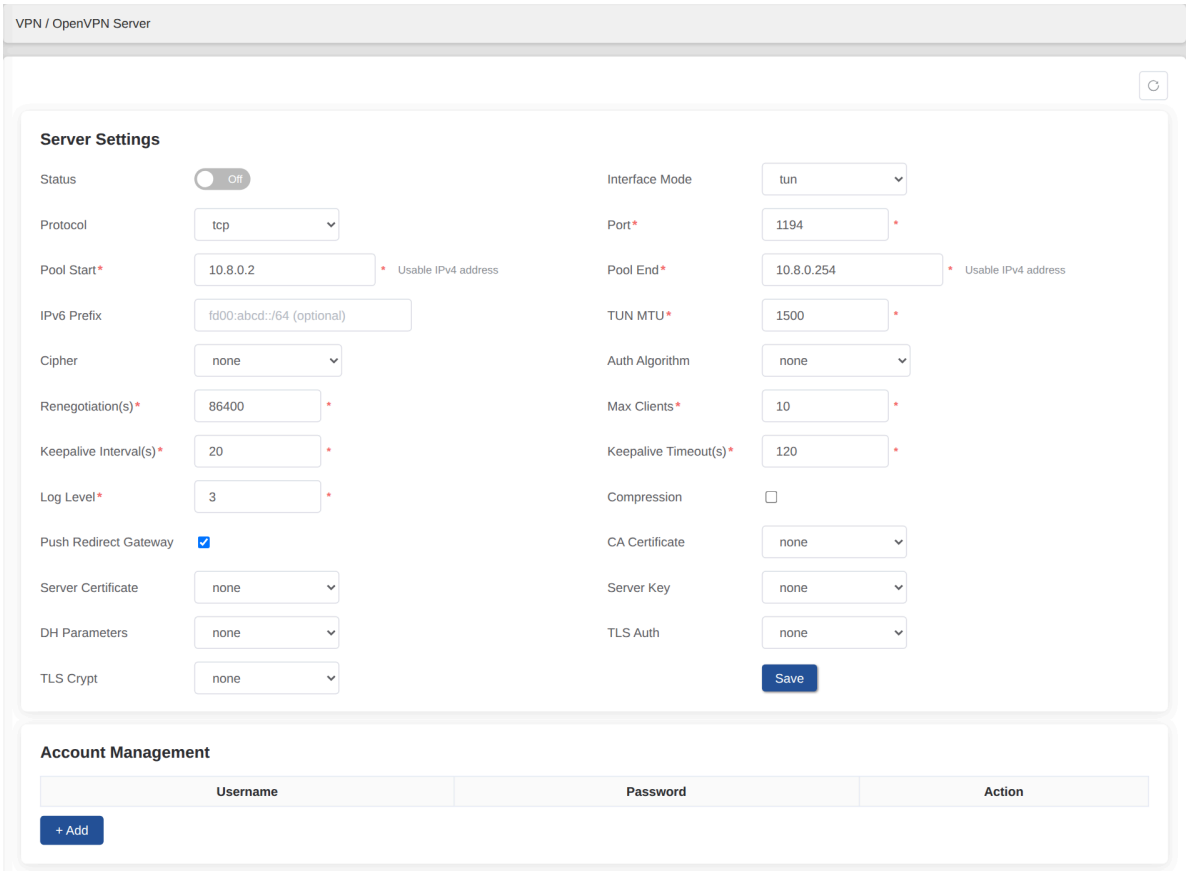


Figure 6-2 OpenVPN server (1/2)

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

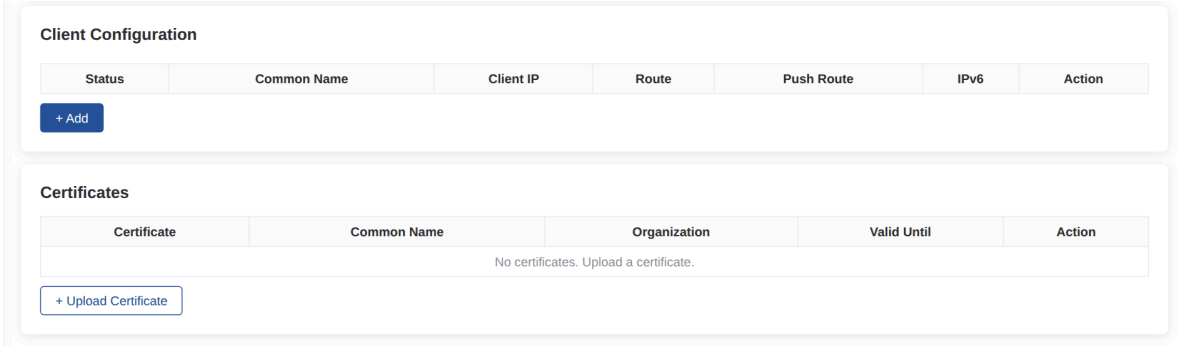


Figure 6-3 OpenVPN server (2/2)

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: BUILD AN OPENVPN SERVER AND EXPORT A CLIENT PROFILE

Build the server on reachable gateway B, WAN 192.168.20.3 and LAN 192.168.30.1/24. Synchronize time. Obtain a matching CA, server certificate/key and client certificate/key with correct usages from the project VPN administrator.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Mode / Protocol / Port	TUN / UDP / 1194	Match both endpoints
Pool Start / End	10.45.0.2 / 10.45.0.20	No overlap with either LAN
Server Certificates / Key / CA	administrator-issued files	Do not substitute a client certificate
Push Route	192.168.30.0/24	Use the page’ s network/mask syntax

SAVE, TEST AND OBSERVE

1. Upload certificates/keys. Configure DH/TLS-auth files, cipher and authentication from the same server plan. Save, enable and export the client profile.
2. Import on the client, checking remote 192.168.20.3, port1194 and all required files. Connect and test assigned tunnel IP and a real subnet-30 service.

PASS CRITERIA AND DIAGNOSIS

Certificate failure: check time, CA, usage and key matching. Connected without LAN access: check push route and return path to 10.45.0.0/24. Client-LAN routing additionally needs server routes/client-subnet association.

Finish and restore: Disable the server, revoke test client certificates, remove routes and protect exported keys.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Enable / Mode / Protocol / Port	Define the server listener consistently with client configuration
2	Pool Start / End	Tunnel addresses assigned to clients; avoid overlap with LAN and other tunnels
3	Cipher / Auth / MTU	Coordinate these parameters with client compatibility
4	Server Certificates / DH / TLS	Provide the server certificates, private key and negotiation material required by the selected mode
5	Account / Client Configuration	Maintain VPN client authentication and assignment rules, not router Web multi-user accounts
6	Route / Push Route	Configure reachable subnets and return routes, not only the address pool
7	Keepalive / Maximum Clients	Set for the service and delivered runtime environment

Check the result An authorized client obtains the expected tunnel address and reaches services allowed by routes and policy

6.4 WireGuard

Path VPN > WireGuard

WireGuard uses peer keys and UDP endpoints. Plan tunnel and business addressing before exchanging public keys.

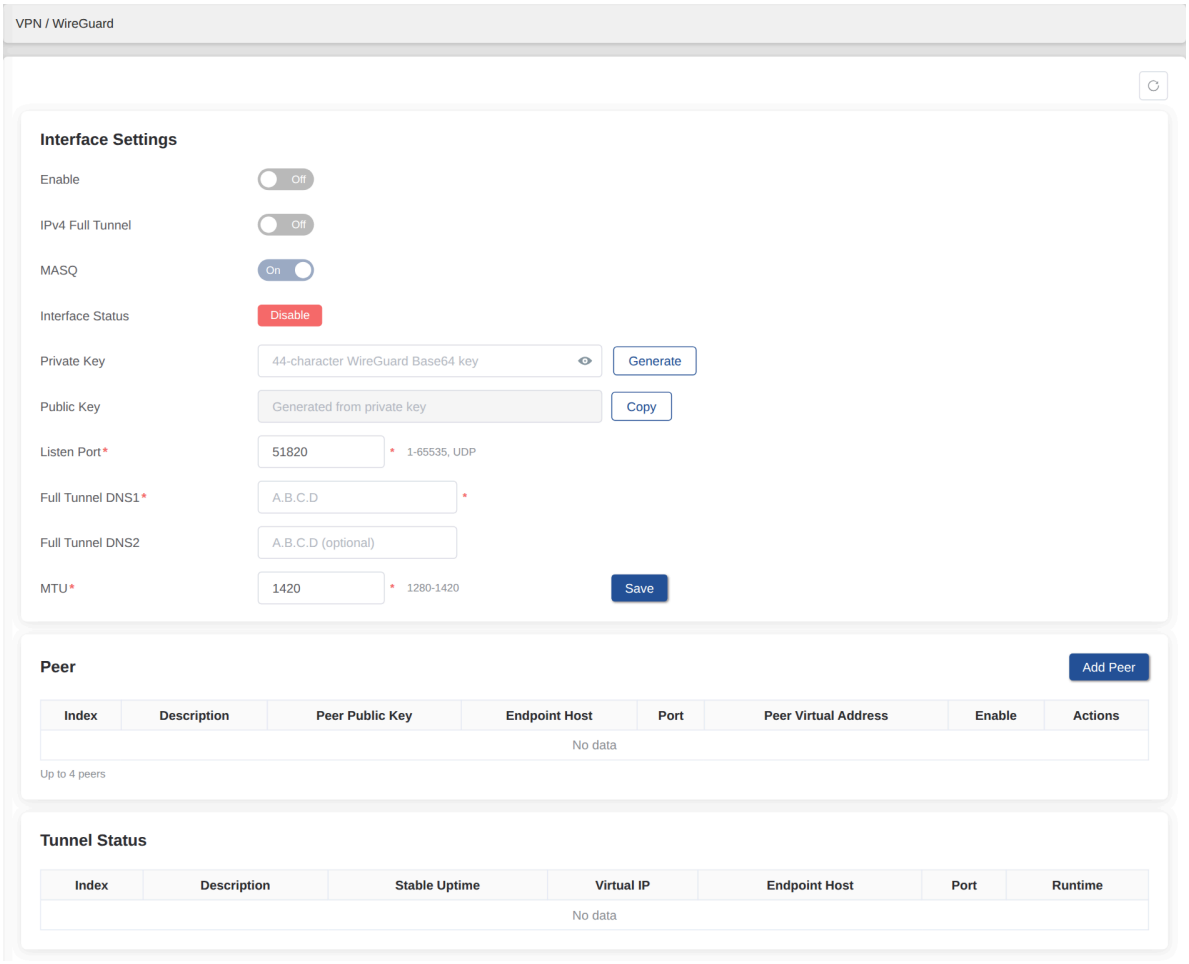


Figure 6-4 WireGuard

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

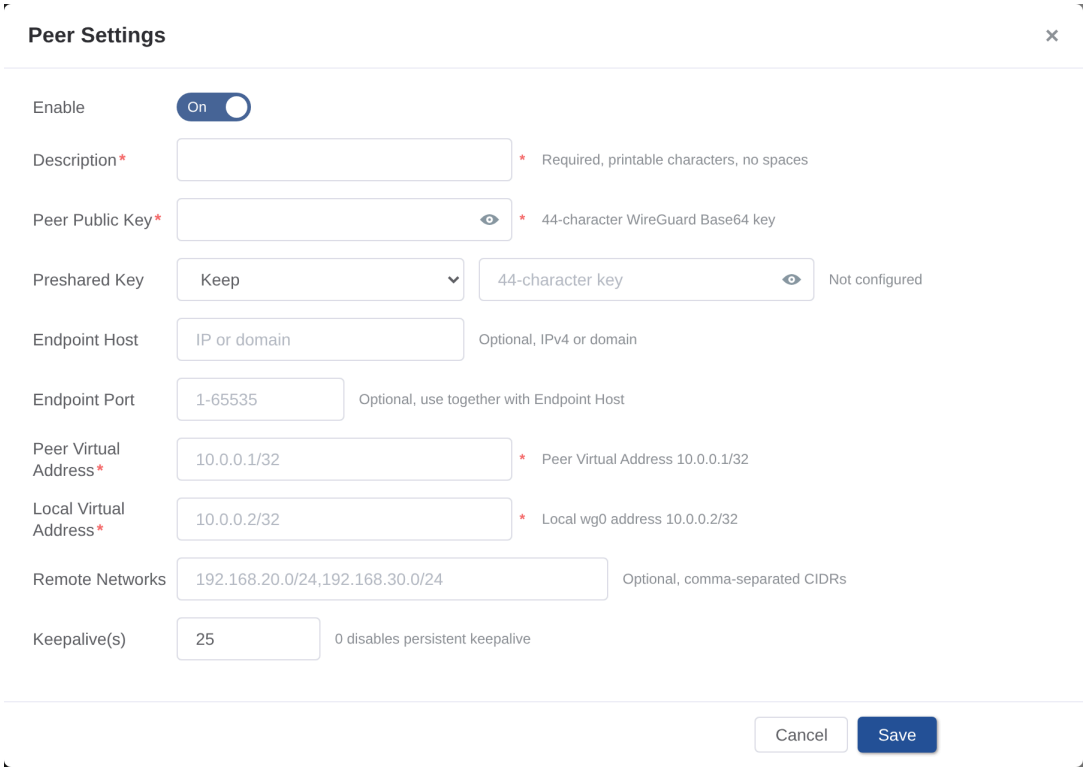


Figure 6-5 WireGuard

Native unsaved form / browser draft; not applied to device

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: MINIMUM WIREGUARD PLAN FOR TWO LANS

A is this gateway: WAN 192.168.20.2, LAN 192.168.10.1/24. B is another gateway: WAN 192.168.20.3, LAN 192.168.30.1/24. Prove WAN reachability and allow UDP51820. For production replace endpoints with reachable public addresses/ports.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Enable / Listen Port / Full Tunnel	On / 51820 / Off	Start split routing without taking over the default route
Private Key / Public Key	Generate / Copy	Click Generate on each end; Copy its public key to the peer, never its private key
Peer Enable / Description	On / siteB on A; siteA on B	Add a unique peer description
Peer Public Key	copied peer public key	Not the peer private key
Local Virtual Address A / B	10.44.0.1/30 / 10.44.0.2/30	Local wg0 address with prefix; unique on each end
Peer Virtual Address A / B	10.44.0.2/32 / 10.44.0.1/32	Peer virtual address uses /32
Endpoint Host A / B	192.168.20.3 / 192.168.20.2	Host IP only, without colon/port

UI FIELD	ENTRY	BASIS
Endpoint Port / Keepalive(s)	51820 / 25	Separate port field; keepalive in seconds
Remote Networks A / B	192.168.30.0/24 / 192.168.10.0/24	Remote application subnet

SAVE, TEST AND OBSERVE

1. Configure B then A, each with the other public key, addresses and subnets. Save and enable. If the delivered form lacks listed local-address/subnet fields, use that release' s interface/routing settings; do not enter values into unrelated fields.
2. From 192.168.10.10 access an active service at 192.168.30.10; from 192.168.30.10 access 192.168.10.10:8080. Inspect recent handshake and traffic counters in both directions.

PASS CRITERIA AND DIAGNOSIS

No handshake: inspect endpoint, UDP and keys. Handshake but no LAN traffic: inspect remote subnets, client gateways, firewall and return routes. Keep full tunnel off initially.

Finish and restore: Disable test peers and restore routes; protect private keys outside public acceptance records.

Relation to Load Balance: choose the outbound design before enabling WireGuard IPv4 Full Tunnel. The current firmware does not allow it and Load Balance to be enabled together. Updated handshakes still require target-service and return-path checks.

WHAT TO ENTER IN THE PEER ADDRESS FIELDS

The current configuration interface uses IPv4. **Independent example W1:** the local LAN is 192.168.50.0/24 and the remote LAN is 192.168.20.0/24. These are entry examples, not a completed two-peer tunnel test.

UI FIELD	EXAMPLE AND PURPOSE ON THIS ROUTER
Local Virtual Address	10.0.0.2/32, the local wg0 address
Peer Virtual Address	10.0.0.1/32, the peer tunnel address; use /32, not the remote LAN subnet
Remote Networks	192.168.20.0/24, the business subnet reached through this peer; comma-separate multiple subnets
Endpoint Host / Endpoint Port	For an initiating connection, enter the reachable peer and UDP port together, not a tunnel-internal address

The peer needs the matching public key, reversed tunnel addresses and routes/access rules to the local LAN. Configure a preshared key only when agreed at both ends; Keep retains its existing value. Leave IPv4 Full Tunnel off when only remote business subnets are required. Before using full tunnel, check default-route ownership, keepalive requirements and the load-balancing exclusion.

Save the peer and base settings separately and check both enable states. Generate traffic to the peer tunnel address, inspect the handshake, then test the remote business IP. If the handshake succeeds but the service fails, check remote networks, local addressing, return paths and access rules. Resolve address/route conflicts by checking overlapping peer addresses and subnets.

This version provides IPv4 tunnels and up to 4 peers; a preshared key is optional. This is a model-specific configuration limit, not a throughput guarantee.

SPECIFICATION ITEM	SCOPE FOR THIS MODEL
WireGuard	IPv4-only tunnels with public/private-key authentication and optional pre-shared keys; up to 4 peer configurations, remote-subnet routes, keepalive, full-tunnel routing and masquerading

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Enable / Private Key / Public Key	Keep the local private key private and share its public key with the peer; use distinct identities
2	Listen Port / MTU	Set the local UDP listener and MTU for the network path
3	IPv4 Full Tunnel / DNS	Full tunnel affects egress and DNS; enable only when that routing behavior is intended
4	Peer Public Key / Endpoint	The key identifies the peer; endpoint is its reachable address and UDP port
5	Peer Virtual Address	Peer Virtual Address is the peer tunnel IPv4 address with /32. Enter the local wg0 address in Local Virtual Address and business subnets separately in Remote Networks.
6	MASQ / Runtime	Choose masquerading according to return routing and check actual handshake and traffic

Check the result Handshakes update, traffic counters change and the target service works with a valid return path

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
No handshake, or no traffic after handshake	Check public keys, endpoint and UDP reachability first, then AllowedIPs, tunnel addressing and return routes.

6.5 ZeroTier

Path VPN > ZeroTier

The router joins a ZeroTier network as an authorized node. Address and route acceptance depends on local settings and controller rules.

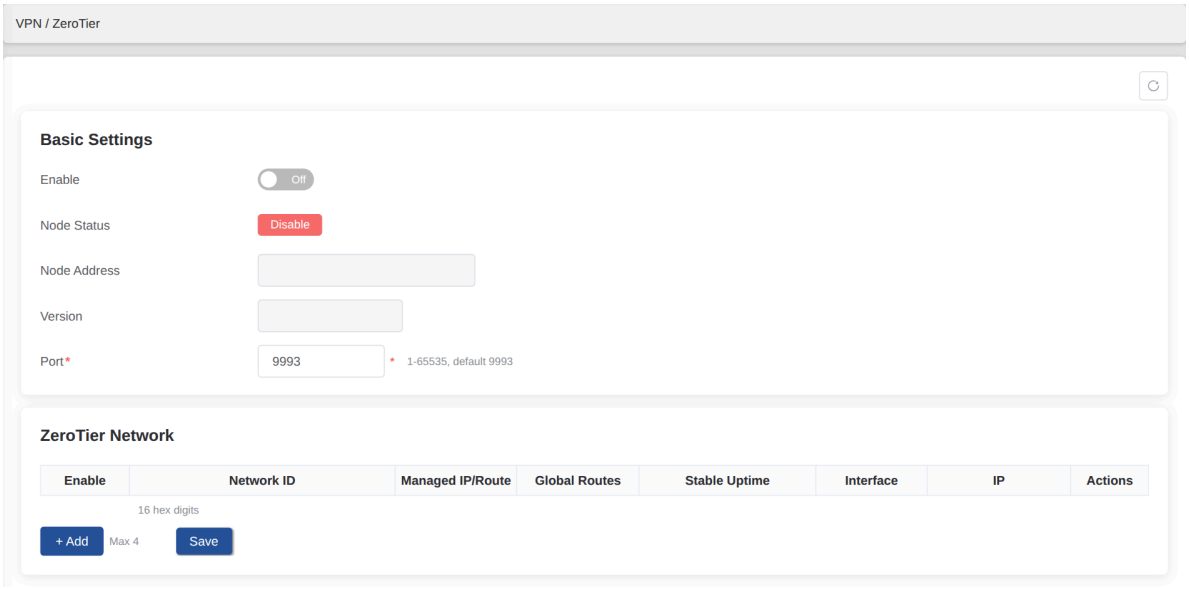


Figure 6-6 ZeroTier

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: AUTHORIZE BOTH ENDS, THEN TEST MANAGED IP AND SITE LAN

Create a controller network and obtain its 16-hex-digit Network ID. Install the remote client. Authorize both nodes and use their actually assigned managed IPs.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Enable / Network ID	On / controller Network ID	Network ID, not node ID
Managed Route	192.168.10.0/24 via gateway managed IP	Configure on controller; avoid remote-LAN overlap

SAVE, TEST AND OBSERVE

1. Join both ends, authorize in controller and record managed IPs. Test them first, then inspect the remote PC site route.
2. Access site 192.168.10.10:8080 and inspect bidirectional traffic. Keep Global Routes off initially unless the project explicitly requires a default-route change.

PASS CRITERIA AND DIAGNOSIS

No IP: inspect network ID/authorization. Managed IP works but LAN fails: inspect managed route, forwarding/return and client gateway. Recreated-interface uptime differs from system uptime.

Finish and restore: Leave the test network, revoke routes/node authorization and inspect original routes.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Enable / Node Status	Start the client and confirm that the node identity is valid
2	Network ID	Use the platform network identifier, not the device serial number
3	Authorization	Authorize the node at the network controller, then inspect assigned addresses
4	Managed IP / Route	Choose whether to accept controller-provided addresses and routes
5	Global Routes	Coordinate broader route acceptance with the existing egress plan
6	Port / Interface / IP	Check service port, virtual interface and actual assignment

Check the result The node is authorized, has a virtual address and reaches required peers and services

6.6 IPsec

Path VPN > IPsec

IPsec protects selected IP traffic with matching peer policies. Define peer, authentication and protected networks, not just encryption algorithms.

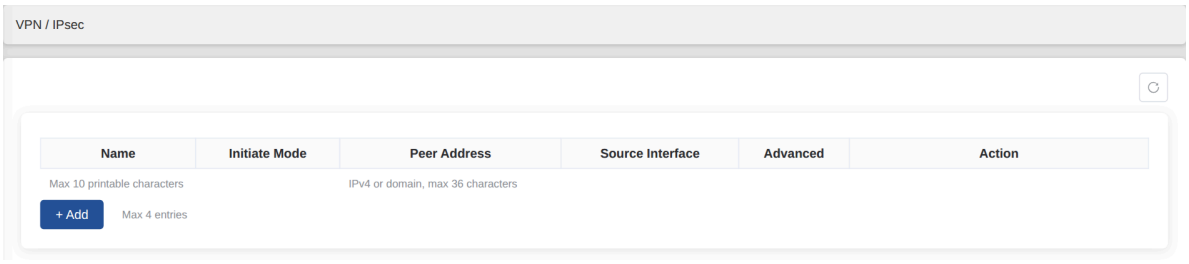


Figure 6-7 IPsec

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: CONNECT TWO SITES WITH SYMMETRIC IPSEC SELECTORS

A: WAN 192.168.20.2, LAN 192.168.10.0/24; B: WAN 192.168.20.3, LAN 192.168.30.0/24. Prove peer reachability first. Public/NAT deployment requires actual peer addresses and NAT-T policy.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Name / Transport	siteA / Tunnel	Names may differ; policies must match
Peer Address A / B	192.168.20.3 / 192.168.20.2	Physical peers
Local / Remote Network A	192.168.10.0/24 / 192.168.30.0/24	Reverse on B
Authentication / PSK	PSK / LabIpsec2026	Lab-only; match both ends
IKE / Child SA	IKEv2 / AES128-SHA256 / DH14-PFS14	Choose only if supported at both ends; lifetime3600s

SAVE, TEST AND OBSERVE

1. Match local/remote identities and algorithms, save B then A and initiate. Inspect both IKE and Child SAs.
2. Access the 192.168.30.10 application from 192.168.10.10 and inspect encryption/decryption counters increasing both ways; test the reverse direction.

PASS CRITERIA AND DIAGNOSIS

IKE failure: inspect PSK, identities, UDP500/4500 and proposals. Child failure: inspect selectors/PFS. SAs up without service: inspect client gateways, return path and firewall.

Finish and restore: Disable test tunnels/policies on both ends and confirm original services.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Name / Initiate Mode	Name the rule and match exposed negotiation modes such as main/aggr to the peer
2	Peer Address / Source Interface	Set the reachable peer and local egress for negotiation
3	Transport / Tunnel	Select for the protected traffic and peer policy; the modes represent different designs
4	Authentication / Encryption	Coordinate credentials/identity, algorithms and negotiation parameters at both ends
5	Local / Remote Network	Define protected traffic and valid return routing
6	Status / Logs	Check both negotiation success and protected traffic forwarding

Check the result Negotiation succeeds and actual services across protected subnets work in both directions

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Negotiation fails or protected subnets are unreachable	Compare negotiation logs and settings on both peers, then subnets, routes and firewall rules; algorithm names alone are insufficient.

6.7 L2TP client

Path VPN > L2TP Client

The client establishes L2TP with server-assigned credentials. L2TP itself does not encrypt; configure the required separate protection when needed.

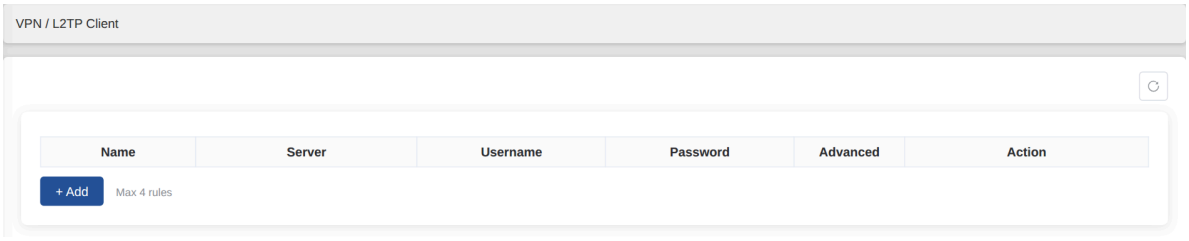


Figure 6-8 L2TP client

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: L2TP CLIENT TO AN ISOLATED TEST SERVER

Configure the corresponding server at 192.168.20.3 first; this gateway WAN is .20.2. Encryption limits are detailed below; these protocols alone do not replace a required encrypted VPN.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Server	192.168.20.3	Reachable lab server
Username / Password	field / LabTunnel2026	Matching lab credentials
Authentication / Compression / MPPE	match server	Match server settings as a set
MTU / MRU	1400 / 1400	Use if supported; retain planned LCP settings

SAVE, TEST AND OBSERVE

1. Save/enable, inspect session/assigned IP and test server tunnel IP. LAN access additionally needs bilateral routes and return paths.
2. Access an active remote test service and record the result; configure PPTP server pool/accounts/DNS using its server field reference below.

PASS CRITERIA AND DIAGNOSIS

Auth fails: inspect credentials/negotiation. L2TP: inspect UDP1701 and any separate IPsec protection. PPTP: inspect TCP1723 and GRE protocol47. LAN failure after tunnel connects: inspect routes/gateways.

Finish and restore: Disable the client and remove temporary routes/server lab accounts.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Name / Server	Name the connection and set a reachable server
2	Username / Password	Match the PPP credentials assigned by the server
3	Authentication / Compression	Use options supported by the server, not arbitrary combinations
4	LCP / MTU / MRU	Set link maintenance and transmit/receive sizes according to the peer
5	Routes	Provide destination and return routes, rather than only testing login
6	Encryption boundary	L2TP itself does not encrypt traffic; configure matching IPsec or other protection when required

Check the result The client connects and routes provide access to the target subnet and service

L2TP itself does not encrypt data. Login authentication is not encryption; separately confirm the required protection arrangement.

6.8 L2TP server

Path VPN > L2TP Server

The server authenticates clients and assigns tunnel addresses. Avoid pool overlap with LAN, other VPNs or remote site networks.

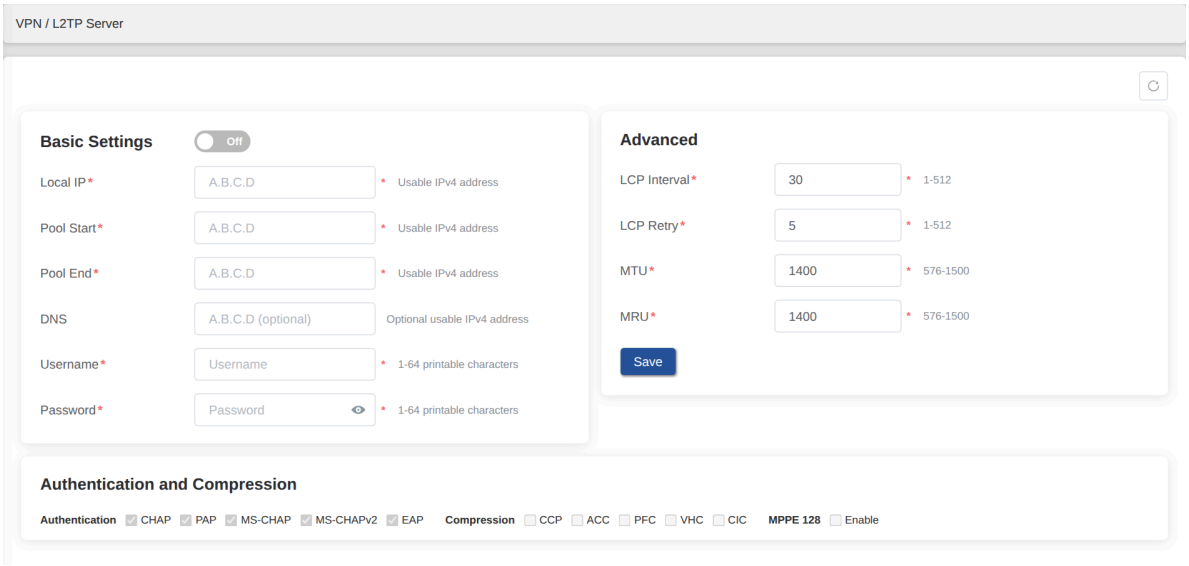


Figure 6-9 L2TP server

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: CREATE A MINIMAL L2TP DIAL-IN ACCOUNT

Operate on server WAN 192.168.20.3; client WAN .20.2. Pool must not overlap LAN/WAN. L2TP alone is unencrypted; apply the required project protection separately.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Local IP	10.49.0.1	Server tunnel address
Pool Start / End	10.49.0.2 / 10.49.0.10	Client pool
Username / Password	field / LabTunnel2026	Isolated lab account
DNS	reachable DNS	Follow form requirements if optional
MTU / MRU / LCP	1400 / 1400 / keep current	Match the client plan

SAVE, TEST AND OBSERVE

1. Save server/account and enable. Connect with the L2TP client case, verify pool assignment and test tunnel IP and real service.

PASS CRITERIA AND DIAGNOSIS

No session: inspect UDP1701/auth. Session without LAN: inspect routes, client gateways and return paths.

Finish and restore: Disable the test server and remove its account/routes.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Local IP / Pool Start / End	Server tunnel address and client pool must be consistent and non-conflicting
2	DNS	DNS resolver delivered to clients
3	Username / Password	Credentials for tunnel access, not a router administration-account creation page
4	Authentication / Compression / MPPE	Match exposed options to client capabilities; they do not establish IPsec by themselves
5	LCP / MTU / MRU	Configure tunnel link checks and transmit/receive sizes

Check the result An authorized client connects, receives addressing and reaches the required service

6.9 GRE

Path VPN > GRE

GRE encapsulates traffic between reachable peers without encrypting it. Configure outer addresses, inner addresses and routes separately.

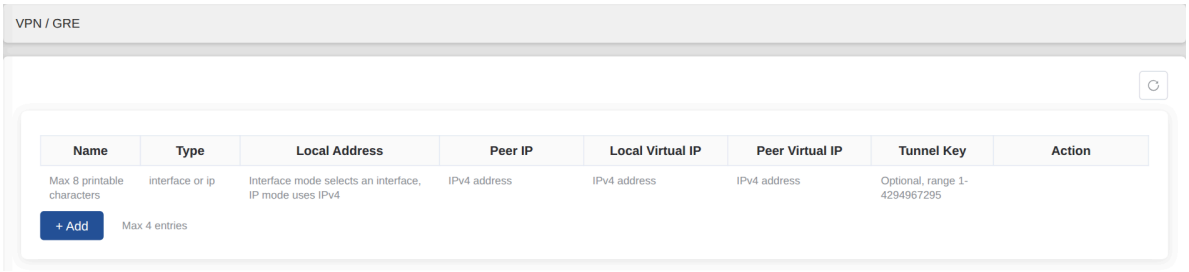


Figure 6-10 GRE

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: BUILD GRE AND ROUTE THE REMOTE LAN

A WAN 192.168.20.2/LAN 192.168.10.1; B WAN 192.168.20.3/LAN .30.1. Permit IP protocol47, not TCP port47. GRE itself is unencrypted.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Name / Type	gretest / ip	For interface binding select the real uplink
Local / Peer Address A	192.168.20.2 / 192.168.20.3	Reverse on B

UI FIELD	ENTRY	BASIS
Local / Peer Virtual IP A	10.46.0.1 / 10.46.0.2	Use the same tunnel subnet with the page prefix fields
Tunnel Key	100	Same on both; not an encryption key

SAVE, TEST AND OBSERVE

1. Save/enable both ends, test peer tunnel IP, then route subnet30 via10.46.0.2 on A and subnet10 via10.46.0.1 on B.
2. Test actual LAN services both ways and inspect tunnel counters. If only large packets fail inspect MTU before changing unrelated settings.

PASS CRITERIA AND DIAGNOSIS

Physical peer works but tunnel fails: inspect protocol47, binding and key. Tunnel works but LAN fails: inspect routes, client gateways and firewall.

Finish and restore: Delete added LAN routes, then disable the GRE test tunnels.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Name / Type	Name the tunnel and choose interface- or local-IP-based egress
2	Local Address / Peer IP	Reachable outer addresses, not tunnel-internal addresses
3	Local / Peer Virtual IP	Plan inner addresses and routes to destination networks
4	Tunnel Key	Match as required to distinguish tunnels; it is not an encryption key
5	Protocol boundary	GRE encapsulation does not encrypt traffic; verify service routing after establishment

Check the result Tunnel endpoints are reachable, tunnel/service routes are correct and the target service works

6.10 PPTP client and server

Path VPN > PPTP Client / PPTP Server

This section describes the delivered PPTP pages. Match client/server addressing, authentication and PPP parameters, then configure service routes.

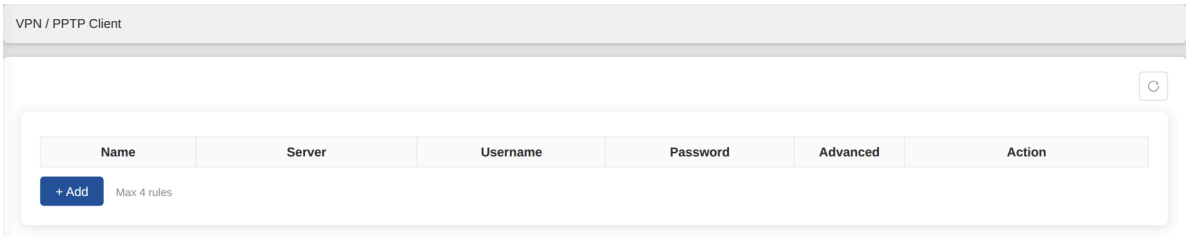


Figure 6-11 PPTP client and server

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

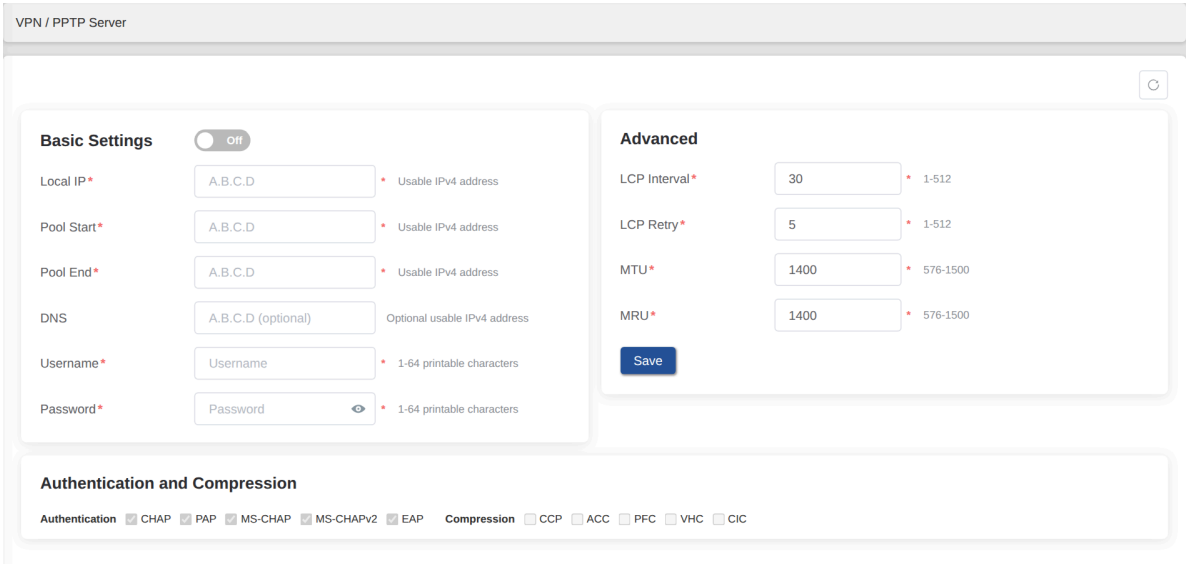


Figure 6-12 PPTP client and server

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: PPTP CLIENT TO AN ISOLATED TEST SERVER

Configure the corresponding server at 192.168.20.3 first; this gateway WAN is .20.2. Encryption limits are detailed below; these protocols alone do not replace a required encrypted VPN.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Server	192.168.20.3	Reachable lab server
Username / Password	field / LabTunnel2026	Matching lab credentials
Authentication / Compression / MPPE	match server	Match server settings as a set

UI FIELD	ENTRY	BASIS
MTU / MRU	1400 / 1400	Use if supported; retain planned LCP settings
Server Local IP / Pool Start / End	10.50.0.1 / 10.50.0.2 / 10.50.0.10	Set on B PPTP server; account field/LabTunnel2026, negotiation matching client

SAVE, TEST AND OBSERVE

1. First configure B PPTP server Local IP/pool and lab account, save/enable, then configure this client. Permit both PPTP transport and GRE in both directions.
2. Save/enable, inspect session/assigned IP and test server tunnel IP. LAN access additionally needs bilateral routes and return paths.
3. Access an active remote test service and record the result; configure PPTP server pool/accounts/DNS using its server field reference below.

PASS CRITERIA AND DIAGNOSIS

Auth fails: inspect credentials/negotiation. L2TP: inspect UDP1701 and any separate IPsec protection. PPTP: inspect TCP1723 and GRE protocol47. LAN failure after tunnel connects: inspect routes/gateways.

Finish and restore: Disable the client and remove temporary routes/server lab accounts.

PPTP is retained for compatibility with existing installations, not as the default for new security-sensitive projects. Start with the remote-access selection section and match the available peer and your security policy.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Client / Server	The client connects to a server; the server maintains tunnel addressing and authentication
2	Server / Username / Password	Use the parameters assigned for the PPTP service
3	Address Pool / DNS	Tunnel addressing and DNS assigned in server mode
4	Authentication / PPP Parameters	Match exposed authentication, compression and link settings to both peers
5	Routing	After establishment, verify destination and return routes

Check the result The relevant connection establishes and addressing, routes and required services are verified

CHAPTER

07

Forwarding

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

7. Forwarding

7.1 NAT and port forwarding

Path Forward > NAT

NAT modifies source/destination addressing for matching traffic. Remote site-service access also needs a reachable ingress, allowed policy and correct return routing.

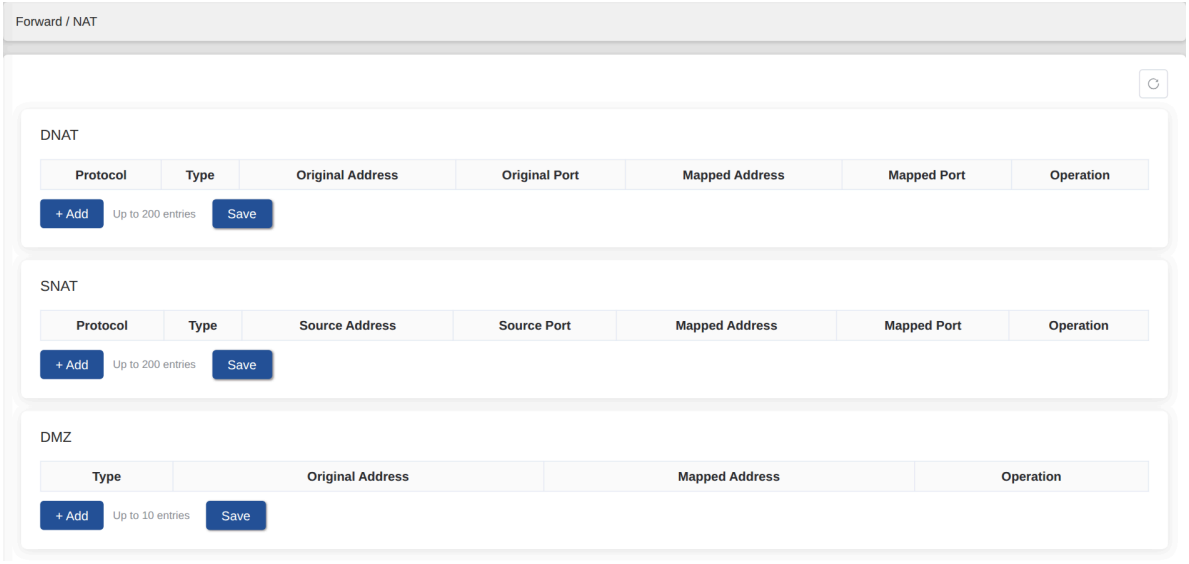


Figure 7-1 NAT and port forwarding

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: ACCESS A LAN HTTP SERVICE FROM UPSTREAM

Run bench on LAN PC .10.10. WAN is 192.168.20.2/24 and upstream PC 192.168.20.10/24. First open http://192.168.10.10:8080/ from LAN and expect YZW-FIELD-LAB HTTP OK.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Rule / Protocol	DNAT / TCP	Add one port mapping
Type / Interface	interface / WAN	Select the proven physical WAN
Original Port	18080	Upstream PC accesses this port
Mapped Address / Port	192.168.10.10 / 8080	LAN service; its default gateway is 192.168.10.1

SAVE, TEST AND OBSERVE

1. Add, enable and save the rule. From the upstream PC open http://192.168.20.2:18080/. A LAN-to-WAN hairpin test is not a substitute.

2. Disable the mapping and repeat: upstream access should fail while direct LAN access to 8080 still works.

PASS CRITERIA AND DIAGNOSIS

Failure: check local 8080 service, PC firewall, target gateway, WAN IP and rule direction. Internet access additionally requires a reachable public address, upstream forwarding and carrier permission. DDNS does not bypass CGNAT.

Finish and restore: Delete the mapping and close the test service/firewall allowance. Publish only the required production ports.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	DNAT	Translates matching destinations to a site service, commonly for port mapping
2	SNAT	Changes source addressing for a defined egress or return-path plan
3	DMZ	Forwards a broader inbound range according to the rule, not merely one service port
4	Protocol / Type	Choose the protocol and interface- or IP-based matching
5	Original Address / Port	Address/service-port match before translation; use the supported range syntax
6	Mapped Address / Port	Address and port after translation; the target host must also allow the service
7	Return Path	The target must return through the correct gateway; translation does not replace routing

Check the result A test from the actual outside network reaches the mapped target service within the intended rule scope

7.2 Static routes

Path Forward > Static Route

A static route defines the next hop for a destination subnet. Plan the peer return path as well; one local rule alone does not establish two-way communication.

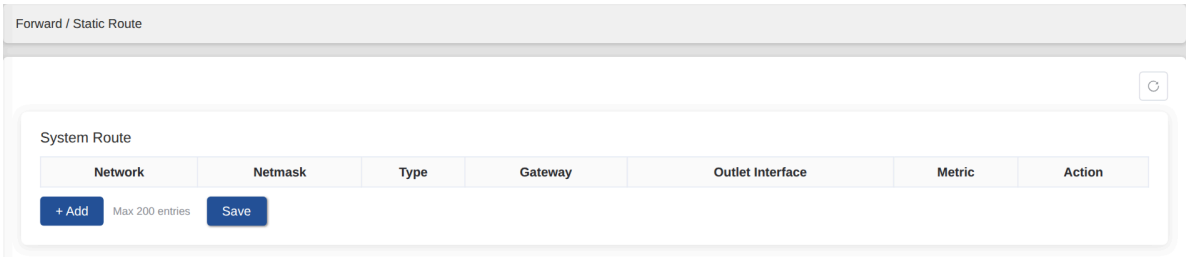


Figure 7-2 Static routes

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: REACH ANOTHER SUBNET THROUGH A SECOND LAN ROUTER

Gateway LAN 192.168.10.1; second router 192.168.10.254 on this LAN and 192.168.30.1 on its other LAN; target PC 192.168.30.10/24, gateway .30.1. Enable forwarding and permit the service on the second router.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Network / Mask	192.168.30.0 / 255.255.255.0	Destination subnet, not the local LAN
Type / Gateway	gateway / 192.168.10.254	Next hop must be directly reachable
Metric	10	Record precedence against other routes to the same target

SAVE, TEST AND OBSERVE

1. Save the route. From 192.168.10.10 run ping 192.168.10.254 and ping 192.168.30.10, then access an actually running target HTTP/PLC service.
2. Check the return path. The second router is directly connected to subnet 10 and 192.168.30.10 must use 192.168.30.1 as gateway. For further hops add return routes to 192.168.10.0/24 at each hop.

PASS CRITERIA AND DIAGNOSIS

Next hop works but target fails: inspect second-router forwarding and remote firewall. A route-table entry does not prove an application listener or return path.

Finish and restore: Delete the added route and restore the second router without deleting the existing default route.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Network / Mask	Specify the destination subnet, not an unrelated local interface address
2	Type	Choose interface or explicit-IP next-hop mode
3	Gateway / Interface	Ensure the next hop is reachable through the selected interface
4	Metric	Expresses preference among eligible routes; it does not replace longest-prefix matching
5	Return Route	The peer needs a route back to the local subnet

Check the result The route uses the intended exit and both forward and return paths work

7.3 MASQ masquerading

Path Forward > MASQ

MASQ translates source traffic to the egress address, commonly for client access through the router. Its use depends on return routing to the site subnet.

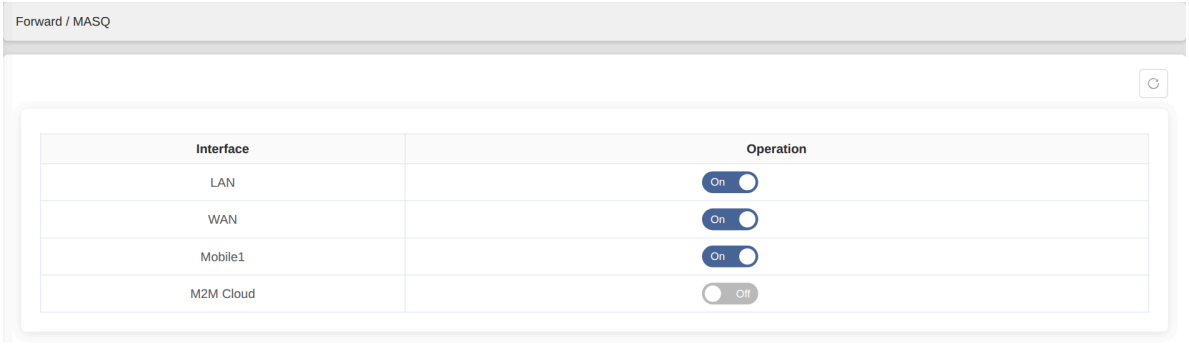


Figure 7-3 MASQ masquerading

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: VERIFY LAN-CLIENT ACCESS THROUGH EGRESS MASQUERADING

Gateway LAN 192.168.10.1/WAN 192.168.20.2; upstream 192.168.20.10 serves HTTP8080 without a subnet10 return route. First prove gateway access to that service.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Interface / Enable	Actual WAN / On	Only this test egress; retain VPN policy

SAVE, TEST AND OBSERVE

1. Save, access http://192.168.20.10:8080/ from 192.168.10.10 and verify upstream sees source WAN .20.2.
2. In an isolated window briefly disable that egress MASQ for comparison; without a return route, LAN access fails. Restore immediately.

PASS CRITERIA AND DIAGNOSIS

Gateway works but client fails: inspect MASQ, client gateway and forwarding. For VPNs requiring source identity prefer return routes over blanket masquerading.

Finish and restore: Restore original MASQ state and verify other services and site return routing.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Interface	Select the interface whose egress address is used for source masquerading
2	Enable	Enable for the network design; routed and masqueraded return paths differ
3	Access Behavior	Test newly established connections after changes; existing session state can affect observations

Check the result The selected source reaches its target through the intended exit and replies return to the original client

7.4 QoS rate control

Path Forward > QoS

QoS controls bandwidth within the configured scope. Match direction, interface, network and rate units to the intended service.

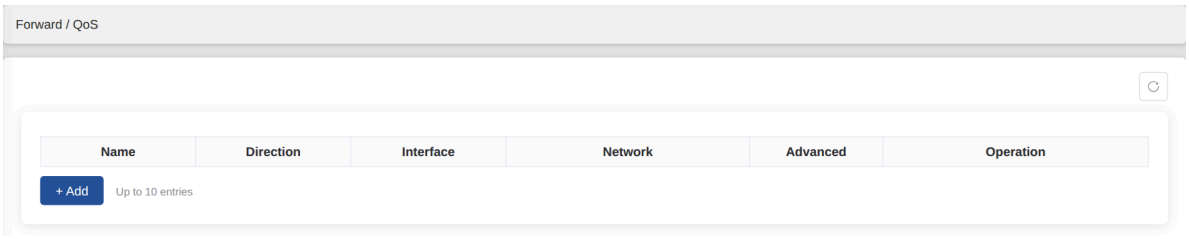


Figure 7-4 QoS rate control

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: LIMIT ONE TEST CLIENT TO ABOUT 2 MBIT/S

Use test client 192.168.10.11 and control PC .10.10. Install iperf3 upstream at 192.168.20.10 and run iperf3 -s. Prove baseline speed exceeds 2 Mbit/s and remove overlapping test-client limits. Allow iperf3 TCP5201 on the server firewall only from test sources.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Name / Direction	labup / Upload	For download create a separate labdown / Download rule
Interface / Network	Actual egress / 192.168.10.11/32	MT7621 matches the LAN client before NAT
Port	blank	Limit the whole client; do not enter a remote HTTP port
Rate / Ceiling Rate	2000 / 2000 kbit/s	Both values use kbit/s
Priority	10	If the priority field is present

SAVE, TEST AND OBSERVE

1. Save upload rule. On 192.168.10.11 run iperf3 -c 192.168.20.10 -t 20 and record before/after throughput.
2. Add the download rule and run iperf3 -c 192.168.20.10 -R -t 20. Control PC 192.168.10.10 should not be limited by this /32 rule.

PASS CRITERIA AND DIAGNOSIS

Expect throughput near, and not persistently far above, 2 Mbit/s with protocol overhead. Check direction, egress, CIDR and save if ineffective. A baseline below 2 Mbit/s cannot prove shaping. MT7621 has no separate master switch here.

Finish and restore: Delete labup/labdown, rerun iperf3 to confirm baseline recovery and stop the server.

The displayed Kbs unit means kbit/s (kilobits per second), not KB/s; 1000 kbit/s is approximately 1 Mbit/s.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Name / Direction	Name the rule and select upload/download according to the page definition
2	Interface / Network	Define the affected interface and network scope
3	Port	Specify service ports when limiting applications; follow the page semantics for an empty field
4	Rate / Ceiling Rate	Use kbit/s, not KB/s. Ceiling Rate is the rule maximum and must be at least Rate; actual scheduling also depends on link capacity and other traffic.
5	Priority	Sets scheduling preference within the rule, not end-to-end bandwidth on external networks

Check the result Matched traffic follows the intended limits while other required services continue to work

CHAPTER

08

Firewall

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

8. Firewall

8.1 Management ports and remote access

Path Firewall > Port Setting

This page manages listener settings and source-network access to the router services. Management access control is not a universal policy for forwarded business traffic.

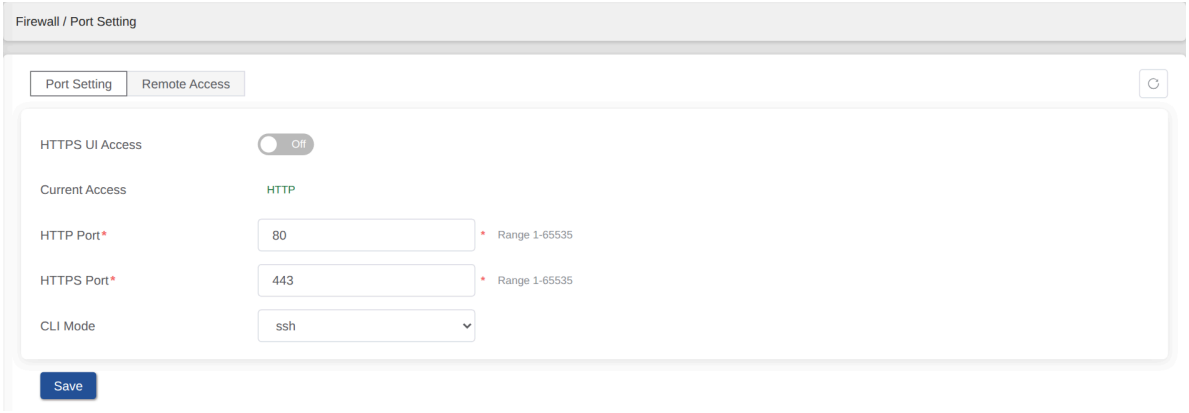


Figure 8-1 Management ports and remote access

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: CHANGE MANAGEMENT PORTS WHILE RETAINING LOCAL ACCESS

Back up and record current URL/LAN-WAN-VPN permissions. Keep local wired access; test the new entry before closing the old one.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
HTTPS Port	8443	If HTTPS is supported, ensure port is unused
HTTP / HTTPS / LAN Access	retain working LAN entry	Do not disable every management method
WAN / CLI Access	approved scope only	Prefer authorized VPN for remote management

SAVE, TEST AND OBSERVE

1. Save HTTPS port and open https://192.168.10.1:8443/ in another window. Verify certificate identity, log in, then retire unneeded old entries.
2. Test success from allowed LAN/VPN and rejection from unauthorized WAN sources.

PASS CRITERIA AND DIAGNOSIS

Connection refused: inspect port/protocol/enable. Login failure: inspect credentials/session. CLI and Web ports are different.

Finish and restore: Restore ports/permissions through retained LAN access and retest both URLs.

> **Management protocol security**: the screenshot shows HTTP and Telnet settings on the illustrated firmware, not recommended security settings. Telnet and HTTP do not provide transport encryption; avoid management across public or untrusted networks. Prefer SSH and HTTPS when supported by the delivered firmware, restrict WAN management sources, and retain a recoverable local access path before changing settings.

MANAGEMENT AFTER INITIAL SETUP

1. Keep a working LAN maintenance connection and record the current address, protocol and port. Do not change every management rule over the only remote path.
2. Where the delivered firmware provides HTTPS, switch using the page, sign in at the new HTTPS address/port and check certificate identity and browser notices. A switch on the page does not establish that HTTPS is already enabled.
3. Plan access separately for LAN/WAN/VPN sources. Restrict WAN management when unnecessary; prefer an authorized VPN/platform maintenance path.
4. Verify access from allowed sources and denial from excluded sources; retain the rules and recovery access method.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	HTTPS UI Access / Current Access	Distinguish enabling HTTPS from the protocol currently used by the browser
2	HTTP / HTTPS Port	Web listeners; reconnect with the matching protocol and port after changes
3	CLI Mode	Interpret CLI access mode separately from the Web account page
4	Protocol	Configure ICMP, Web, SSH and CLI access separately
5	LAN / WAN / VPN	Rules are grouped by source network; follow this firmware interface for allow/deny semantics
6	Management Path	Retain a working maintenance path before changing the protocol or source policy used for access

> **Check the result** Only intended services are accessible from the specified direction and management remains available

8.2 SPI filtering

Path Firewall > SPI Filter

SPI enables the connection-state and abnormal-traffic checks exposed by the firmware. Select needed protections and verify legitimate services.

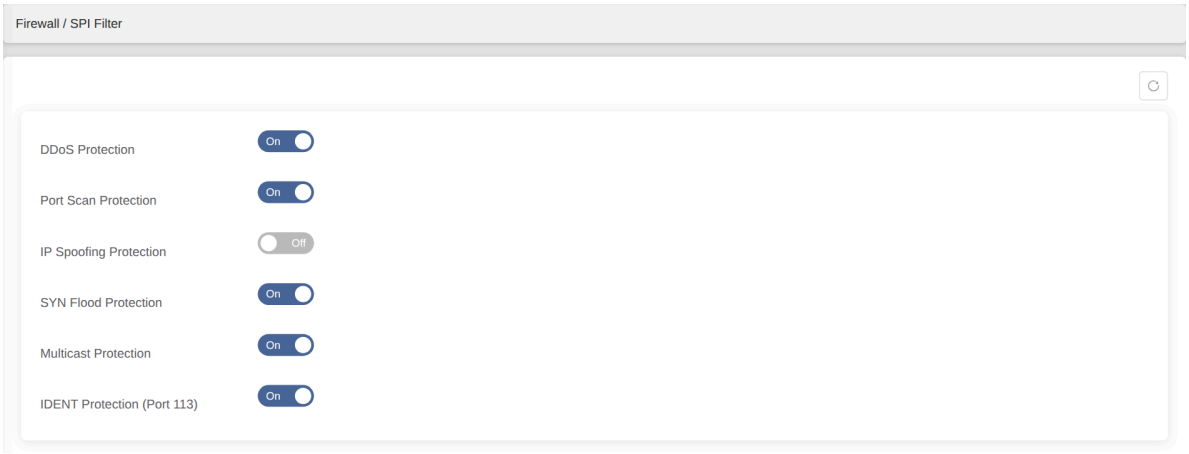


Figure 8-2 SPI filtering

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: VERIFY SERVICES AND UNAUTHORIZED ACCESS AFTER ENABLING PROTECTION

Back up and record VPN/reporting/management baseline. Change one protection item at a time and keep LAN access.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Protection Item	actual required item	Do not assume every protocol is covered
Enable	On	Save/test one item at a time

SAVE, TEST AND OBSERVE

1. Enable/save one item, repeat permitted applications and an unauthorized external access test, record results/logs, then move to the next item.

PASS CRITERIA AND DIAGNOSIS

If valid VPN/acquisition breaks, restore the last item and inspect protocol/direction. SPI does not replace explicit source/port rules.

Finish and restore: Restore the prior switches and retest, retaining per-item results.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Protection Items	Select exposed protections such as DDoS, port-scan, IP-spoofing and SYN-flood checks
2	Enable / Save	Save enabled options, then verify services that must remain reachable
3	Effect	Stateful checks do not replace endpoint controls or guarantee blocking every attack

Check the result The intended filter direction and rules take effect while required connections and replies work

8.3 Address filtering

Path Firewall > IP Filter

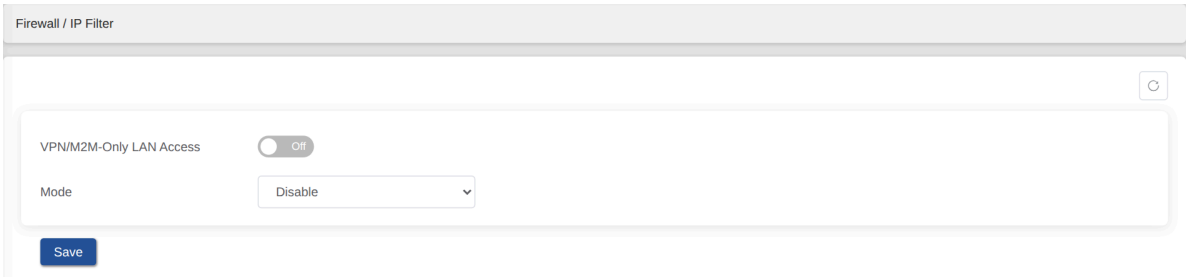


Figure 8-3 Address filtering

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: BLOCK ONE SERVICE FOR ONE TEST CLIENT

Keep management on 192.168.10.10; use 192.168.10.11 as test client. Upstream 192.168.20.10 runs bench --bind 192.168.20.10. First prove both can open http://192.168.20.10:8080/.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Mode / Scope	Blacklist / forward	Test forwarding, not input management access
Filter Option / Protocol	ip / TCP	Match IP
Source / Destination	192.168.10.11/32 / 192.168.20.10/32	Source is test client; destination is service
Destination Port / Source Port	8080 / blank	Do not enter management 80/443

SAVE, TEST AND OBSERVE

1. Save the rule and close existing test-client connections before retrying. 192.168.10.11 should fail at 8080; 192.168.10.10 should succeed; management at 192.168.10.1 should remain available.

PASS CRITERIA AND DIAGNOSIS

Both fail: check service. Both succeed: check forward scope, mode, source IP and existing sessions. VPN/M2M-Only LAN Access is independent; disabling the blacklist does not disable it.

Finish and restore: Disable/delete the rule and verify both recover. For a whitelist, permit the management source before enabling it.

CONFIGURATION STEPS

1. Decide whether VPN/M2M-Only LAN Access is required. Its switch submits and applies independently; selecting Disable below does not remove this restriction.
2. When enabled, direct Internet forwarding from LAN clients is restricted. VPN/m2mCloud paths still need their own routes, authorization and access rules; the switch does not create a tunnel or disable gateway connectivity.
3. Select Disable, Blacklist or Whitelist and edit the selected list. After switching modes, check which list is displayed.
4. Select Rule first: input applies to services on the gateway; forward applies to client traffic routed through it. Keep management access and client forwarding scopes distinct.
5. Choose ip, mac or ip&mac. Combined rules require both entered IP and MAC conditions. Do not fill disabled IP/port fields in MAC-only mode; ICMP does not match ports.
6. Enter source, destination and protocol as required. Type ip uses a destination address; Type interface selects the actual incoming interface, not the outgoing interface.
7. Preserve an allowed management path before saving the list. Test new connections from both allowed and denied clients rather than relying on an existing session.

> Verify whitelist behavior in the input/forward scopes containing rules; do not use an empty whitelist as a deny-all policy. Saving the list and operating the independent switch are separate actions; disabling one does not disable the other.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	VPN/M2M-Only LAN Access	Independent switch restricting direct LAN Internet forwarding. Disabling the lists does not remove it; check gateway connectivity and tunnel authorization separately.
2	Mode	Disable stops rule filtering; Blacklist denies matches; Whitelist permits the allowed scope
3	Filter Option	ip matches IP conditions, mac matches source MAC and ip&mac requires both. Select input/forward scope first.

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
4	Protocol / Source Port / Destination Port	Match the actual transport protocol and service ports
5	Source / Destination Address	Source initiates access and destination is its target; do not swap directions
6	Source MAC	Matches LAN device identity, not arbitrary remote-device MACs across routers
7	Verification	Test allowed and denied access separately and retain management access before enabling a whitelist

Check the result List mode and matching follow the plan, verified with one allowed and one restricted client

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Rules saved but behavior differs	Test an allowed and a denied client. Check blacklist/whitelist mode and the IP, MAC or combined matching fields.

8.4 Domain filtering

Path Firewall > Domain Filter

Domain filtering applies a blacklist/whitelist policy. Their default behaviors differ, so test allowed and denied targets separately.

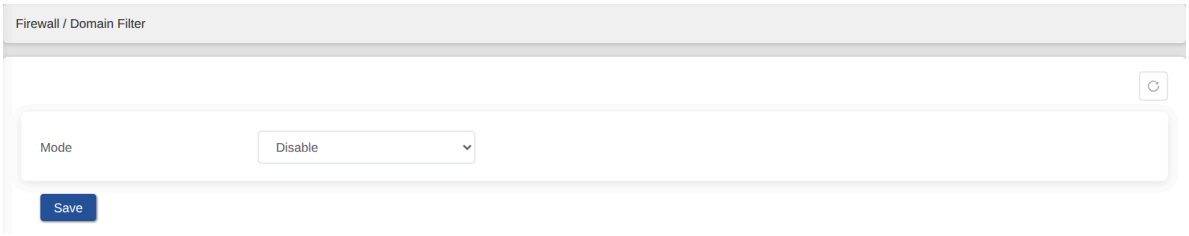


Figure 8-4 Domain filtering

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: BLOCK ONE VERIFIED REACHABLE DOMAIN

Use an approved real test domain/server. Prove nslookup and application access first; a nonexistent domain cannot demonstrate filtering. Retain management on the control PC.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Mode	Blacklist	Do not start with an empty whitelist
Domain	actual test FQDN	Hostname only, no URL scheme/path

SAVE, TEST AND OBSERVE

1. Save the domain, close old connections/clear application cache and retry, then test an allowed service.
2. Inspect client DNS path, encrypted DNS and direct-IP behavior; accept only the filter scope actually proven, not universal content blocking.

PASS CRITERIA AND DIAGNOSIS

Fails before and after: inspect the original site. Ineffective: inspect hostname/mode/cache and bypass paths.

Finish and restore: Delete the test domain, restore mode and confirm access recovery.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Mode	Choose disabled, blacklist or whitelist operation
2	Domain	Use the domain to match, not a complete page path
3	Add / Delete / Save	Save rule edits and test both target and required normal access
4	Scope	Domain filtering is not full content inspection of encrypted applications; test direct-IP and other paths separately

Check the result The test client follows the domain policy and required services remain functional

CHAPTER

09

System management

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

9. System management

9.1 Local logs

Path System Management > Log

Local logs record system and service events for connection failures, configuration changes, acquisition errors and reboots. Check the clock before correlating event times.

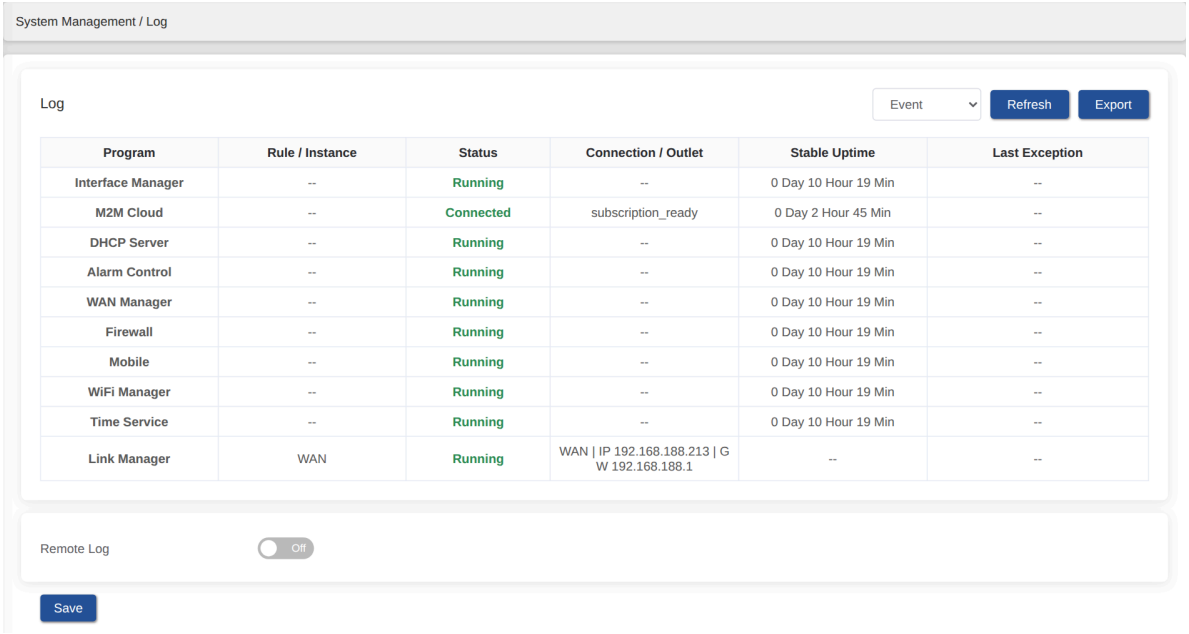


Figure 9-1 Local logs

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: CAPTURE EVIDENCE THAT SUPPORT CAN REPRODUCE

Synchronize time and identify the failed link, device, topic or port; avoid submitting only a generic connection-failed screenshot.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Time / Operation	timestamped operation	Include timezone
Evidence	Status page + related logs + actual test results	Redact passwords/keys/full SIM identifiers before sharing

SAVE, TEST AND OBSERVE

1. Record egress/service state before reproduction. Perform one defined test, then export/copy logs covering its time window.

2. Provide problem/expected/actual/time/topology/failure stage/logs/recovery actions and retain a controlled original.

PASS CRITERIA AND DIAGNOSIS

No logs: inspect time and whether the service triggered. Repeated errors: identify the first failure and surrounding context, not only the last line.

Finish and restore: End temporary debugging and restore log levels/polling to avoid excessive ongoing logging.

Record the start time, relevant interface and operation and keep the surrounding event sequence. A single error line may hide an upstream cause. Exclude passwords, private keys and complete SIM identities from shared logs.

> **Check the result** The fault time and relevant module are identified and align with the observed symptom

9.2 System time

Path System Management > System Time

System time supports logs, schedules and certificate validation. Configure a reachable time source and verify actual synchronization.

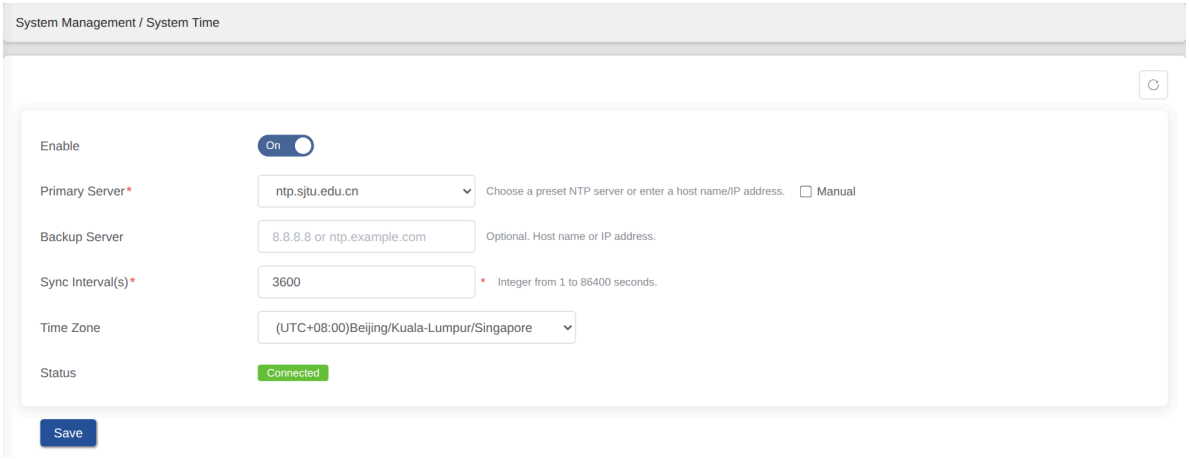


Figure 9-2 System time

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: SET TIME BEFORE DIAGNOSING CERTIFICATES OR SCHEDULES

Obtain site timezone and allowed NTP servers. China sites use UTC+08:00; use local requirements elsewhere rather than the documentation PC timezone.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Enable / Primary / Backup	On / administrator primary NTP / backup NTP	Use reachable NTP servers; permit UDP123
Time Zone	site timezone	China example UTC+08:00
Sync Interval	retain and record unit	First prove synchronization

SAVE, TEST AND OBSERVE

1. Save, inspect current time/sync/source and compare with a synchronized PC against the project tolerance.
2. Retest TLS, schedules and log timestamps; cellular time fallback does not prove NTP success.

PASS CRITERIA AND DIAGNOSIS

Whole-hour offset: inspect timezone. Wrong date/no sync: inspect DNS, UDP123 and server. Jumps: inspect source changes/startup sync.

Finish and restore: Restore production NTP/interval and record timezone/source.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Enable / Primary / Backup	Configure reachable NTP services and backup operation
2	Sync Interval	Set the synchronization period in the displayed units, separately from acquisition timing
3	Time Zone	Controls local display and schedule interpretation, not the time reference itself
4	Status / Time Source	Check synchronization and the actual source; certificates and log analysis also rely on correct time

Check the result Timezone and current time are correct and logs align with site records

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Log times do not match the site	Check timezone first, then reachability of the time synchronization server.

9.3 Admin password management

Path System Management > Account

The current Web account page only changes the existing admin password. It has no guest enable/disable, user creation or permission assignment.

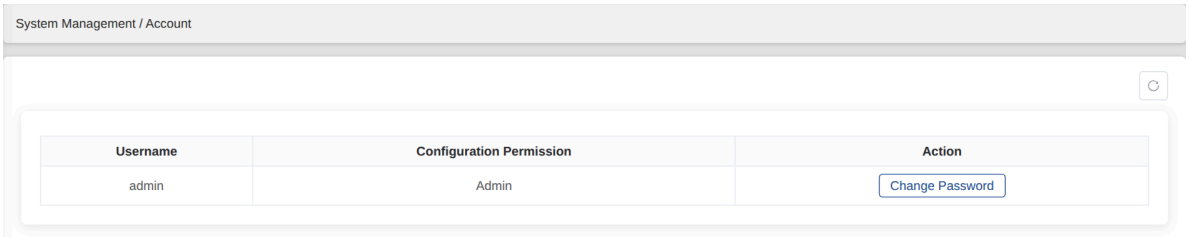


Figure 9-3 Admin password management

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: CHANGE ADMIN PASSWORD AND IMMEDIATELY VERIFY LOGIN

Retain local LAN and the current session. Prepare a password meeting the unit rules and store securely. The current page’s 5–16 ASCII-character limit still applies.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Current Password	current valid password	Not admin after a prior change
New / Confirm Password	same new password	Do not record in public forms

SAVE, TEST AND OBSERVE

1. Save, then log in with admin/new password in a private window. Confirm Home before closing the old session.
2. Confirm the old password cannot create a new session. Manage VPN/platform/Node-RED/mail credentials separately.

PASS CRITERIA AND DIAGNOSIS

Save rejected: inspect length/ASCII/confirmation. New login fails: inspect keyboard/account before retries. For lost credentials prepare backup/recovery as described in Reset.

Finish and restore: If reverting, log in with the new password and set the approved replacement; do not keep the public initial password for production.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	admin	The router Web interface only maintains the existing admin password
2	Change Password	Password is the only input: 5–16 printable ASCII characters, without spaces or non-ASCII characters. Save applies the change; Cancel discards it.
3	Permission Boundary	No user creation, guest toggling or permission assignment; VPN/platform accounts are separate

Check the result The new password signs in as admin and the password record is updated

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Login fails with the new password	Check case, spaces and length. Confirm the change was saved and enter the actual new password again.

9.4 Configuration backup and restore

Path System Management > Config Management

Export a backup before changing networks or services. Import, factory reset and reboot have different effects; confirm the intended action.

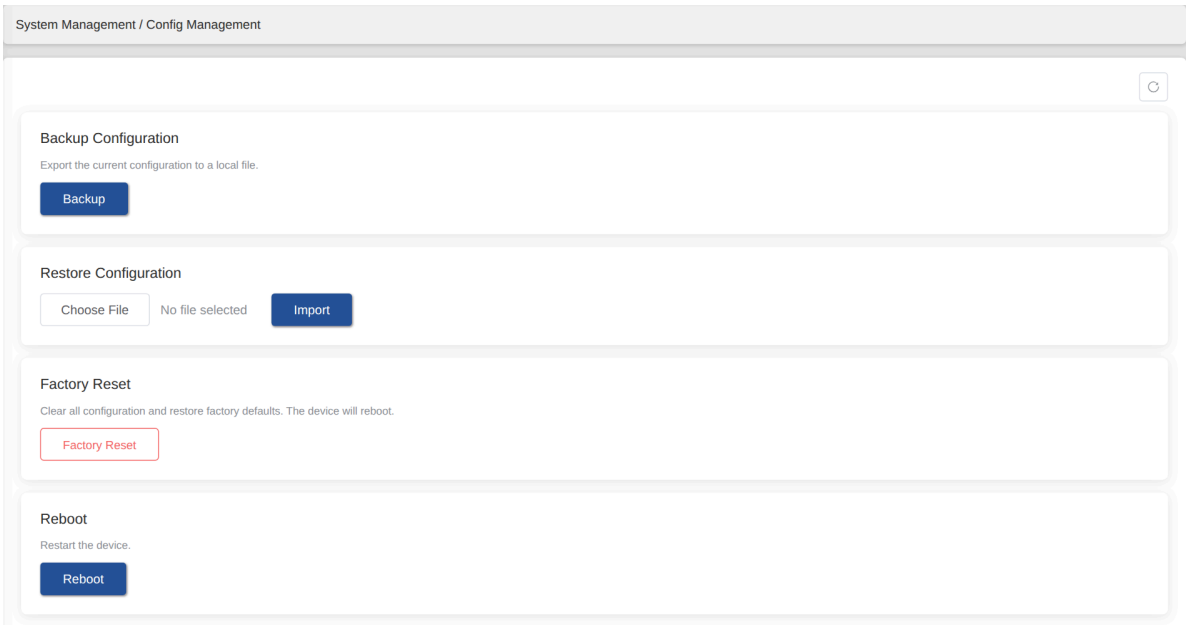


Figure 9-4 Configuration backup and restore

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: CREATE A CONFIGURATION BACKUP THAT CAN BE RESTORED

Record model, ordered hardware, management address, service list and backup date. Configuration may contain secrets; store it in the controlled project folder.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Backup	Model_site_date.cfg (keep actual export extension)	Keep the actual exported extension and format
Choose File / Import	compatible same-model backup	Do not import across models

SAVE, TEST AND OBSERVE

1. Export, verify non-empty file and record size/SHA256 using Windows Get-FileHash with -Algorithm SHA256.
2. Test restoration in a maintenance window or on a spare same-model unit. Import, wait as instructed, reconnect using the backed-up address and retest uplink/acquisition/reporting/remote access.

PASS CRITERIA AND DIAGNOSIS

A file alone proves export, not restorability. Require all core services after import. Lost access: inspect restored management subnet/port/password.

Finish and restore: Keep a pre-restore backup; use the delivered recovery procedure if incompatible rather than trying other-model files.

KEEP A USABLE CONFIGURATION RECORD

Export a backup after completing a service group. A useful filename is model_site_firmware_date. Record the LAN address, uplink method, serial assignments, effective MQTT topics and remote network name alongside it. Keep passwords and keys through your established secure process.

A restore file must be compatible with the model and firmware. Restoring may change the management address and password; reconnect using the saved configuration and revalidate acquisition, reporting and remote services.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Backup	Export the current configuration and identify it by model, firmware and date
2	Choose File / Import	Import a compatible model/firmware configuration and recheck management access and services

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
3	Factory Reset	Clears business configuration and reboots; prepare a backup and reconnection details
4	Reboot	Restarts the system and temporarily interrupts services

Check the result The backup is available; after restore, its management address works and essential services are revalidated

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
The old address fails after restore	Reconnect with PC addressing appropriate for the LAN stored in the backup; check whether its password was restored.

9.5 Firmware upgrade

Select Factory reset after upgrade when the new firmware changes the configuration. Leave it unchecked for a program-only update with no configuration changes. A checked box resets settings; it does not retain them. Reconfigure after the reset and separately confirm whether an old backup is compatible.

Path System Management > Firmware Upgrade

FIELD TASK: UPGRADE IN A MAINTENANCE WINDOW AND VERIFY SERVICES

Obtain firmware for the exact model/hardware, checksum, configuration-retention compatibility and rollback plan from the supplier. Export configuration, point lists and flows first.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Firmware File	supplier-approved file	Match SHA256 against the release handover
Factory reset after upgrade	Select Factory reset after upgrade when the new firmware changes the configuration. Leave it unchecked for a program-only update with no configuration changes. A checked box resets settings; it does not retain them. Reconfigure after the reset and separately confirm whether an old backup is compatible.	Reconfigure after the factory reset

SAVE, TEST AND OBSERVE

1. Upgrade through local wired management with stable power and wait for completion/reboot without interrupting the write.
2. Log in again and verify LAN/WAN, cellular, failover, acquisition values, MQTT, VPN and schedules, recording actual results.

PASS CRITERIA AND DIAGNOSIS

Upload rejected: inspect integrity/model. Lost access after reboot: inspect default address, PC lease and HTTP/HTTPS. Upgrade completion does not prove service recovery.

Finish and restore: For incompatibility follow supplier rollback plus backup. If startup state is unknown, obtain supplier recovery guidance before repeated flashing.

Use a firmware image explicitly matching YZW300X, its storage layout and order variant. Back up configuration/application data and check release notes/checksum. Maintain stable power, submit once, wait for boot, then validate networking, VPN, acquisition and platform services.

> **Check the result** After login, firmware matches the intended package and networking, acquisition, reporting and remote services work

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Login works after upgrade but services do not	Check firmware, retained configuration and port roles, then validate networking, VPN, acquisition, MQTT and remote maintenance.

9.6 Reset button and recovery

FIELD TASK: RECOVER MANAGEMENT ACCESS BEFORE DECIDING ON RESET

Prepare model, old/new addresses, backup and local assistance. Factory reset clears configuration; use this model’ s reset illustration and delivered hold time rather than assuming a universal duration.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
PC Network	Current subnet first;192.168.8.10/24 only at defaults	Use .8.1 only when the unit is actually at defaults
Access Check	Correct LAN port, IP, HTTP/HTTPS and management port	Rule out PC VPN/proxy and stale leases

SAVE, TEST AND OBSERVE

1. Check power/link/PC IP and current address. After a LAN change move the PC to the new subnet; after port change use the full protocol/port URL.

2. If reset is necessary, follow model-specific steps and wait for boot. At defaults use DHCP or .8.10/24 to reach .8.1, reset the password, restore compatible backup and retest all services.

PASS CRITERIA AND DIAGNOSIS

Still inaccessible: inspect actual reset trigger, port role, PC IP and supply. Configuration reset does not repair PLC programs or hardware faults.

Finish and restore: Rebuild using the backup/site record; without backup restore LAN/uplink first, then acquisition and remote access one service at a time.

Export configuration and ensure local reconnection before recovery. This model’ s datasheet describes the button as follows:

Short press to reboot; press and hold for 15 s to restore factory settings.

Reboot, configuration reset and application-data removal are different operations. Follow guidance for the delivered firmware; additional hold ranges on a reference device do not establish this model’ s behavior.

CHAPTER

10

m2mCloud

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

10. m2mCloud remote management

10.1 Client configuration and networking

Path Application > M2M Cloud

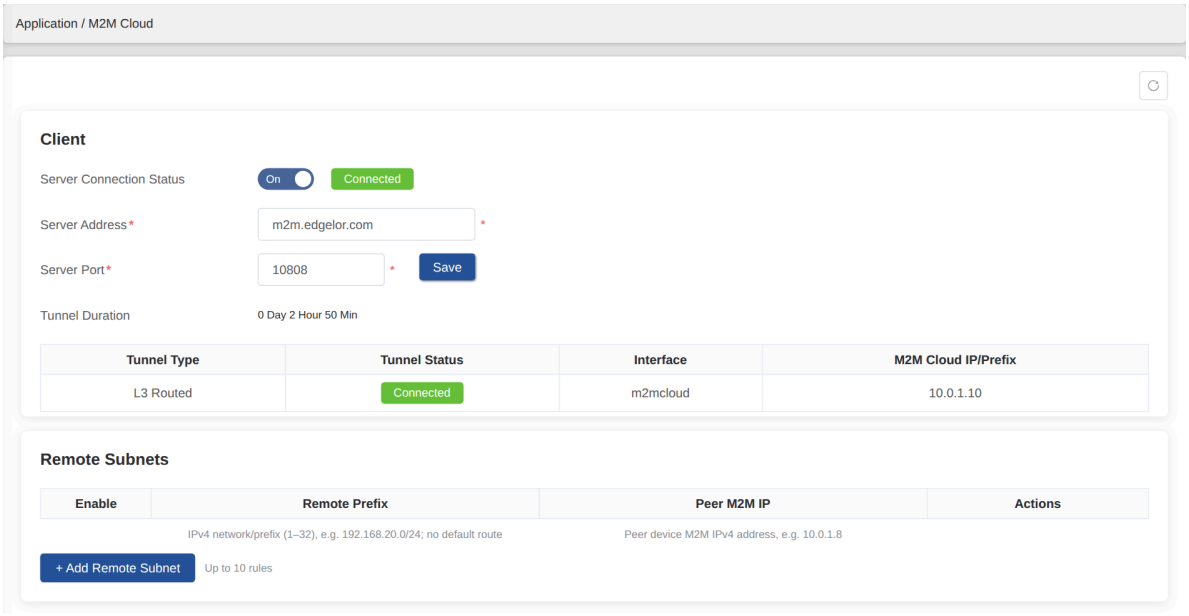


Figure 10-1 Client configuration and networking

Same-platform native OEM UI reference: YZW1010; use the delivered menus and model-specific wiring

FIELD TASK: ESTABLISH REMOTE MAINTENANCE WITHOUT A PUBLIC SITE IP

Site LAN192.168.10.0/24 must not overlap the remote PC LAN. Obtain server/port, account authorization, network type, tunnel IPs and allowed subnets from the platform administrator. Validate session, virtual network and site service separately.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Client / Server / Port	On / actual platform server / port	Copy the actual platform endpoint
Connection / Tunnel Type	Authorized connection / L3 example	Authorized connection; this L3 case does not imply L2 broadcast
M2M IP	Gateway10.44.0.2; remote PC10.44.0.3	Must actually be assigned/approved by platform
Remote Prefix / Peer M2M IP	remote network plan	Do not route the gateway’ s own LAN as remote; PC route to subnet10 goes via gateway tunnel IP

SAVE, TEST AND OBSERVE

1. Prove server reachability, save endpoint/authorization/network settings and enable. Inspect session/interface address and authorize both gateway and PC on the platform.
2. Join the same authorized network from the remote PC. Ping the actual gateway tunnel IP and inspect route192.168.10.0/24 via that IP. Do not add conflicting routes if platform manages them.
3. Run bench on LAN PC .10.10. From remote open http://192.168.10.10:8080/ before testing the actual PLC/HMI service.

PASS CRITERIA AND DIAGNOSIS

Online but no tunnel-IP access: inspect authorization/type/address. Tunnel works but 192.168.10.10 fails: inspect PC route, LAN client gateway 192.168.10.1, firewall and return path.

Finish and restore: Leave the test network and revoke temporary routes/authorization; retain approved maintenance scope and local recovery.

OBTAIN PROJECT DELIVERY INFORMATION

Ask the equipment supplier or platform administrator for server/port, CA, account, device authorization and compatible PC client. Confirm Windows and Linux packages/capabilities separately. An online device does not establish an authorized business tunnel.

1. Enter the delivered server address and port, enable the client and check Internet access.
2. Authorize or group the device in the cloud and check tunnel status. L2 bridging or L3 routing is assigned by the platform.
3. In L3 mode, configure remote subnets and peer M2M IPs according to the network plan. Up to 10 rules are supported, without a default route. Rules remain saved but inactive in L2 mode.
4. Join the authorized network from the remote PC. Confirm reachability before using compatible PLC/HMI vendor tools for program upload/download, debugging or maintenance.

The site needs no public IP. Connectivity may use a peer-to-peer path or server relay, depending on the network and authorization. Remote serial access requires the platform proxy client and an unoccupied serial port.

> Verify: the tunnel is online and the PC reaches the required site IP and service. An online tunnel alone does not satisfy PLC programming access policies or protocol requirements.

VERIFY PLATFORM CONTROL AND THE SERVICE TUNNEL SEPARATELY

Platform control handles identity, authorization and network settings. A separate service path carries PLC/HMI traffic. An online control connection does not prove business reachability.

LAYER	WHAT TO CHECK	DISTINCTION
Platform control	Device and PC belong to an authorized network	Platform online does not establish tunnel and target health
Service path	Actual direct/P2P or relay conditions and usable tunnel	Direct operation depends on networks; relay availability/limits follow the delivered platform
L2 / L3	Planned bridging for L2; destination routes and return paths for L3	L3 does not provide LAN broadcast discovery; L2 still needs broadcast and loop control
Engineering service	Vendor tool connects to the target and reads information	Ping does not validate drivers, project permissions or programming services

START WITH THE PROBLEM: NO PUBLIC IP, SUBNETS AND DISCOVERY

OBSERVATION	DECISION PATH	COMPLETION CHECK
4G only, no public IP	Verify SIM-to-platform access; authorize gateway/PC on the same platform; inspect control and tunnel separately	Gateway virtual IP → explicit PLC IP → vendor tool; an online list is not acceptance
PLC IP works; discovery fails	Check L3 versus L2, tool virtual NIC, local firewall and actual platform L2 availability	Use explicit IP where supported; test L2 only when broadcast is required
Office/site overlap or duplicate site networks	Prefer renumbering; otherwise follow the client's explicit authorized overlap workflow	Test office LAN, remote PLC, gateway and rollback without silently hijacking office routes
Gateway reachable; PLC unreachable	Check site LAN, target gateway/return path, platform rules and access policy	Compare local access to the same PLC, then test layer by layer

See 10.4 Windows client: remote access and 10.5 Linux client: login and bridge for the respective steps.
Platform control, tunnel operation, IP reachability and engineering-tool success are four separate results to record.

INFORMATION TO INCLUDE WHEN REQUESTING A CLIENT

Provide the model and gateway firmware, PC operating system/architecture, intended platform endpoint/version, purchase-order or service contact, PLC model and remote-serial requirement. Ask the supplier to confirm the installer version/checksum, account and device permissions. See 10.4/10.5 for Windows 2.2.25 versus Linux 0.1.2. Published website contacts are enquiry routes; the delivery owner must still confirm the formal support channel and compatible version. This manual does not record a completed client business test.

FIELD REFERENCE

NO.	FIELD	WHAT TO ENTER / HOW TO USE IT
1	Client / Server / Port	Enable the client with the platform server and port assigned to this device.
2	Connection / Tunnel Type	Check management and tunnel states separately; the platform authorizes L2/L3 mode
3	M2M IP / Interface	Inspect the assigned address; it does not make all remote subnets reachable
4	Remote Prefix / Peer M2M IP	In L3 mode, assign a next hop for the remote business subnet; default routes are not accepted
5	Rules in L2 Mode	Remote-subnet rules remain saved but inactive and are not bridge configuration
6	Remote Serial	Use the supplied proxy client and authorized session with an available physical port

Check the result Router and PC join the authorized network and reach both the field target IP and its service

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
Tunnel online but PLC/HMI access fails	Check authorization, L2/L3 mode, remote subnets/return paths and equipment access permissions before using the compatible vendor tool.

10.2 Remote PLC/HMI program transfer

FIELD TASK: PROVE REMOTE READ ACCESS BEFORE A PLC DOWNLOAD

Complete m2mCloud/VPN and the 192.168.10.10:8080 test first. Example PLC is 192.168.10.20/24, gateway .10.1. Obtain actual model, service port, protection settings and authorization from the PLC project.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
PLC IP / Mask / Gateway	192.168.10.20 / 255.255.255.0 / 192.168.10.1	Confirm on the PLC itself
Vendor Tool Target	192.168.10.20	Use direct IP and the actual model protocol
Engineering File	backed-up site project	Verify CPU/release compatibility and protection password

SAVE, TEST AND OBSERVE

1. Locally perform read-only online monitoring and back up the project. Remotely select the correct virtual adapter/direct IP and repeat monitoring.
2. Compare a known point, CPU state and project checksum. Download only with an agreed window, backup and rollback owner, following the vendor procedure.

PASS CRITERIA AND DIAGNOSIS

Discovery fails but direct IP works: inspect broadcast scope. Port works but engineering tool fails: inspect PLC protection, model, session limits and tool version. Web access does not prove a PLC download.

Finish and restore: Close the session and restore operating mode/access scope. Recover failed downloads with the prepared PLC backup, not by resetting the gateway.

> **Check the result** The vendor tool identifies the correct target and post-maintenance project version and field operation are correct

> Authorized access does not require a site public IP, but vendor protocol, endpoint policy and project version must still be compatible.

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
The router is reachable but the PLC is not found	Test the PLC IP and service, then remote subnet routes, return path and the vendor tool connection method.

10.3 Remote serial access

FIELD TASK: ECHO-TEST REMOTE SERIAL BEFORE CONNECTING EQUIPMENT

Verify physical/logical mapping and release the port. Use a matching electrical echo tester or a USB-serial peer. First prove the m2mCloud/VPN network.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Remote Serial / Serial	Enable delivered feature / verified free port	Use delivered virtual-COM component/support
Baud / Data / Parity / Stop	9600 / 8 / N / 1	Match both ends

SAVE, TEST AND OBSERVE

1. Install/start the delivered remote serial mapper, select the authorized gateway/port and record its assigned COM number.
2. Open that COM in a terminal, disable local echo and send FIELD-001. Have the local peer return identical content, compare bytes both ways, then test the real device protocol.

PASS CRITERIA AND DIAGNOSIS

COM fails to open: inspect mapper, authorization and ownership. No bytes: inspect serial settings/wiring/latency. Transparent forwarding does not automatically convert the device protocol.

Finish and restore: Close COM/mapping, release the port and restore acquisition/access scope.

> **Check the result** The proxy exchanges known messages through the intended port and required local services are restored afterward

TROUBLESHOOTING

SYMPTOM	WHAT TO CHECK
The proxy connects but no reply arrives	Check the single serial port mapping, communication settings and ownership. A connected proxy does not establish a slave reply.

10.4 Windows client: remote access

FIELD TASK: VERIFY REMOTE ACCESS ON WINDOWS USING ROUTES

Install the delivered Windows client and obtain platform/account/network authorization. Its local subnet must differ from site subnet10; record route print and ipconfig first.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Server / Account / Network	platform handover	Not the gateway Web admin account
Site Route	192.168.10.0/24 via actual gateway tunnel IP	Prefer managed routes; add only after confirming absence

SAVE, TEST AND OBSERVE

1. Sign in and join the authorized network, then inspect virtual IP with ipconfig and site route with route print.
2. Ping the gateway tunnel IP, run Test-NetConnection 192.168.10.10 -Port 8080 and open http://192.168.10.10:8080/.

PASS CRITERIA AND DIAGNOSIS

Tunnel IP works but service fails: inspect route priority, subnet overlap and site client gateway/firewall; disabling all firewall protection is not a final fix.

Finish and restore: Leave the test network, delete only manually added test routes and verify original networking.

10.5 Linux client: login and bridge

FIELD TASK: VERIFY LINUX TUNNEL INTERFACE AND SITE ROUTE

Use the delivered Linux client and its actual configuration path. Do not embed credentials in command lines. Record ip addr and ip route first.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Platform / Network	platform handover	Authenticate/authorize using the delivered client instructions
Route	192.168.10.0/24 via gateway tunnel IP	Use the gateway tunnel IP, not the local physical router

SAVE, TEST AND OBSERVE

1. Start/join the authorized network. Use ip addr to inspect its interface and ip route get 192.168.10.10 to verify egress/next hop.
2. Run curl --connect-timeout 5 http://192.168.10.10:8080/ and expect YZW-FIELD-LAB HTTP OK. Do not bridge physical LAN for an L3 test.

PASS CRITERIA AND DIAGNOSIS

Physical default route selected: site route is missing/conflicting. Tunnel route selected but service fails: inspect authorization, return path and site firewall. Bridging needs a separate L2 plan to avoid loops.

Finish and restore: Leave the test network and restore manual route/bridge changes while retaining original interfaces.

CHAPTER

11

Troubleshooting

Configure, inspect and accept the interfaces and functions available on this model



YZW300X

11. Troubleshooting

11.1 Locate faults along the service path

FIELD TASK: DIAGNOSE THE FIRST FAILING STAGE

Record failure time and the last normal operation. Test stages in order, change one item and repeat.

FIELD ENTRIES (LAB PLAN, NOT FACTORY DEFAULTS)

UI FIELD	ENTRY	BASIS
Management page unavailable	ipconfig → ping management IP → full URL	Check PC subnet/port role/scheme/management port
Uplink failure	First hop → server IP → hostname → application	Select actual source in Network Tools
MQTT online without data	Mock read → collection log → raw-topic subscription	Prove255 in M1 before real registers
Tunnel IP works but PLC fails	Remote route → 192.168.10.10:8080 → actual PLC port	Inspect client gateway/protection/return path
Unclear write result	Pause retry → inspect logs/reply → independent readback	M2 has no separate write ack; P1 also needs readback

SAVE, TEST AND OBSERVE

1. Export the current configuration before reset. Reproduce once with the relevant chapter command and record input/output/time.
2. For support provide model/topology/actual settings/redacted logs/failure stage/recovery actions and retain controlled originals.

PASS CRITERIA AND DIAGNOSIS

After a fix retest the failed service and one previously working service to detect regressions.

Finish and restore: Undo ineffective changes and return to the last proven backup before continuing.

WHAT TO INCLUDE IN ONE SUPPORT REPORT

1. Model, firmware, fault time, interfaces in use and a simple wiring sketch.
2. Record the first failing test and its result: for example, gateway reachable but DNS failing, no serial reply, a decoding error, or an online tunnel with an unreachable PLC service.
3. Include relevant configuration, runtime status and logs for that time. Hide passwords, private keys and complete SIM identifiers.

For failover issues, record the combination, actual participating interfaces, per-interface probe targets, and IPv4/IPv6 Current and Status. “Ping works” without the tested exit does not identify the path.

Export a current backup before changing, restoring or upgrading. After correction, repeat the same tests and, when useful, complete Site commissioning record. For formal handover also use Service acceptance and handover; retain actual results and the backup location.

WHERE TO REQUEST SUPPORT

Official support: `https://www.edgelor.com/support/`; technical documents: `https://www.edgelor.com/support/documents/`. Published contact email: `zhanghailong@x8link.com`; WhatsApp: `+86 185 7641 5335` (`https://wa.me/8618576415335`). Describe the need through `https://www.edgelor.com/project/` or confirm the service owner through the original purchase-order channel.

Supply the model, firmware, time, failure layer, logs and screenshots listed above, with passwords, private keys, tokens and full SIM identifiers hidden. Website information was checked on 2026-10-31; use the official site for later changes.

11.2 Bilingual terms and section mapping

Chinese and English use matching section numbers and function IDs; consult the contents in the required language.

ENGLISH TERM	中文术语	MEANING IN THIS MANUAL
Requirements confirmation	需求确认	Goal, existing system, constraints and acceptance
Failover	主备切换	Backup exit after primary-path failure
Link Configuration	链路配置	Participating interfaces, keepalive and priority
Load Balance	负载均衡	Distribute traffic by rules
Return route	回程路由	Target path back to the remote source
L2 bridging	二层桥接	Layer-2 transport; check addresses and broadcast
L3 routing	三层路由	IP-subnet forwarding, not automatic broadcast transport
Public IP	公网 IP	Actual port/path reachability is still required
Subnet overlap	地址重叠	Office/sites use overlapping address ranges
Raw-frame forwarding	原始报文透传	Forward raw data without point decoding
Polling/reporting interval	采集周期/上报周期	Reading and publishing are configured separately
Writable command	可写命令	Modbus control addressed by configured command name
Readback verification	读回验证	Later reading compared with field state

ENGLISH TERM	中文术语	MEANING IN THIS MANUAL
Retained message	保留消息	The broker can keep the latest retained message for a topic and deliver it to a new subscription. Control examples use retain=false; this neither clears an existing retained message nor prevents duplicates caused by QoS, session delivery or application retries
Clear threshold	恢复阈值	Alarm-clear condition distinct from trigger
Example/verified test	实施示例/实测	Separate illustration/assumption from actual test

YZW300X

Site commissioning record

Complete with actual results. Deliver credentials through the project’ s secure channel rather than public records.

ITEM	RECORD / RESULT / OWNER
Model / serial / firmware	
Management address / access port	
Supply / SIM / antennas	
Interfaces / serial type / settings	
WAN / cellular / failover order	
Point map / topics / platform	
VPN / routes / remote access	
Backup / flows / date	

Implemented by: _____ Reviewed by: _____ Date: _____

YZW300X

Service acceptance and handover

Complete with actual results. Deliver credentials through the project’ s secure channel rather than public records.

ITEM	RECORD / RESULT / OWNER
Local access and credentials	
Networking and failover recovery	
Acquired values and units	
Reporting topics and updates	
Authorized writes/readback if required	
Remote maintenance/access scope	
LoRa join/application if required	
Backup and handover training	

Implemented by: _____ Reviewed by: _____ Date: _____